



Instruction manual



URC-1625

Universal remote

Introduction

Congratulations on the purchase of the URC-1625. The URC-1625 is a replacement remote control that can be set up to control 2 devices.

- **sat** - Satellite Receiver, Digital Box or Cable Box
- **tv** - Television, Plasma- or LCD TV

The URC-1625 is preprogrammed to control your SKY DigiBox (no set up required). Simply press the "sat" device key and your will obtain SKY DigiBox functionality.

Table of Contents

THE KEYPAD	3
-------------------	----------

SET UP	
SETTING UP THE URC-1625	5
Direct code set up	5
Search Method	6
SET-UP CODES	
TV : Television / LCD / Plasma / Projector / Rear Projector	10
SAT : Satellite Receiver / Set-Top-Box / DVB-S / DVB-T /	
Freeview (UK) / TNT (F) / Digitenne (NL) / SAT/HDD	18
CBL : Cable Converter / Set-Top-Box / DVB-C	22
VAC : Video Accessory like Media Centres / AV Accessories /	
AV Selectors	23

CODE BLINK OUT (To find out which code is currently programmed)	7
QUICK CODE REFERENCE	7
EXTRA FEATURE • Volume Punch-Through	8
TROUBLE-SHOOTING	9
CUSTOMER SERVICE	9

Installing the Batteries

Your URC-1625 needs 2 new "AA/LR6" alkaline batteries.

- 1** Remove the battery cover from the back of your URC-1625.
- 2** Match the batteries to the + and - marks inside the battery case, then insert the batteries.
- 3** Press the battery cover back into place.

The Keypad

- 1**



Power
The POWER key operates the same function it did on the original remote control.
- 3**



sat (LED) - device key for:
Satellite Receiver, Cable Converter, DSS / Video Accessory (e.g. Media Centres) Personal Video Recorder or Hard Disc Recorder.
The red LED (Light Emitting Diode) underneath the sat key will light up every time a key is pressed in sat mode.
As default: when in "sat" mode your URC-1625 will be set to control your SKY digiBox.
- 2**



tv (LED) - device key for:
Television, LCD, Plasma, Projector or Rear Projector.
The red LED (Light Emitting Diode) underneath the tv key will light up every time a key is pressed in tv mode.
- 4**



tv guide
This key gives you the possibility to preview the complete tv listings.
- 5**



box office
This key allows you to access the Box Office programs.
- 6**



 
services
This key provides a range of features such as e.g. parental controls, subtitles and favourites. For your particular device this key may provide menu control.
- 7**



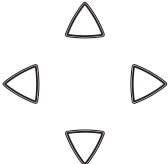
interactive
This key provides a selection of interactive services.
- 8**



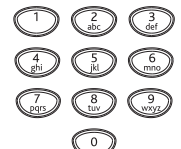
volume +/- Keys
These keys operate in the same way as the keys on your original remote. *In "tv" mode you may obtain Colour + / - when you press and release the magic key and then press Volume + / - .*
- 9**



channel +/- Keys
These keys operate in the same way as the keys on your original remote. *In "tv" mode you may obtain Brightness + / - when you press and release the magic key and then press Channel + / - .*
- 10**



Directional Keys
If available on your original remote, these keys will allow you to navigate through the menu mode of your device.

- 11**  **select**
The select key will confirm your choice in the corresponding menu.
- 12**  **Mute Key**
The Mute key operates the same function it did on your original remote control.
- 13**  **i (info) Key**
This key provides information about the program you're watching.
- 14**  **back up Key**
This key allows you to go back to the previous page.
- 15**  **text**
Puts the television in the Teletext mode.
- 16**  **text off**
Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the text key several times.
- 17**  **16:9**
This key provides you the (16:9) wide screen view function, if available on your original remote).
- 18**  **help**
This key provides help in Sky Guide and is also used for subtitles or audio description.
- 19**  **red, green, yellow, blue**
After pressing the tv key and accessing the text mode, the keys marked red, green, yellow and blue, allow you to access the Fastext functions of your television. If on your original remote control these keys are used for Menu navigation, the ONE FOR ALL Fastext keys may operate in the same way.
- 20**  **Number Keys**
The Number keys (0-9, / -/-) provide functions just like your original remote. If your original remote has an 20 key, this function can be found under the AV key.
- 21**  **magic Key**
The magic key is used to set up your URC-1625.
- 22**  **tv/sat Key**
In tv mode you will obtain the AV / Input function. In sat mode you will obtain the "TV/SAT" or "TV/DTV" function, if available on your original remote.

 
Please note that the key pad description is mainly based on SKY DigiBox functionality. This may differ from your particular device.

Setting up the URC-1625

Before you start, please read these instructions carefully

Direct code set up

Example: To set up the URC-1625 for your television:

- 1  Find the code for your device in the Code list (page **10 - 23**). Codes are listed by device type and brand name. The most popular code is listed first. **Make sure your device is switched on (not on standby).**
- 2  Press the **tv key** on the URC-1625 for the device you wish to Set-Up.
- 3  Press and **hold down** the **magic key** until the red LED underneath the tv key blinks twice (the red LED will blink once then twice). 
- 4  Enter your **(four-digit device code)** using the number keys. The red LED will blink twice.
- 5  Now, aim the URC-1625 at your device and **press POWER If your device switches off, the URC-1625 is ready to operate your device.**
- 6 Turn your device back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-5 using another code listed under your brand.
- 7 **If your device does not respond, follow steps 1 to 5 with each code listed for your brand. If none of the codes listed for your brand operate your device, or if your brand is not listed at all, try the search method described on page 6.**

Important notes:

- If your Set Top Box is not a standard BSkyB DigiBox, please follow the steps above pressing "sat" instead of "tv" during step 2.
- Most Televisions do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- CBL and VAC codes can be set up in "sat" mode.
- Remember to press the correct device key before operating your device.

The Search Method

If your device does not respond to the URC-1625 after you have tried all the codes listed for your brand, try searching for your code. The Search Method allows you to find the code for your device by scanning through all the codes contained in the memory of the URC-1625. The Search Method may also work if your brand is not listed at all.

Example: To search for your TV code:

- 1 Switch your television on (not on standby) and aim your ONE FOR ALL at your TV.
- 2  Press the **tv** key on your URC-1625.
- 3  Press and **hold down** the **magic** key until the red LED underneath the POWER key blinks twice (the red LED will blink once then twice). 
- 4    Press **9 9 1**. The red LED will blink twice.
- 5  Next, press **POWER**.
- 6  Aim the URC-1625 at your Television. Now press **CH+** over and over, until your Television turns off (everytime you press the CH+ key the URC-1625 will send out a POWER signal from the next code contained in the memory). You may have to press this key many times (up to 150 times) so please be patient. If you skip past a code, you can go to the previous code(s) by pressing the CH- key. Remember to keep pointing the URC-1625 at your Television while pressing this key.
- 7  As soon as your television turns off, press the **MAGIC** key to store the code.

Important notes:

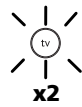
- If your Set Top Box is not a standard BSkyB DigiBox, please follow the steps above pressing "sat" instead of "tv" during step 2.
- Most Televisions do not switch on pressing the POWER key. Please try pressing a "number" key or the "TV-text off" key to switch your TV back on.
- To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during step 2.

Code Blink out

(To find out which code is currently programmed)

Once you have Set-Up your URC-1625, you can blink back your SET-UP CODE for future reference.

Example: To blink out your Television code:

- 1  Press **tv** once.
- 2  Press and **hold down** the **magic key** until the red LED underneath the POWER key blinks twice (the red LED will blink once then twice). 
- 3    Press **9 9 0**. The red LED underneath the POWER key will blink twice.
- 4  For the first digit **of your four-digit** code, press **1** and count all the red blinks. If there are no blinks, the digit is "0".
- 5  For the second digit, press **2** and count all the red blinks. If there are no blinks, the digit is "0".
- 6  For the third digit, press **3** and count all the red blinks. If there are no blinks, the digit is "0".
- 7  For the fourth digit, press **4** and count all the red blinks. If there are no blinks, the digit is "0". **Now you have your four-digit code.**

Important notes:

- If your Set Top Box is not a standard BSkyB DigiBox, please follow the steps above pressing "sat" instead of "tv" during step 2 to blink out the code programmed in "sat" mode.

Quick Code Reference

Device	Code
sat_____	
tv_____	

Volume Punch Through

When controlling your Set-Top-Box (e.g. Sky digiBox) you normally need to press the "tv" button first if you wish to control the volume for your Television. The URC-1625 gives you the possibility to punch through TV-VOLUME without pressing the tv mode key. This is only possible if you have programmed the URC-1625 to also control your Television.

To punch through to TV volume while in "sat" mode:

1.  **Press and hold down the magic key until the red LED underneath the POWER key blinks twice (the red LED will blink once then twice).**
2.  **Press 9 9 3.**
3.  **Then press the tv key and the red light will blink twice.**

To cancel the „Volume Punch Through“:

1.  **Press and hold down the magic key until the red LED underneath the POWER key blinks twice (the red LED will blink once then twice).**
2.  **Press 9 9 3.**
3.  **Press the Volume (+) key and the red light will blink four times.**

Problem & Solution

Problem:	Solution:
Your brand is not listed in the code section?	Try the search method on page 6.
The ONE FOR ALL does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 6.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the programme number exactly as you would on your original remote.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the one for all at your device.
The red LED does not blink when you press a key?	Replace batteries with 2 fresh, new "AA" alkaline batteries.

Customer Service

In the UK

E-mail : ofahelp@uebv.com (*)
 Fax : +31 53 432 9816
 Tel. : 0901-5510010 (£ 0,50 per minute)

In Ireland

E-mail : ofahelp@uebv.com (*)
 Fax : +31 53 432 9816
 Tel. : 016015986

(*) Just send a blank message, you'll get auto-reply.

TV

A.R. Systems	0037	0373	0556
Accent	0037	0556	
Accusound	0860		
Acer	1339		
Acoustic Solutions	1667	1727	1545 1523
	1865	1037	
Adcom	0625		
Admiral	0093	0264	
Advent	1613		
AEA	0037	0556	
AEG	0606	1556	1037 1324
	1667	1163	2239 2197
Aftron	0891		
Agashi	0264		
Aiko	0037	0556	0371 0035
	1681	0880	0361 0191
	0264		
Aim	0037	0556	0753 0208
	0706	0698	0634 0606
	0499		
Airis	1833		
Aiwa	0701	1916	1505
Akai	0361	1326	0208 0371
	0037	0191	0035 0753
	0806	0714	0706 0698
	0715	0556	0480 0264
	0178	0606	1037 0473
	0812	1248	1727 1308
	1865		
Akashi	0860		
Akiba	0037	0556	
Akira	2241	0753	0037
Akito	0037	0556	
Akura	0037	1687	0556 0668
	1667	1645	1770 1585
	0264	0714	1982 1983
	1363	2239	2059
Alba	0037	1037	0556 0714
	0371	0668	0487 0443
	1997	1865	
Alkos	0035		
Allstar	0037	0556	
All-Tel	0865		
Amitech	1849		
Amstrad	0264	0371	0037 0556
	1037	1324	1982
Anam	0037	0556	0650
Anam National	0037	0650	0556
Andersson	1163	1667	1585
Anglo	0264		
Anitech	0264	0037	0556
Ansonic	0037	0556	0668 0292
AOC	0625	1588	2111 2214
Apollo	0473		
AquaVision	1606		
Arc en Ciel	0109		
Arçelik	0714		
Ardem	0714	0486	0633 0037
	0556		
Arena	0037		
Aristona	0556	0037	
Art Mito	1585		
Asberg	0037	0556	
Astra	0037	0556	
Asuka	0264		
ATD	0698		
Atec	1606		
Atlantic	0037	0556	
Audiosonic	0037	0820	0556 1308
	1681	0109	0714 0715
	0264	0486	1983
Audioton	0486	0264	
Audioworld	0698		
AWA	0037	0556	0606 0108
	0264	0178	0698 1681
	2241		
Axxon	0714		
Azuki	2239		
Baier	1324	2239	
Baird	0109	0343	0208 0606
Bang & Olufsen	0565	0620	
Base	0780		
Basic Line	1667	0037	0668 0556
	1037		
Bauer	0698	0706	0264
Baur	0535	0195	0512 0037
	0556	0191	0361 1505
BBK	1523	1645	
Beaumark	0178		
Beko	0714	0486	0035 0715
	0037	0556	2125 0606
	1308	0808	1652
Belson	2241	2032	
Bennett	0556	0037	
BenQ	1562		
Bensten	1326	1413	
Beon	0037	0556	
Berthen	0668	0556	
Bestar	0037	0556	
Bestwell	1326		
Black Diamond	0820	1037	0556 1163
	0753	0587	
Black Strip	0035		
Blaupunkt	0195	0191	0535 0170
Blue Media	1606		
Blue Sky	0037	1324	1037 0714
	1709	1667	0487 0668
	0715	0625	1652 0624
	0556	0808	1363 1916
Boman	1324		
Bork	1363		
BPL	0037	0556	0373
Brandt	0625	0109	0287 0335
	0343	0560	
Brandt			
Electronique	0287	0335	
Brimax	1709		
Brinkmann	0037	0556	0668 0486
Brionvega	0037	0556	
Brother	0264		
Bruns	0486		
BSR	0361		

Bush	1037 1326 1585 0714	Decca	0037 0556 1137
	2125 0037 0668 1652	Deitron	0037 0556
	0371 0264 0361 0487	Denko	0264
	0208 1556 0698 0556	Denver	0037 1324 0556 0606
	1667 1982 1248 1916		0587 1709 2139 2197
	1682 0587 1687 1308	Desmet	0037 0556
	2053 2214 1983 2241	DGM	2239 2059
Cameron	1523 0556	Diamant	0037 0556
Camper	0037 0556 0486	Diamond	0264 0698 0371 0860
Capsonic	0264		0820 0896 1681 0706
Carad	0610 0037 0556 0668	DiBoss	0037 0556
	1037	Digatron	0037 0556
Carena	0037 0556	Digihome	1667
Carrefour	0037 0556	Digiline	0037 0556 0668
Carver	0170	DigiLogic	0037 0556
Cascade	0037 0556	Digital Device	1606
Casio	0037 0556	Digitek	1709
CAT	1682	Digitex	0820
Cathay	0037 1727 0556	Digitor	0037 0556 0888
CCE	0037 0556	Digivision	0361
Celestial	0820	DigiX	0880
cello	1770	DiK	0037 0556
Centrex	0780 0891 0698 1702	Dixi	0037 0556
Centrum	1037	DL	0891 0780 0037 0587
Centurion	0037 0556		0865 1363 1326
CGE	0074	DMTECH	2001
Cinex	1556 1982	Domeos	0668 0037 1037
Clarity	1720	DSE	0888 1556 0820 0698
Clarivox	0037 0556		1682 2241 2032 2098
Clatronic	0037 0371 0714 0264		1326
	0556 0606 1324 1163	Dual	0343 0037 0556 1137
Clayton	1037		1667 1037 2032 2241
Cobolt	0891		1324 1163
Condor	0037 0556 0264	Durabrand	0037 0556 1652 1037
Conia	1687 0754 1645 0820	Dux	0037 0556
	1702 1523 2032	D-Vision	0037 1982 0556
Conrac	0808	DVX	0891
Conrad	0037 0556	Dynatron	0037 0556
Contec	0264 0037 0556	Dyon	2241
Continental		e:max	1324 0606
Edison	0109 0287 0487	Easy Living	1248 1709 1613 1308
Cosmel	0037 0556		2005 1556 1666
CPTec	0625 1363	Ecco	0706 0698
Crosley	0074	Edison-Minerva	0487
Crown	0712 0486 0037 0556	Elbe	0610 0292 0037 0556
	0487 0714 0606 0715		0191 0361
	0373 0208 0653 1037	Electrion	1585
	1652 0668	Elekta	0037 0556 0264
Curtis Mathes	0093	Elfunk	1208 1037
CWR-Tech	1324	ELG	0037 0556
Cyberpix	1667	Elin	0037 0556 0361
Cytronix	1298	Elite	0037 0556
D.Boss	0037	Elonex	1776
Daewoo	0634 1849 2098 0661	Elta	0264
	0499 0624 0037 0556	Emerson	0714 0178 0037 0556
	1137 0880 0865 0698		0371 0361 0624 0486
	0714 0706 2037		0668
Dansai	0037 0556 0264 0035	e-motion	1709
	0208	Enzer	0753 0860
Dantax	0486 1652 1916 0714	Erison	1682
	1037 0606 0715	Erres	0037 0556
Datsura	0373 0208	ESC	0037 0556
Dawa	0037 0556	Etron	0037 0556 0820
Daytek	0698 0706 0264	Eurofeel	0264
Daytron	0037 0556	EuroLine	0037
de Graaf	0208	Euroman	0264 0037 0556
DEC	0860 0891 1326 0896	Europa	0037 0556

WWW.ONEFORALL.COM

Europhon	0037 0556	Goodmans	0634 0715 1037 1248
Evesham	1248 1667 1606		0624 1795 0037 0499
Excel	0037 0556		0556 0714 0668 0264
Excello	1037		0487 0371 0343 0035
Exquisit	0037 0556		0480 0560 0335 0661
Fagor	0037 0556		0880 1308 0587 1667
Family Life	0037 0556		1727 1645 1687 1682
Ferguson	0625 0287 0335 0109		1720 2053 1983 2223
	0560 0037 0556 0035		2393
	0343 0653 0108 0361	Gorenje	1585 1667
	0443 1037 1916 2053	GP	0753
	1865	Gradiente	0653 0170 0037 0556
Fidelity	0512 0037 0556 0371	Graetz	0714 0361 0371 0037
	0264 0361		0556 1163
Finlandia	0208 0361 0287 0343	Granada	0037 0556 0226 0108
Finlux	0037 0556 0714 1585		0208 0473 0335 0560
	1667 0715 0480 1556		0343
	0473 0606 0808 1248	Grandin	1652 0037 0556 0610
Fintec	1982		0714 0715 0668 1037
Firstline	0037 0556 0668 0714		0865 0880
	0624 0208 0361 1037	Grundig	0195 0508 1223 2059
	0808 1363 1163 1308		0535 1687 0191 1582
Fisher	0208 0361		1037 0487 0037 0443
Flint	0037 0556 0610 0264		0706 0556 0587 1916
Force	1667		1308 0178 0343 1667
Formenti	0037 0556 0486		2053 2239 2125 1324
Fortress	0093	Grunkel	1163
Fraba	0037 0556	GVA	1326
Friac	0037 0556 0499 0610	H&B	0808 2001
Frontech	0264	Haaz	0706
Fuchsware	0780	Haier	0698 0264
Fujicom	1709	Halifax	0264
Fujimaro	0865	Hammerstein	0264
Fujitsu	0853 0037 0556 0361	Hanns.G	1613
Fujitsu Siemens	1666 1298 1248 1163	Hannspree	1351 1613 1776 2214
	0808	Hanseatic	0037 0556 0499 0361
Funai	1817 1394 1037 1666		0292 0634 0661 0373
	1595 0668 0264 1505		0714 0808 0486 0625
	0714		2001
Furichi	0860	Hantarex	2197 0037 0556 0865
Futronic	0264 0860 0698	Hantor	0037 0556
Future	0037 0556	Harsper	0865
Gaba	1037 0037	Harwood	0037 0556 0487
Galaxi	0037 0556 0361	Hauppauge	0037 0556
Galaxis	0037 0556	HCM	0037 0556 0264
Garza	0556	Hedzon	0556 0037
GE	0343 0178 0560 0287	Hicon	1298
	0109 0335 0625	Hifivox	0109
GEC	0361 0037 0556	Highline	0264 0037 0556
General	0109 0287	Hikona	1983
General Electric	0343 0287	Hinari	0208 0037 0556 0443
Genesis	0037 0556		0487 0264
Genexxa	0037 0556	Hisawa	0610 0714
Gericom	0865 1606 1298 0880	Hisense	1363 0208 2098 2037
	0808		0698 0891 0860 0780
G-Hanz	1681 1363		2341
Gold	1833 1770	Hitachi	1576 1772 0481 0578
Goldfunk	0668		2207 0108 0744 1585
GoldStar	0037 0178 0556 0361		1037 1687 1667 0634
	0109 0606 0714 0715		0473 0343 2214 1163
Gooding	0487		0499 0480 0037 0556
			0109 0178 1137 0361
		Hitachi Fujian	0108 0037 0556 0860
			0499
		Hitsu	0610
		Höher	0714 1556 0865 1163
		Home Electronics	0606

Horizont	1617	Kingsbrook	1037
Hornophon	0037 0556	Kiton	0556 0037 0668
Hugoson	1666	Kneissel	0037 0610 0499 0556
Humax	1295 1539		0292
Hypersonic	0361	Kobra	1298
Hypson	0037 0556 0714 0715	Kolster	0037 0556
	0264 1037 0668 0486	Konka	0037 0556 0371 0714
Hyundai	0037 0860 2139 0556		0587 0754 0606
	0698 1326 0753 1681	Kontakt	0487
	1770 0264 0888 1037	Korpel	0037 0556
	0865 1606 0706 1556	Kosmos	0037 0556
Iberia	0037 0556	Kotron	0264
ICE	0264 0037 0371 0556	Kuro	0373
Ict	0037 1137 0556	Kyoshu	0264
iDEAL	1556	L&S Electronic	0865 0714
ISonic	1613	LaSAT	0486
Imperial	0037 0074 0508 0556	Lavis	1037 0037
	2197 0361	Lecson	0037 0556
Indiana	0037 0556	Lenco	0037 0556 0587 1037
Ingelen	0487 0610 0714 0361		1983
Inno Hit	1037 0037 0556 1163	Levis Austria	0037 0556
	1585	Leyco	0264 0037 0556
Innovation	0037 0556	LG	2182 1423 1663 0178
Innowert	0865 1298		0037 1305 1859 1842
Inotech	0820		0714 1637 0606 0556
Inspira	1324 1556		0715 1681 0109 0698
Interactive	0037 0556 0512 0361		0361
	0109	Liesenkötter	0037 0556
Interbuy	0037 0264 0512 0556	Lifetec	0037 0668 1037 1137
Interfunk	0037 0556 0512 0361		2001 0512 0556 0714
	0109		0264 1248
Internal	0037 0556 0624 0499	Lodos	1037 1667
Intervision	0037 0371 0486 0487	Loewe	0512 0633 1884 0556
	0264 0556		0292
Irradio	0037 0556 0371 0714	Logik	0698 1865 0264 0371
Isukai	0037 0556		1702 0880 1037 1687
ITS	0037 0371 0264 0556		1645
ITT	2125 0480 0361 0473	Logix	0668
	0208 0610 1523	Luker	1982
ITT Nokia	0361 0473 0480 0208	Luma	0037 0556
	0606 0610	Lumatron	0037 0556 0361 0264
ITV	0037 0264 0556	Lux May	0037 0556
JDV	1982	Luxor	1163 0480 0361 0208
JEC	0035		0473 1037
JGC	1709	LXI	0178
JMB	0037 0499 0634 0556	Madison	0037 0556
	0443	Magnavox	0037 0556 0780 0753
JNC	1702 0896	Magnum	0714 0037 0556 0715
Jocel	0712		1556
JTV	0860	Mandor	0264
Jubilee	0556	Manesth	0037 0556 0264 0035
JVC	0653 1818 2118 0606	Manhattan	0037 0556 0668 1037
	1653 0371 0093 0650	Maqma	1298 1702 1709 1606
Kaisui	0037 0556	Marantz	0037 0556
Kambrook	0264	Mark	0037 0556 0714 0715
Kapsch	0361	Marks and	
Karcher	0037 0556 0610 0264	Spencer	1770
	0714 1556 0606 1982	Mascom	1556 0556 0037
	2125 1308	Mastec	1997
Kathrein	0556 0037 0880	Master's	0499 0037
Kawa	0371	Masuda	0371 0264 0037 0556
Kendo	0610 0037 0556 0512	Matsui	0037 1163 0556 0487
	1585 1037 0486 1667		0443 2007 0371 0035
	1163 1137		0208 0195 0191 0335
Kennex	1037		0714 1037 1916 1666
Keydo	1702		0880 1667
Keymat	1326 1413	Matsushita	0650

Matsuiama	0587	NEI	0037 0556 0371 1037
Maxam	0264	NEO	0754 1324
Maxdorf	0698 0706 0264	Neon	1770
Maxim	1982 1556	Neovia	0865
Mediator	0037 0556	Netsat	0037 0556
Medion	0714 0808 0037 0668	Neufunk	0037 0556 0610 0714
	0556 0512 1137 0698	New Tech	0037 0556 0343
	1037 1248 0880 1916	Nikkai	0037 0556 0264 0035
	1556 1667 2001		1667
Megas	0610	Nikkei	0714
Megatron	0178	Nikko	0178
MEI	1037 0037 0556	Nintaus	0891
Melectronic	0037 0512 0109 0343	Nogamatic	0109
	0480 0287 0556 0624	Nokia	0361 0480 0473 0208
	0634 0361 0191 0195		0606 0610 0109
	0661 0714 1652	Nordmende	0109 0891 0287 0560
Memorex	0178 0650		0343 0195 0037 0556
Memory	1983		0335 1248 0714 2001
Mercury	0037 0698 0264 0556		1413 0443 2007 1585
	0706		1667 1163 1308
Merritt	0361	Normerel	0037 0556
Metz	1533 0746 0447 1163	Novak	0037 0556
	0195 0535 0191 0037	Novatronic	0037 0556
	0556 0587 0668 1037	Novex	1523
MGA	0178 0037 0556	Novita	1585
Micromaxx	0037 0556 0668 1037	Nurnberg	0361
	0808 1324 2001 0714	NU-TEC	0698 0820 0037 0556
Microspot	1614		0706 0264
Microstar	0808	O.K.Line	1037 1324 1556
MicroTEK	0820 0698 0860 0706	Oceanic	0361 0208 0473 0480
	0264		2001
Mikomi	1667 1163 0744 1585	Odeon	0264
Minato	0037 0556	Odys	1795
Minerva	1248 0487 0535 0195	Okano	0037 0556 0264
	0191 0108	OKI	1037 2125
Ministry of Sound	1667	Omega	0264
Minoka	0037 0556	Omni	0780 0891 0698
Mirai	1666 1852 1651	Onei	1667
Mitsai	1556	Onn	1667 1709 2125 0556
Mitsubishi	0108 0512 0093 0178		1770
	0037 0535 0556 0208	Onwa	0371
	1037	Onyx	1709 1770
Mivar	0609 0292	Opera	0037 1308 0556 0714
Moree	0037	Optimus	0650
Morgan's	0037 0556	Optonica	0093
Motorola	0093	Orava	1037
MTC	0512 0361	Orbit	0037 0556
MTlogic	0714 1308	Orion	2007 2032 2005 0037
Multitec	0037 0556 0486 0668		0443 0714 2108 0556
	1037 1556 1982		0264 1916 0880 2001
Multitech	0486 0037 0556 0264	Online	0037 0556
Murphy	2005	Ormond	0668 1037 0037 0556
Musikland	0037 0556	Osaki	0264 0037 0556
Mx Onda	1687 1983 1645	Osio	0037 0556
MyCom	0178	Osume	0037 0556
Myryad	0556 0037	OTIC	1687 1645 1983
NAD	0178 0865 0361	Otto Versand	1505 0093 0512 0037
Naiko	0037 1982 0606 0556		0556 0535 0195 0191
Nakimura	0037 0556		0361 0109 0226 0343
Narita	1982		0373
NAT	0226	Pacific	0037 0556 1137 0714
National	0226		1037 0443 1324
NEC	0170 0587 1367 1775	Palladium	0037 0714 1137 0191
	2461 0037 0556 0499		1505 0556 1982
	0653 0661	Palsonic	0264 0037 0698 0556
Neckermann	0037 0191 1505 0556		1326 1681 1795 2461
	0512	Panache	1585

Panama	0264 0037 0556	Radialva	0109 0037 0556 0287
Panasonic	0650 1636 1650 0226	Radiola	0037 0556
	0361 0853 0037 0556	Radiomarelli	0037 0556
	0108	Radionette	0714
Panavision	0037 0556	RadioShack	0037 0556 0178
Papouw	0037 0556	Radiotone	0037 0556 0668 0264
Pathe Cinema	0292		1037
Pathe Marconi	0109	Rank Arena	0753
Perdio	0037 0556	RCA	0625 0093 0560 0335
Perfekt	0037 0556		0343 0753
Philco	0074 0037 0556	Realistic	0178
Philips	0556 0037 1506 0639	Recor	0037 0556
	1744 2015 1583 1867	Rectiligne	0037 0556
	0605 0343 0361	Red Star	1556
Phocus	1308 0714 1652	Rediffusion	0361
Phoenix	0037 0556 0486	Redstar	0037 0556
Phonola	0037 0556	Reflex	0037 0556 1037 0668
Pilot	0556 0037 0712 0706	Relisys	0865 1298 1585 1645
Pioneer	1260 0760 1457 0170	Reoc	0714 0624 0634
	0679 0037 0556 0343	Revox	0037 0808 0556
	0361 0109 0287 0486	Rex	0264
	0512	RFT	0292 0264 0037 0556
Pionier	0486		0486
Plantron	0037 0556 0264	Ricoh	0037 0556
Playsonic	0714 0037 0715 1652	Rinex	0698 0264 0706
Polar	0037	R-Line	0037 0556
Polaroid	1523 1720 1645 1687	Roadstar	1037 0715 0037 0556
	2125		0714 0668 0264 1916
Policom	0109 0361 0074 0535		1326
Portland	0624	Rodex	0037 0556
Powerpoint	0487 0037 0556 0698	Rolsen	0037 0556 2098 2037
	1770	Rowa	0698 0264 0712 1441
Prandoni-Prince	0361		0706 0587 0037 0556
Premier	0264 0891	Royal	0606
President	0860	Royal Lux	0335
Prima	0264	Rukopir	0556 0037
PrimeView	1606	Saba	0625 0109 0560 0343
Princess	0698 1326		0287 0361 0335 0650
Prinston	1037		0714 1588
Prinz	0361	Sagem	0610 0830 0618
Profex	0361	Saisho	0634 0264
Profilo	1556	Saivod	1982 0037 0556 1163
Profitronic	0037 0556		1556 0668 0712 1037
Proline	0037 1613 1727 1545	Salora	0361 0373 0208 0480
	0556 0625 0634 1037		1556 2125 2197 2001
	2223	Salsa	0335
Prosonic	0037 0556 1865 0880	Samsung	0812 2051 0178 0618
	0371 0668 0714 2139		0587 1312 2103 0093
	2001 1324 1770 2106		1619 1458 0556 2137
	1709 0606 2197 2100		1249 1630 0644 1584
	2125 1545 1849 0715		1235 0037 0264
Protech	0037 0556 0264 0668	Sansui	0037 1709 0556 0706
	0486 1037		0371 0888 0753 0698
Proton	0178		0264 0806 0714 1248
Proview	1687 1645		1681 1556
Provision	0499 0037 0556 1037	Sanyo	0208 1208 0292 2461
	0714 1324		0373 0037 0108 0556
PVision	2001		0486 0170 1037 1667
Pye	0037 0556		1163 1585
Quadro	0753 1326 0556 0037	Save	0037 0556
	1667 1163	SBR	0037 0556
Quasar	0650 0865	Schaub Lorenz	0714 0361 0606 0486
Quelle	0037 1505 0109 0512		1324 1363 2100 1667
	0535 0191 0361 0074		2125 1308
	0668 0556 0195 0264		
	1037		

Schneider	1137 0037 0556 0343	Strong	1163 1667 1037 0037
	0371 0361 0668 1037		0556
	0714 0624 1982 1916	Sungoo	1248 2037
	1617 1324	Sunic Line	0037 0556
Schöntech	1037	Sunkai	0610 0037 0556 0487
Scott	0178 1983		0865
Sears	0178	Sunny	0037 1617
Seaway	0634	Sunstar	0371 0037 0556 0264
Seelver	0556 1037 0037	Sunstech	2001
SEG	1037 0037 1163 0556	Sunwood	0037 0556
	0668 0487 0264 0634	Supersonic	0208 0556 0698 0264
	0624 1667 2125		0037
SEI	1505 0037 0556	SuperTech	0037 0556
Sei-Sinudyne	1505 0037 0556	Supervision	0698 0264
Seitech	1324	Supra	0178 0037
Seleco	0371 0264	Susumu	0335 0287
Sentra	0035	SVA	0698 0264 0208 0706
Serie Dorada	0178	Svasa	0698 0208 0706 0264
Serino	0610 0093 1193	Swedx	1606
Sharp	0093 1193 1659 2214	Swisstec	1613 1614 1606 0880
	1587 1819 0653		0865 1775 1776 1849
Shintosh	0037 0556		2059
Shivaki	0037 0556 0443 0178	Sysline	0037 0556
Show	0698 0264 0706 0037	T+A	0447
Siemens	0191 0535 0195 0037	Tandberg	0109 0361
	0556 0361	Tandy	0093
Siera	0037 0556 0587	Targa	0618
Silva	0037 0556 0361	Tashiko	0170
Silva Schneider	0753 1556 2125	Tatung	1720 0037 1248 1556
Silver	0037 0361 0556 0715		0556 1324
SilverCrest	1037 0037 0556	Tauras	2197
Singer	0806 0698 1556 0037	TCL	1916 0625
	0556 0335	TCM	0714 0808 2001 1308
Sinotec	0606 0698	Teac	0698 1645 2168 0037
Sinudyne	1324 0361 1505 0037		1037 0556 0512 0712
	0556 0606		0668 0706 0264 0624
Sky	0037 1614 0880 0178		0178 0170 0714 1667
	0556 1613 1606 1775		1617 1363 1795 0587
	0661 0865		1770 1709 2032 2241
Skysonic	0753	TEC	0335 0037 0556 0361
Sliding	0865 0880 1324	Tech Line	0037 0556 0668 1163
SLX	0668	Technica	1982
Smaragd	0487	Technics	0650
Soemtron	0865 1298	Technika	2032 1865 2059 1849
Solavox	0361 0037 0556		2106 1667 1983 1585
Sonic	0753 1702		2125 2197
Soniko	0037 0556	TechniSat	0037 0556 2422
Soniq	1298 1702	Technisson	0714 1652
Sonitron	0208	Techno	1585 1037
Sonneclair	0037 0556	Technol Ace	0698 0264 0634
Sonoko	0037 0556 0264	Technosonic	0037 0556 1324 0499
Sonolor	0208 1505 0361		0880 1326 1982 2032
Sontec	0037 0556	Technotrend	1702
Sontech	1983	Techvision	1709 2032
Sony	1505 1825 1651 1625	Techwood	1163 1037 1667
	1751	Tecnimagen	0556
Sound & Vision	0037 0556	Teco	1523
Soundesign	0178	Tedelex	0698 0706 0606 0037
Soundwave	0037 0556 0715		0208 0891 0587 0556
Soyo	1709		0806 1709 1681 0264
Standard	0037 0556 1037 1709	Tek	0820 0037 0698
Starion	1037	TELE System	2125
Starlite	0037 0556 0264	Teleavia	0109 0287 0343
Stern	0264	Telecor	0037 0556
Stevison	1982 1556		
Strato	0037 0556 0264		

Telefunken	0625 1667 0560 0587	United	0714 1983 0037 0715
	0074 0109 0698 0343		0556 1916 1037 0587
	0712 0820 0896 0754		1982 1652 1770
	0780 0287 0891 0335	Unitron	1681
	1681 0753 0706 0037	Universal	0714 0037 0556
	0556 0486 0714 1556	Universum	1037 0037 1163 0668
	1585 1588		0480 0195 0473 1667
Telefusion	0037 0556		0535 0361 0512 0264
Telegazi	0037 0264 0556		0556 0074 1505 0109
Telemeister	0037 0556		0170 0618
Telesonic	0037 0556	Univox	0037 0556
Telestar	0037 0556 1849	V7 Videoseven	0178 0880 1666 0618
Teletech	0037 0556 0668 1037		1651 1505
Televue	0037 0556	Vanguard	0037 0556
Tempest	0037 0556 0264	Venturer	1727 1545 1865
Tennessee	0037 0556	Venus	1326
Tensai	0037 0556 0371 0715	Vestel	1037 1163 1585 1667
	1037		0037 0668 0556
Tesla	0037 1037 0668 0714	Vexa	0037 0556
	1652 0715 1137 0371	Victor	0653
	0753 0556 0610	VideoSystem	0037 0556
Tevion	1248 1298 0037 1645	Vidtech	0178
	0556 1556 0808 1667	ViewSonic	1588 2111
	2032 2100 0865 0668	Vision	0037 0264 0556
	1687 1137 2241 0714	Vistar	0361
	1037 1585	Vistron	1363
Thes	1849	Visual Innovations	2106
Thomson	0625 0560 0343 0287	Vivax	1326 1308 1617 1702
	0109 0335 0037 0556		0037 1709
	1588	Vivo	2032 2100
Thorn	0108 0109 0343 0361	Vortec	0037 0556
	1505 0074 0535 0499	Voxson	0037 0556 0178 2197
	0037 0556 0335 0512	Vue	1236
	0035	Walker	1667
Thorn-Ferguson	0108 0109 0361 0499	Waltham	0287 0037 0556 0668
	0335 0035		0109 1037 0443
Time	1702 1997	Watson	1037 1248 0556 0037
TMK	0178		0668
Tokai	0037 0556 0668 1037	Watt Radio	0486
Tokaido	1037	Wega	0037 0556
Tokyo	0035	Wegavox	0037 0556
Tongtel	0780 0587	Welltech	0714 1652
Top Show	0698 0264 0706	Weltblick	0037 0556
Topline	1037 0668	Weltstar	1037
Toshiba	1508 0508 0035 0714	Weston	0037 0556
	0718 1582 0109 0195	Wharfedale	0037 0896 1613 0891
	0191 0618 1916 0698		0860 0556 0698 1556
	0037 1556 0650 1037		0706 1681 1324 1667
Tosumi	1982 1770		1983
Toyoda	0371 0264	White	
Trakton	0264	Westinghouse	0037 0556 0624
TRANS-continents	0668 1037 0865 0556	Wilson	0556
	0037 0486	Windsor	0668 1037
Transonic	0037 0556 0587 0512	Windy Sam	0556
	0264 0698 0712 1363	Wintel	0714
	1326 0780	World-of-Vision	0880 0865 1298 1606
Triad	0037 0556	XDome	0508
Trio	1687 1248 1645	Xenius	0634
Tristar	0264	Xiron	1983
Triumph	0556 0037	XLogic	0698 0860
TVE	2239	XMS	1441
TVTEXT 95	0556	Xomax	1770
Uher	0037 0556 0486 0480	Xoro	1324
Ultravox	0037 0556	Xrypton	0037 0556
UMC	1606 1775 1614 1849	Yakumo	1613
	2059 2106 2168	Yamaha	0650 1576
Unic Line	0037 0556 0473	Yamishi	0037 0556

WWW.ONEFORALL.COM

Yokan 0037 0556
 Yoko 0037 0556 0264 0373
 YU-MA-TU 0037
 Yüsmart 1613
 Zenith 0624
 Zepto 1585

SAT

@sat 1300
 @Sky 1334
 ABSat 1323 0713
 Acoustic Solutions 1284
 ADB 0887 1473 1492 2152
 2367
 Adcom 0200
 AGK 2139
 Airis 1659 1993
 Akai 0200
 Akura 1626
 Alba 2296 1284 1659 0713
 Allsat 0200
 Alltech 0713
 Allvision 1232 1334
 Alpha 0200
 Amitronica 0713
 Ampere 0396 0132
 Amstrad 0132 0847 1693 0885
 1175 1662 2139 0396
 0713 0742 0501
 Anglo 0713
 Ankaro 0713
 Ansonic 2418
 Apro 1672
 Arcon 0132
 Arena 1736
 Armstrong 0200
 Arnion 1300
 ASA 0299 0740
 Asat 0200
 ASCI 1334 0114
 ASLF 0713
 AssCom 0853
 Aston 1129
 Astra 0713
 Astratec 1743 1929
 Astrell 0885
 Astro 0133 0173 2026 0501
 0658 1099 1100 0200
 Atlanta 2418
 Atlantic Telephone 1333
 Audiola 2418
 Audioline 1429
 Aurora 0879 1333 1433
 Austar 1459 0879 1176
 Avalon 0396
 Avanit 0299 1631
 Axil 1777 1993 1659 2418
 Axis 1111
 Axitronic 1626
 B.net 1672
 B@ytronic 0299 0740

Base 1718
 Belson 2418 2139
 Best Buy 1993 2139 2728
 Beyonwiz 2379
 Black Diamond 1284
 Blaupunkt 0173
 Blue Sky 0713 0885
 Boca 0132 0713 1232 2026
 2308 2458 2533
 Boshmann 1413 1631
 Boston 0132
 Boxer 1458 1957 1692
 Brainwave 0658 1672
 British Sky
 Broadcasting 1175 0847 1662
 Broco 0713
 BSKyB 1175 0847 1662
 Bubu Sat 0713
 Bush 1284 1626 1672 1645
 1743 2376 1291 0742
 1935
 Cambridge 0501
 Canal Digitaal 0853 1499
 Canal Digital 0853 1780 1004 2553
 1334
 Canal Plus 2107 2657
 Canal+ 0853 2107 2657
 CanalSat 2107 2657 0853
 CanalSatellite 0853 2107 2657
 CDV 1993
 CGV 1413 1567 2034
 Challenger 1956
 Cherokee 1323
 Chess 1334 0114 0713 2026
 1626
 Chili 1718
 CityCom 1176 1232 0299 1777
 0658
 Clarke-Tech 1806
 Clatronic 1413
 Clayton 1626
 Clemens Kamphus 0396
 Cobra 0396
 Colombia 0132
 Columbia 0132
 Com Hem 1176 1915 2357
 Comag 1232 1413 2026 0132
 2101 2308 2533 2458
 Comsat 1413
 Comwell 1956
 Connexions 0396
 Conrad 0573 0501 0132
 Coship 1672
 Crown 1284
 CS 1631
 Cyfra+ 1076 2593 1409 0853
 Cyfrowy Polsat 0253 0853
 Cyrus 0200
 Daeryung 0396
 Daewoo 0713 1743 1111
 DAK 1993
 Dantax 1626
 D-box 1114 0723
 Denver 2418
 DGTEC 1631 1718
 Digenius 0299

Digi 2026
 Digi Raum
 Electronics 1176
 DigiAlly 1334
 DigiFusion 1645 1743 1929
 DigiHome 1284 2034 1935
 DigiLogic 2034 2241
 DigiMax 2273
 DigiQuest 1300 1631
 DigiSat 1232
 Digital 2308 2273
 Digital Vision 1929
 Digital+ 0853
 DigiAlb 1232
 DigitalBox 1886 1631 1100
 DigiTel+ 1659
 DigiTrade 1659
 DigiTurk 1076 2097
 Dilog 1780 1957
 DiPro 1473
 Distratel 0885
 Distrisat 0200
 DNT 0200 0396
 Doro 1672
 DRE 1176
 Dream Multimedia 1237 1652 1923
 DSE 2280 2418
 DStv 0879
 Dual 2034
 Durabrand 1284 2241 2034
 DVX 1993
 Echostar 1200 0853 0396 0713
 1323 1473 1409
 Eco-Star 1413
 Edison 1631 2306 2712
 Einhell 0132 0713 0501
 Elap 0713 1611 1129 1567
 1413
 Elbe 2418
 Electron 1956
 Elless 0740
 Elsat 0713
 Elta 0200 1659
 Emtec 1659
 Energy Sistem 1631
 Engel 1777 0713
 Eurieult 0885
 Europa 0501 0200
 Europhon 0299 0132 0713 1334
 Eurosat 1413
 Eurosat 1567 1886
 Eurosky 0132 0299 0114 0501
 0740
 Euro-Vox 0744
 Eutelsat 0713
 Eutra 0740
 Evesham 2034
 F&U 2139
 Fagor 1611
 Fenner 0713
 Ferguson 1291 1743 1929
 Fidelity 0501
 Finepass 1780
 Finlux 1626 0573 1232
 FinnSat 0740
 Flair Mate 0713

FMD 1413 0114
 FoneStar 1777
 Foxtel 1356 0879 1176
 FPE 1993
 Free Wave
 Technology 1743
 Freecom 0501 0173
 Freesat 2376 1692
 FTEmaximal 0713 1886
 Fuba 0396 0173 0573 0299
 Galaxis 1111 1176 0853 0879
 Galaxy 1956
 General Satellite 1176
 Get 1004
 Globalteq 2145
 Globo 2273 1626 1429 1334
 2026 0740
 GOD Digital 0200
 Gold Box 0853
 Gold Vision 1631
 GoldMaster 1334 1722
 Goodmans 1284 2034 1291 2376
 Gradiente 0887
 Gran Prix 0740
 Grandin 1626
 Grocos 1409
 Grundig 0173 0847 2367 1291
 1284 2376 0879 0885
 0853 0501 1780 2034
 Haier 2418
 Hallo 1626
 Hama 1567
 Handan 1780 1957
 Hanseatic 1099 1100
 Hänsel & Gretel 0132
 Hauppauge 1672
 HB 1736
 HE@D 2183
 Hills 1232
 Hirschmann 0396 1886 1111 2026
 0173 0573 0299 1232
 0501 0740
 Hitachi 1284 2034
 HNE 0742 1232 0132
 Homecast 1680 1736
 Houston 0396
 Humax 0215 1176 1232 1631
 1808 1427 1915 2144
 1882 1788 1675 1743
 2357 2443
 Huth 0132
 i-Box 1652
 i-CAN 2367
 ID Digital 1176
 ID Sat 2145 1631
 ILLUSION sat 1631
 Image 1993
 Imperial 1429 1334 1099 1100
 1197 1195 1351 0200
 1672 1631
 iNETBOX 1652
 Ingelen 0396
 Inno Hit 1626
 International 0132
 Interstar 2200
 Inves 1993 1743

inVion 2418
 iotronic 1413 0132
 ITT 2418
 ITT Nokia 0573 0723
 Jaeger 1334
 KabelBW 1882 1915 1195 1197
 2176 1176
 Kamm 0713
 Kaon 1004 1300
 KaTelco 1111
 Kathrein 1561 0707 0249 0658
 1567 1717 2569 0114
 0173 0200 0713 0742
 1323
 Kenwood 0853
 Key West 0132
 Kiton 0114
 Kocmoc TB 1333
 Kongque 1300
 König 1631
 Koscom 1956
 Kreiling 0658 0249 0114 1626
 Kreismeyer 0173
 K-SAT 0713
 Kyostar 0132
 L&S Electronic 0132 1334
 LaSAT 0132 0299 0740 0173
 Lauson 2531
 Legend 1718
 Legend Digital 1718
 Leiko 1626
 Lemon 1334
 Lenco 0713
 Lenox 1611
 Lenson 0501
 Lexus 0200
 LG 1414
 Lifesat 0132 0299 0713
 Linsar 1284
 Listo 1626
 Lodos 1284
 Logik 1284 2441
 Lorenzen 0299 0742 2026 0132
 Luxor 1935 0573 0501
 Macab 0853
 Manata 0713 0132
 Manhattan 1300
 Maplin 2034
 Marantz 0200
 Marks and
 Spencer 2441
 Maspro 0713 0173
 Matsui 1626 0173 1743 1929
 Maximum 1334 2552
 Mediabox 0853
 Mediacom 1206
 MediaSat 0501 0853 2107
 Medion 1232 0299 0713 0132
 1626 1334 0740 2026
 Medison 0713
 Mega 0200
 Megasat 1886 1631
 Metronic 1659 0713 0885 0132
 2418 1993 1413 1672
 Metz 0173
 MiCO 1993
 Micro 0501 0713
20

Micro electronic 0713 2308
 Micro Technology 0713
 Micromax 0299
 Microstar 0299
 Microtec 0713
 Morgan's 0132 0713 0200 1232
 1409
 Motorola 0856 1473
 Multichoice 0879 1333 1433 1959
 1960 2059 2060
 Mx Onda 1659
 Myryad 0200
 Mysat 0713
 MySky 1356 1693
 N 2152
 NanoXX 2204
 Neom 1993
 Neotion 1334
 Netgem 1322
 Neuf TV 1322
 Neuhaus 0501 0713
 Neuling 1232 0132 2458 2026
 Neusat 0713
 Nevir 1659
 Newton 0396
 Next 2200
 NextWave 1956
 Nikko 0713 0723 0200
 Noda Electronic 0885
 Nokia 1114 1023 0723 0853
 0573
 Noos 0853
 Nordmende 1611
 Nova 0879 1959 1960 2059
 2060
 NPG 1631
 Numericable 0853 1409
 OctalTV 1429
 OKI 1567
 Omni 1993
 Onn 1284 2034
 Openbox 1956
 Opensat 1956
 Opentel 1232
 Optex 0114 0713 1611 1626
 1413
 Opticum 2273
 Optus 0879 0853 1356
 Orbis 1334 1232
 Orbit 0215
 Orbitech 1195 1099 1100 1197
 0200 0501 0114 1351
 P/Sat 1232
 Pace 1175 1682 1693 1717
 2097 2593 2657 1356
 0847 0887 1662 2059
 1323 2060 0200 0853
 Pacific 1284
 Packard Bell 1111
 Palcom 0299 1409
 Palladium 0501 0396
 Palsat 0501
 Panasat 0879
 Panasonic 0847 1304
 Panda 0173
 Patriot 0132
 peeKTON 1993 2418

WWW.ONEFORALL.COM

Philips	0099 2107 2176 2593	Sharp	1935 2034
	1076 1114 1499 0853	Sherwood	1611 1409
	0133 0200 1672 1743	Siemens	0173 1626 1657 1334
	0173 1429		1429 2418 1672
Phoenix	2418 1956	Sigmathek	2139 2418
Phonotrend	1200	SignalMAX	1956
Pino	1334	Silva	0299
Pioneer	0853	SilverCrest	2026 2101 2308 2458
Planet	0396	Skantin	0713
PMB	1611 0713	SKR	0713
Polytron	0396	SKT	0132
Preisner	0132 0396	Sky	0856 1175 0887 1693
Premiere	1114 0723 1111 1176		0847 1662
	1195 1100 0249 0658	SKY Deutschland	1114 0723 1111 1176
	1717 2176 1675		1195 1100 0249 0658
Premium	1736		1717 2176 1675
Primacom	1111	SKY Italia	1693
Pro Basic	2205 0853 2531	SKY+	1175 1662
Proline	1284 1659	Skymaster	1409 1611 0713 1200
Prosonic	0742		1334 1567 2205 1545
Quadral	1323		2409 2728
Quelle	0742 0299	Skymax	0200 1413
Radiola	0200	Skypex	0299 0740
Radix	0396	skyplus	1232 2026 1334 1175
RCA	1291		0740
RFT	0200	SkySat	0713 0501 0114
RiksTV	2367 1692	SL	2026 0132 0742 0740
Roadstar	0713 0853		1672
Rollmaster	1413	SM Electronic	0713 1200
Rover	0713	Smart	0132 0299 0396 1232
Rownsonic	1567		0713 1413 1631 2285
SAB	1956 1300 1631	Sogo	2139
Saba	2205 0885	Soniq	1567
Sagem	1114 1690 2107 2553	Sony	0847 1558 0639 0853
	1692 1004	SR	0132
Saivod	2418	Star Sat	0132
Salora	1232	Star View	2145
Samsung	2176 1662 1458 1206	Starcom	0114
	0853 0253 1175	Starland	0713
Sansui	1545	Stream System	1300
Sanyo	1626	Strong	1409 0713 1806 2235
SAT	0501		1626 2418 0853 1284
Sat Control	1300		1300 0879 1473
Sat Partner	0501	Sunny	1300
Sat Team	0713	Sunsat	0713
SAT+	1409	Sunstar	0132
SatCatcher	1956	Sunstech	1993 2139
Satec	0713	Supratech	1413 2139
Satlink	2273 1567	Systec	0132 1334
Satplus	1100	Sytech	2139 2418
SatyCon	1631	S-ZWO	1722
Schaub Lorenz	2418	TBoston	2418 1659 2139
Schneider	1206	Teac	1322 1957
Schwaiger	2533 1334 1631 2458	Tecatel	1200
	0740 0885 1111 1429	Technika	2034 2441 1284 1672
	1672 2308 0132	TechniSat	1195 1197 1100 1099
SCS	0299		0501 1351 1322 0200
Sedea			0114 0396
Electronique	0132 1626 0114	Technosat	1206
Seeltech	1993	Technosonic	1672
Seemann	0396	Technotrend	1429 1672
SEG	1626 0742 0114 1993	Technowelt	0885 0132
	1659 1284	Techwood	0114 1284 1626 2034
Septimo	0885		1935
Servimat	1611	TELE System	1611 1409 0396
ServiSat	0713	Telecom	0713
Shark	1631	Teleka	0396 0501

WWW.ONEFORALL.COM

Telestar	0501 1099 1100 0114
	0200 1429 1334 1351
	1626 1672 1195 1197
	2540
Teletech	0114
Televes	0501 0132 1300 1334
	1409
Telewire	1232
TelSKY	2540
Tesla	1626
Tevion	1334 1672 0713 1409
	1567 2205
Thomson	0847 1291 2107 2176
	1175 0853 1662 1459
	1935 0713
Tiny	1672
Tioko	0132
Titan	1886 2205
Tividi	1429 1736
TNT SAT	2235 1692
Tokai	0200
Tonna	1611 0501 0713
Topfield	1986 1545 1783 1722
	1206 1824
	1284
Toshiba	0501
Triasat	0501 0200 0396 0713
Triax	0853 0114 1291 0132
	1099 1626 1611 1413
	2101 1886
Tricolor TV	1176
TT-micro	1429
Turnsat	0713
TVonics	2441
Twiner	0132 0713 1611
UEC	0879 1356
Umax	1993
Unisat	0200 0132
Unitymedia	1429 1882 1176 1195
	1197
Univers	1886
Universum	0173 0299 0742 0114
	1099 0740
Van Hunen	0299
Vantage	2204 2297 1458
Vaova	1993
Variosat	0173
VEA	2418
Ventana	0200
Vestel	0742 1284 0114
VH Sat	0299
Viasat	1323 1023 1682 1195
	2235
Viola Digital	1672
Vision	1626 1886
Visiosat	1718 1413 0713 0114
	1129
Vitecom	1413
Volcasat	2418
Voo	0853
Wavelength	1232 1413
Welho	2357
Wetekom	0501
Wharfedale	1284 2034 0200 1935
Wisi	0173 0396 0299 0501
	0132 0740 1232 1986
Worldsat	1473 0114

Woxter	2418 2139
XSat	0713 0847 1323
Xtreme	1300
Yakumo	1413
Yamada	1718 1993 2139
YES	0887
Yukai	1659
ZapMaster	0740
Zehnder	1777 1334 1232 1413
	0114 0742 1631 2388
Zenith	0856
Zeta Technology	0200
Ziggo	1657 1499 2443
Zinwell	1176 2280

CBL

@Home	1666 2015 0660
ADB	2343
Akado	2339 2043
Altibox	2030
Amino	1615
BT Vision	2294
Cablecom	1582
Cisco	2589
ClubInternet	2132
Com Hem	0660 1666 2015
Comcor	2339
freebox	1976 1482
GuestComm	2030
Humax	0660 1813 2043 2339
	1885 1983 2165 1981
Kabel	
Deutschland	1981 1983 2165
KabelBW	1813 2174 1981 1983
	1060
Kiss	2132
Kreatel	2030
Motorola	2030
NTL	1060 1068
Ono	1068
Optus	1060
Orange	2407
Pace	1068 2620 1060
Philips	1619 2174 1582
Premiere	2620 2174
Sagem	2407
Samsung	2407 2015 2174 2368
	1060 1666 1987 2610
Scientific Atlanta	2132
Sky	2620
SKY Deutschland	2620
Stofa	2015
Telewest	1068 1060 1987
TelstraClear	2343
T-Home	2132
Thomson	1582 1981 2174 1983
TP	2407
Unitymedia	2610
UPC	1582
Viasat	2030
Viken Fibernett	2030

Virgin Media	1060	1068	1987
YouSee	2368		
Ziggo	2015	0660	2589 1666

VAC

A.C.Ryan	2709	2535
Apple	2615	
Argosy	2270	
ATMT	2270	
Bang & Olufsen	0875	
Best Buy	2522	
chiliGREEN	2535	2628
CnM	2535	
Dane-Elec	2628	
Digitech	2260	
DVICO	1921	2153
EGreat	2260	
Elonex	1272	
Eminent	2260	
Emtec	2535	2709
EverTech	2535	
Fantec	2535	2522 2709
Freecom	1843	
Fujitsu Siemens	1272	
Galaxy	2238	
Hauppauge	1408	
Hewlett Packard	1272	
iMON	2037	
INOi	2270	
Iomega	2270	2238
ISTAR	2260	
LaCie	2238	2626
me2	2535	2270
Memup	2270	2522
Microsoft	1272	
Netgear	2036	
Olidata	2270	
Packard Bell	2238	
peekTON	2116	
Pinnacle Systems	1447	
Popcorn Hour	2260	
RaidSonic	2238	
Ricavision	1272	
Sitecom	1843	
Sony	1733	
SoundGraph	2037	
Sumvision	2628	
Thermaltake	2037	
Trust	1272	
TViX	2153	
Via Technologies	1272	
Western Digital	2558	
Woxter	2628	2535
XBox	1272	

English

UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. To obtain warranty service during the warranty period, please call us at the number mentioned on the Customer Service page. Please notice that we need your purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, please remind that you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights.

**Universal Electronics BV
Europe & International
P.O. Box 3332
7500 DH, Enschede
The Netherlands**



**URC-1625
708091**

RDN-1101110