

**MediaPack™
Series**

Analog VoIP Gateways (MP-102/104/108/124)

MP-1xx SIP User's Manual

Version 4.4

Document #: LTRT-65404



Notice

This document describes the AudioCodes MediaPack Series MP-1xx Voice over IP (VoIP) gateways. Information contained in this document is believed to be accurate and reliable at the time of printing. However, due to ongoing product improvements and revisions, AudioCodes cannot guarantee accuracy of printed material after the Date Published nor can it accept responsibility for errors or omissions. Updates to this document and other documents can be viewed by registered Technical Support customers at www.audiocodes.com under Support / Product Documentation.

© Copyright 2005 AudioCodes Ltd. All rights reserved.

This document is subject to change without notice.

Date Published: Mar-01-2005

Date Printed: Mar-16-2005

Table of Contents

1	Overview	15
1.1	Introduction	15
1.2	Gateway Description.....	15
1.3	SIP Overview	17
1.4	MP-1xx Features	18
1.4.1	General Features	18
1.4.2	Hardware Features	18
1.4.3	SIP Features	18
2	MP-1xx Physical Description.....	21
2.1	MP-1xx Front Panel.....	21
2.1.1	MP-1xx Front Panel Buttons	21
2.1.2	MP-1xx Front Panel LEDs	22
2.2	MP-1xx Rear Panel.....	22
2.2.1	MP-10x Rear Panel.....	22
2.2.2	MP-124 Rear Panel	23
3	Installing the MP-1xx.....	25
3.1	Unpacking.....	25
3.2	Package Contents	25
3.3	Mounting the MP-1xx.....	26
3.3.1	Mounting the MP-1xx on a Desktop.....	26
3.3.2	Installing the MP-10x in a 19-inch Rack	26
3.3.3	Installing the MP-124 in a 19-inch Rack	27
3.3.4	Mounting the MP-10x on a Wall.....	28
3.4	Cabling the MP-1xx	29
3.4.1	Connecting the MP-1xx RS-232 Port to Your PC	32
3.4.1.1	Configuring the Serial Connection	32
3.4.2	Cabling the Lifeline Phone	32
4	Getting Started.....	35
4.1	Assigning the MP-1xx IP Address	35
4.1.1	Assigning an IP Address Using HTTP	35
4.1.2	Assigning an IP Address Using BootP.....	36
4.2	Restoring Networking Parameters to their Initial State.....	36
4.3	Configure the MP-1xx <i>Basic</i> Parameters	37
5	Configuring the MP-1xx	39
5.1	Configuration Concepts	39
5.2	Overview of the Embedded Web Server	39
5.3	Computer Requirements.....	39
5.4	Password Control	40
5.4.1	Embedded Web Server Username & Password.....	40
5.5	Configuring the Web Interface via the <i>ini</i> File.....	40
5.5.1	Limiting the Embedded Web Server to Read-Only Mode.....	40
5.5.2	Disabling the Embedded Web Server.....	40
5.6	Accessing the Embedded Web Server.....	41
5.6.1	Using Internet Explorer to Access the Embedded Web Server	41
5.7	Getting Acquainted with the Web Interface	42
5.7.1	Main Menu Bar.....	42
5.7.2	Saving Changes.....	43
5.7.3	Entering Phone Numbers in Various Tables.....	43
5.8	Protocol Management.....	44
5.8.1	Protocol Definition Parameters	44
5.8.1.1	General Parameters	44
5.8.1.2	Proxy & Registration Parameters	48
5.8.1.3	Coders	53
5.8.1.4	DTMF & Dialing Parameters.....	55

5.8.2	Configuring the Advanced Parameters	58
5.8.2.1	General Parameters	58
5.8.2.2	Supplementary Services	63
5.8.2.3	Keypad Features	66
5.8.3	Configuring the Number Manipulation Tables	68
5.8.3.1	Dialing Plan Notation	71
5.8.4	Configuring the Routing Tables	73
5.8.4.1	General Parameters	73
5.8.4.2	Tel to IP Routing Table	75
5.8.4.3	IP to Hunt Group Routing	78
5.8.4.4	Internal DNS Table	80
5.8.4.5	Reasons for Alternative Routing	81
5.8.5	Configuring the Profile Definitions	83
5.8.5.1	Coder Group Settings	83
5.8.5.2	Tel Profile Settings	85
5.8.5.3	IP Profile Settings	87
5.8.6	Configuring the Endpoint Phone Numbers	89
5.8.7	Configuring the Hunt Group Settings	91
5.8.8	Configuring the Endpoint Settings	93
5.8.8.1	Authentication	93
5.8.8.2	Automatic Dialing	94
5.8.8.3	Caller ID	95
5.8.8.4	Call Forward	96
5.8.8.5	Caller ID Permissions	98
5.8.9	Configuring the FXO Parameters	99
5.8.10	Protocol Management <i>ini</i> File Parameters	101
5.9	Advanced Configuration	103
5.9.1	Configuring the Network Settings	103
5.9.1.1	Configuring the SNMP Managers Table	107
5.9.1.2	Multiple Routers Support	112
5.9.1.3	Simple Network Time Protocol Support	112
5.9.2	Configuring the Channel Settings	113
5.9.2.1	Dynamic Jitter Buffer Operation	120
5.9.3	Restoring and Backing up the Gateway Configuration	121
5.9.4	Regional Settings	122
5.9.5	Changing the MP-1xx Username and Password	123
5.10	Status & Diagnostics	124
5.10.1	Gateway Statistics	124
5.10.1.1	IP Connectivity	124
5.10.1.2	Call Counters	125
5.10.2	Monitoring the MP-1xx Channels	127
5.10.3	Activating the Internal Syslog Viewer	129
5.10.4	System Information	130
5.11	Software Update	131
5.11.1	Software Upgrade Wizard	131
5.11.2	Auxiliary Files	137
5.11.2.1	Loading the Auxiliary Files via the <i>ini</i> File	138
5.12	Save Configuration	139
5.13	Resetting the MP-1xx	140
6	<i>ini</i> File Configuration of the MP-1xx	141
6.1	Secured <i>ini</i> File	141
6.2	Modifying an <i>ini</i> File	141
6.3	The <i>ini</i> File Structure	142
6.3.1	The <i>ini</i> File Structure Rules	142
6.3.2	The <i>ini</i> File Example	142
7	Configuration Files	143
7.1	Configuring the Call Progress Tones and Distinctive Ringing File	143
7.1.1	Format of the Call Progress Tones Section in the <i>ini</i> File	143
7.1.2	Format of the Distinctive Ringing Section in the <i>ini</i> File	145
7.1.2.1	Examples of Various Ringing Signals	146

7.2	Prerecorded Tones (PRT) File	147
7.2.1	PRT File Format.....	147
7.3	The Coefficient Configuration File	148
8	Gateway Capabilities Description	149
8.1	Proxy or Registrar Registration Example	149
8.2	Configuring the DTMF Transport Types.....	150
8.3	Configuring the Gateway's Alternative Routing (based on Connectivity and QoS).....	152
8.3.1	Alternative Routing Mechanism	152
8.3.2	Determining the Availability of Destination IP Addresses	152
8.3.3	Relevant Parameters	153
8.4	Working with Supplementary Services	153
8.4.1	Call Hold and Retrieve	153
8.4.1.1	Initiating Hold/Retrieve.....	153
8.4.1.2	Receiving Hold / Retrieve	154
8.4.2	Consultation / Alternate.....	154
8.4.3	Call Transfer.....	154
8.4.4	Call Forward.....	155
8.4.5	Call Waiting	155
8.4.6	Message Waiting Indication	156
8.5	Call Termination on MP-1xx/FXO	156
8.6	Mapping PSTN Release Cause to SIP Response	157
8.7	Call Detail Report.....	158
8.8	Metering Tones Relay.....	159
8.9	Configuration Examples.....	160
8.9.1	Establishing a Call between Two Gateways.....	160
8.9.2	SIP Call Flow.....	161
8.9.3	SIP Authentication Example	163
8.9.4	Remote IP Extension between FXO and FXS	165
8.9.4.1	Dialing from Remote Extension	166
8.9.4.2	Dialing from other PBX line, or from PSTN	166
8.9.4.3	MP-108/FXS Configuration (using the Embedded Web Server).....	167
8.9.4.4	MP-108/FXO Configuration (using the Embedded Web Server).....	168
9	Diagnostics	169
9.1	MP-1xx Self-Testing	169
9.1.1	Rapid Self-Test Mode	169
9.1.2	Detailed Self-Test Mode	169
9.2	Troubleshooting the MP-1xx via the RS-232 Port	170
9.2.1	Viewing the Gateway's Information	170
9.2.2	Changing the Networking Parameters	170
9.3	Syslog Support	171
9.3.1	Syslog Servers.....	171
9.3.2	Operation	171
9.3.2.1	Sending the Syslog Messages	171
9.3.2.2	Setting the Syslog Server.....	171
9.3.2.3	The <i>ini</i> File Example for Syslog	172
9.4	Solutions to Possible Problems	172
9.4.1	General	172
10	BootP/DHCP Support	173
10.1	Startup Process	173
10.2	DHCP Support.....	175
10.3	BootP Support	176
10.3.1	Upgrading the MP-1xx	176
10.3.2	Vendor Specific Information Field.....	176
11	SNMP-Based Management	179
11.1	About SNMP	179
11.1.1	SNMP Message Standard	179
11.1.2	SNMP MIB Objects.....	180

11.1.3	SNMP Extensibility Feature	180
11.2	Carrier Grade Alarm System	181
11.2.1	Active Alarm Table.....	181
11.2.2	Alarm History.....	181
11.3	Cold Start Trap	181
11.4	Third-Party Performance Monitoring Measurements	182
11.5	Supported MIBs.....	182
11.6	SNMP Interface Details	185
11.6.1	SNMP Community Names	185
11.6.1.1	Configuration of Community Strings via the <i>ini</i> File.....	185
11.6.1.2	Configuration of Community Strings via SNMP	185
11.6.2	Trusted Managers	186
11.6.2.1	Configuration of Trusted Managers via <i>ini</i> File.....	186
11.6.2.2	Configuration of Trusted Managers via SNMP	186
11.6.3	SNMP Ports	187
11.6.4	Multiple SNMP Trap Destinations.....	188
11.6.4.1	Configuration via the <i>ini</i> File	188
11.6.4.2	Configuration via SNMP	189
11.7	SNMP Manager Backward Compatibility.....	190
11.8	AudioCodes' Element Management System.....	190
12	Selected Technical Specifications	191
Appendix A	MP-1xx SIP Software Kit.....	195
Appendix B	The BootP/TFTP Configuration Utility.....	197
B.1	When to Use the BootP/TFTP	197
B.2	An Overview of BootP.....	197
B.3	Key Features	197
B.4	Specifications.....	198
B.5	Installation.....	198
B.6	Loading the <i>cmp</i> File, Booting the Device.....	198
B.7	BootP/TFTP Application User Interface.....	199
B.8	Function Buttons on the Main Screen	199
B.9	Log Window	200
B.10	Setting the Preferences	201
B.10.1	BootP Preferences.....	201
B.10.2	TFTP Preferences.....	202
B.11	Configuring the BootP Clients	203
B.11.1	Adding Clients.....	203
B.11.2	Deleting Clients.....	204
B.11.3	Editing Client Parameters	204
B.11.4	Testing the Client	204
B.11.5	Setting Client Parameters.....	205
B.11.6	Using Command Line Switches.....	206
B.12	Managing Client Templates	207
Appendix C	RTP/RTCP Payload Types and Port Allocation	209
C.1	Packet Types Defined in RFC 1890	209
C.2	Defined Payload Types.....	209
C.3	Default RTP/RTCP/T.38 Port Allocation.....	210
Appendix D	Fax & Modem Transport Modes	211
D.1	Fax/Modem Settings.....	211
D.2	Configuring Fax Relay Mode	211
D.3	Configuring Fax/Modem Bypass Mode	211
D.4	Supporting V.34 Faxes	212
D.4.1	Using Bypass Mechanism for V.34 Fax Transmission	212
D.4.2	Using Relay mode for both T.30 and V.34 faxes.....	212
Appendix E	Customizing the MP-1xx Web Interface	213
E.1	Replacing the Main Corporate Logo.....	213

E.1.1	Replacing the Main Corporate Logo with an Image File.....	213
E.1.2	Replacing the Main Corporate Logo with a Text String	215
E.2	Replacing the Background Image File.....	215
E.3	Customizing the Product Name	216
E.4	Modifying <i>ini</i> File Parameters via the Web AdminPage	217
Appendix F	Accessory Programs and Tools	219
F.1	TrunkPack Downloadable Conversion Utility.....	219
F.1.1	Converting a CPT <i>ini</i> File to a Binary <i>dat</i> File.....	220
F.1.2	Encoding / Decoding an <i>ini</i> File	221
F.1.3	Creating a Loadable Prerecorded Tones File.....	222
F.2	Call Progress Tones Wizard	224
F.2.1	About the Call Progress Tones Wizard.....	224
F.2.2	Installation	224
F.2.3	Initial Settings.....	224
F.2.4	Recording Screen – Automatic Mode	225
F.2.5	Recording Screen – Manual Mode	226
F.2.6	The Call Progress Tones <i>ini</i> File.....	227
Appendix G	SNMP Traps.....	229
G.1	Alarm Traps	229
G.1.1	Component: System#0	229
G.1.2	Component: AlarmManager#0.....	231
G.1.3	Component: EthernetLink#0	231
G.1.4	Other Traps	232
G.1.5	Trap Varbinds.....	232
Appendix H	Regulatory Information	233
H.1	MP-11x FXS	233
H.2	MP-11x FXO	234
H.3	MP-124	236

List of Figures

Figure 1-1: MP-124 Gateway Front View	15
Figure 1-2: MP-108 Gateway Front View	16
Figure 1-3: MP-104 Gateway Front View	16
Figure 1-4: MP-102 Gateway Front View	16
Figure 1-5: Typical MP-1xx VoIP Application	17
Figure 2-1: MP-108 Front Panel	21
Figure 2-2: MP-124 Front Panel	21
Figure 2-3: MP-104/FXS Rear Panel Connectors	23
Figure 2-4: MP-124 (FXS) Rear Panel Connectors	23
Figure 3-1: Desktop or Shelf Mounting	26
Figure 3-2: MP-108 with Brackets for Rack Installation	27
Figure 3-3: MP-124 with Brackets for Rack Installation	28
Figure 3-4: MP-102 Wall Mount	28
Figure 3-5: RJ-45 Ethernet Connector Pinout	30
Figure 3-6: RJ-11 Phone Connector Pinout	30
Figure 3-7: 50-pin Telco Connector (MP-124/FXS only)	30
Figure 3-8: MP-124 in a 19-inch Rack with MDF Adaptor	30
Figure 3-9: DC Power Supply on the MP-124	31
Figure 3-10: RS-232 Cable Wiring	32
Figure 3-11: Lifeline Splitter Pinout & RJ-11 Connector for MP-10x/FXS	32
Figure 3-12: MP-104/FXS Lifeline Setup	33
Figure 4-1: Quick Setup Screen	37
Figure 5-1: Embedded Web Server Login Screen	41
Figure 5-2: MP-1xx Web Interface	42
Figure 5-3: Protocol Definition, General Parameters Screen	44
Figure 5-4: Proxy & Registration Parameters Screen	48
Figure 5-5: Coders Screen	53
Figure 5-6: DTMF & Dialing Parameters Screen	55
Figure 5-7: Advanced Parameters, General Parameters Screen	58
Figure 5-8: Supplementary Services Parameters Screen	63
Figure 5-9: Keypad Features Screen	66
Figure 5-10: Source Phone Number Manipulation Table for Tel→IP calls	68
Figure 5-11: Routing Tables, General Parameters Screen	73
Figure 5-12: Tel to IP Routing Table Screen	76
Figure 5-13: IP to Hunt Group Routing Table Screen	78
Figure 5-14: Internal DNS Table Screen	80
Figure 5-15: Reasons for Alternative Routing Screen	81
Figure 5-16: Coder Group Settings Screen	83
Figure 5-17: Tel Profile Settings Screen	85
Figure 5-18: IP Profile Settings Screen	87
Figure 5-19: Endpoint Phone Number Table Screen	89
Figure 5-20: Hunt Group Settings screen	91
Figure 5-21: Authentication Screen	93
Figure 5-22: Automatic Dialing Table Screen	94
Figure 5-23: Caller Display Information Screen	95
Figure 5-24: Call Forwarding Table Screen	96
Figure 5-25: MP-1xx FXS Caller ID Permission Screen	98
Figure 5-26: FXO Settings Screen	99
Figure 5-27: Network Settings Screen	103
Figure 5-28: SNMP Managers Table Screen	107
Figure 5-29: Channel Settings, Voice Settings Parameters	113
Figure 5-30: Channel Settings, Fax/Modem/CID Parameters	115
Figure 5-31: Channel Settings, RTP Parameters	117
Figure 5-32: Channel Settings, Miscellaneous Parameters	118
Figure 5-33: Configuration File Screen	121
Figure 5-34: Regional Settings Screen	122
Figure 5-35: Change Password Screen	123
Figure 5-36: IP Connectivity Screen	124
Figure 5-37: Tel→IP Call Counters Screen	126

Figure 5-38: MP-1xx/FXS Channel Status Screen	127
Figure 5-39: Channel Status Details Screen	128
Figure 5-40: Message Log Screen	129
Figure 5-41: System Information Screen	130
Figure 5-42: Start Software Upgrade Screen	131
Figure 5-43: Load a <i>cmp</i> File Screen	132
Figure 5-44: <i>cmp</i> File Successfully Loaded into the MP-1xx Notification	133
Figure 5-45: Load an <i>ini</i> File Screen	134
Figure 5-46: Load a CPT File Screen	135
Figure 5-47: FINISH Screen	136
Figure 5-48: 'End Process' Screen	136
Figure 5-49: Auxiliary Files Screen	138
Figure 5-50: Save Configuration Screen	139
Figure 5-51: Reset Screen	140
Figure 6-1: <i>ini</i> File Structure	142
Figure 6-2: SIP <i>ini</i> File Example	142
Figure 7-1: Call Progress Tone Types	144
Figure 7-2: Defining a Dial Tone Example	145
Figure 7-3: Examples of Various Ringing Signals	146
Figure 8-1: Metering Tone Relay Architecture	159
Figure 8-2: Proprietary Info Message for Relaying Metering Tones	159
Figure 8-3: SIP Call Flow	161
Figure 8-4: MP-108 FXS & FXO Remote IP Extension	166
Figure 9-1: Status and Error Messages	170
Figure 9-2: Setting the Syslog Server IP Address	172
Figure 9-3: The <i>ini</i> File Example for Syslog	172
Figure 10-1: MP-1xx Startup Process	174
Figure 11-1: Example of Entries in a Device <i>ini</i> file Regarding SNMP	189
Figure B-1: Main Screen	199
Figure B-2: Reset Screen	199
Figure B-3: Preferences Screen	201
Figure B-4: Client Configuration Screen	203
Figure B-5: Templates Screen	207
Figure E-1: User-Customizable Web Interface Title Bar	213
Figure E-2: Customized Web Interface Title Bar	213
Figure E-3: Image Download Screen	214
Figure E-4: INI Parameters Screen	217
Figure F-1: TrunkPack Downloadable Conversion Utility Opening Screen	219
Figure F-2: Call Progress Tones Conversion Screen	220
Figure F-3: Encode/Decode <i>ini</i> File(s) Screen	221
Figure F-4: Prerecorded Tones Screen	222
Figure F-5: File Data Window	223
Figure F-6: Initial Settings Screen	224
Figure F-7: Recording Screen –Automatic Mode	225
Figure F-8: Recording Screen after Automatic Detection	226
Figure F-9: Recording Screen - Manual Mode	227
Figure F-10: Call Progress Tone Properties	228
Figure F-11: Call Progress Tone Database Matches	228
Figure F-12: Full PBX/Country Database Match	228

List of Tables

Table 2-1: Front Panel Buttons on the MP-1xx	21
Table 2-2: Indicator LEDs on the MP-1xx Front Panel	22
Table 2-3: MP-10x Rear Panel Component Descriptions	23
Table 2-4: Indicator LEDs on the MP-10x Rear Panel	23
Table 2-5: MP-124 Rear Panel Component Descriptions	24
Table 2-6: Indicator LEDs on the MP-124 Rear Panel	24
Table 3-1: Cables and Cabling Procedure	29
Table 3-2: DC Power Supply on the MP-124 Component Descriptions.....	31
Table 3-3: Pin Allocation in the 50-pin Telco Connector	31
Table 3-4: MP-104/FXS Lifeline Setup Component Descriptions	33
Table 4-1: MP-1xx Default Networking Parameters	35
Table 5-1: Protocol Definition, General Parameters (continues on pages 45 to 47).....	45
Table 5-2: Proxy & Registration Parameters (continues on pages 49 to 52)	49
Table 5-3: <i>ini</i> File Coder Parameter	54
Table 5-4: DTMF & Dialing Parameters (continues on pages 55 to 57)	55
Table 5-5: Advanced Parameters, General Parameters (continues on pages 59 to 62)	59
Table 5-6: Supplementary Services Parameters (continues on pages 64 to 65).....	64
Table 5-7: Keypad Features Parameters	67
Table 5-8: Number Manipulation Parameters	69
Table 5-9: Number Manipulation <i>ini</i> File Parameters (continues on pages 70 to 71)	70
Table 5-10: Routing Tables, General Parameters (continues on pages 73 to 74).....	73
Table 5-11: Tel to IP Routing Table.....	76
Table 5-12: IP to Hunt Group Routing Table.....	79
Table 5-13: Internal DNS <i>ini</i> File Parameter	80
Table 5-14: Reasons for Alternative Routing <i>ini</i> File Parameter	82
Table 5-15: <i>ini</i> File Coder Group Parameters	84
Table 5-16: <i>ini</i> File Tel Profile Settings.....	86
Table 5-17: <i>ini</i> File IP Profile Settings	88
Table 5-18: Endpoint Phone Numbers Table	89
Table 5-19: Channel Select Modes	92
Table 5-20: Authentication <i>ini</i> File Parameter	93
Table 5-21: Automatic Dialing <i>ini</i> File Parameter	95
Table 5-22: Caller ID <i>ini</i> File Parameter	96
Table 5-23: Call Forward Table	97
Table 5-24: Authentication <i>ini</i> File Parameter	98
Table 5-25: FXO Parameters (continues on pages 99 to 100)	99
Table 5-26: Protocol Management, <i>ini</i> File Parameters (continues on pages 101 to 102)	101
Table 5-27: Network Setting Parameters (continues on pages 104 to 106)	104
Table 5-28: SNMP Managers Table Parameters	107
Table 5-29: Board, <i>ini</i> File Parameters (continues on pages 108 to 110).....	108
Table 5-30: SNMP <i>ini</i> File Parameters	111
Table 5-31: Channel Settings, Voice Settings Parameters	114
Table 5-32: Channel Settings, Fax/Modem/CID Parameters (continues on pages 115 to 116).....	115
Table 5-33: Channel Settings, RTP Parameters	117
Table 5-34: Channel Settings, Miscellaneous Parameters	118
Table 5-35: Channel Settings, <i>ini</i> File Parameters.....	119
Table 5-36: IP Connectivity Parameters.....	125
Table 5-37: Call Counters Description (continues on pages 126 to 127).....	126
Table 5-38: Auxiliary Files Descriptions	137
Table 5-39: Configuration Files <i>ini</i> File Parameters	138
Table 8-1: Summary of DTMF configuration Parameters (continues on pages 151 to 152).....	151
Table 8-2: Supported CDR Fields	158
Table 10-1: Vendor Specific Information Field	176
Table 10-2: Structure of the Vendor Specific Information Field	177
Table 12-1: MP-1xx Selected Technical Specifications (continues on pages 191 to 193)	191
Table A-1: MP-1xx SIP Supplied Software Kit	195
Table B-1: Command Line Switch Descriptions	206
Table C-1: Packet Types Defined in RFC 1890	209
Table C-2: Defined Payload Types.....	209

Table C-3: Default RTP/RTCP/T.38 Port Allocation	210
Table E-1: Customizable Logo <i>ini</i> File Parameters	215
Table E-2: Web Appearance Customizable <i>ini</i> File Parameters	215
Table E-3: Customizable Logo <i>ini</i> File Parameters	216
Table E-4: Web Appearance Customizable <i>ini</i> File Parameters	216
Table G-1: acBoardFatalError Alarm Trap	229
Table G-2: acBoardEvResettingBoard Alarm Trap	229
Table G-3: acBoardCallResourcesAlarm Alarm Trap	230
Table G-4: acBoardControllerFailureAlarm Alarm Trap	230
Table G-5: acBoardOverloadAlarm Alarm Trap	230
Table G-6: acActiveAlarmTableOverflow Alarm Trap	231
Table G-7: acBoardEthernetLinkAlarm Alarm Trap	231
Table G-8: coldStart Trap	232
Table G-9: authenticationFailure Trap	232
Table G-10: acBoardEvBoardStarted Trap	232



Tip: When viewing this manual on CD, Web site or on any other electronic copy, all cross-references are hyperlinked. Click on the page or section numbers (shown in blue) to reach the individual cross-referenced item directly. To return back to the point from where you accessed the cross-reference, press the **ALT** and **←** keys.

Trademarks

AC logo, Ardito, AudioCoded, AudioCodes, AudioCodes logo, IPmedia, Mediant, MediaPack, MP-MLQ, NetCoder, Stretto, TrunkPack, VoicePacketizer and VoIPerfect, are trademarks or registered trademarks of AudioCodes Limited. All other products or trademarks are property of their respective owners.

Customer Support

Customer technical support and service are provided by AudioCodes' Distributors, Partners, and Resellers from whom the product was purchased. For Customer support for products purchased directly from AudioCodes, contact support@audiocodes.com.

Abbreviations and Terminology

Each abbreviation, unless widely used, is spelled out in full when first used. Only industry-standard terms are used throughout this manual. Hexadecimal notation is indicated by 0x preceding the number.

Related Documentation

Document #	Manual Name
LTRT-656xx (e.g., LTRT-65601)	MP-1xx SIP Release Notes
LTRT-614xx	MP-1xx Fast Track Installation Guide



- Note 1:** **MP-1xx** refers to the **MP-124** 24-port, **MP-108** 8-port, **MP-104** 4-port and **MP-102** 2-port media gateways having similar functionality except for the number of channels (the **MP-124** and **MP-102** support only FXS).
- Note 2:** **MP-10x** refers to **MP-108** 8-port, **MP-104** 4-port and **MP-102** 2-port gateways.
- Note 3:** **MP-1xx/FXS** refers only to the **MP-124/FXS**, **MP-108/FXS**, **MP-104/FXS** and **MP-102/FXS** gateways.
- Note 4:** **MP-10x/FXO** refers only to **MP-108/FXO** and **MP-104/FXO** gateways.



Note: Where "network" appears in this manual, it means Local Area Network (LAN), Wide Area Network (WAN), etc. accessed via the gateway's Ethernet interface.



Note: **FXO** (**F**oreign **E**xchange **O**ffice) is the interface replacing the analog telephone and connects to a Public Switched Telephone Network (PSTN) line from the Central Office (CO) or to a Private Branch Exchange (PBX). The FXO is designed to **receive** line voltage and ringing current, supplied from the CO or the PBX (just like an analog telephone). An FXO VoIP gateway interfaces between the CO/PBX line and the Internet.

FXS (**F**oreign **E**xchange **S**tation) is the interface replacing the Exchange (i.e., the CO or the PBX) and connects to analog telephones, dial-up modems, and fax machines. The FXS is designed to **supply** line voltage and ringing current to these telephone devices. An FXS VoIP gateway interfaces between the analog telephone devices and the Internet.



Warning: Ensure that you connect FXS ports to analog telephone or to PBX-trunk lines only and FXO ports to CO/PBX lines only.



Warning: The MP-1xx is supplied as a sealed unit and must only be serviced by qualified service personnel.



Warning: Disconnect the MP-1xx from the mains and from the Telephone Network Voltage (TNV) before servicing.

Reader's Notes

1 Overview

1.1 Introduction

This document provides you with the information on installation, configuration and operation of the MP-124 24-port, MP-108 8-port, MP-104 4-port and MP-102 2-port VoIP media gateways. As these units have similar functionality, except for the number of channels and some minor features, they are referred to collectively as the MP-1xx. It is expected that the readers are familiar with regular telephony and data networking concepts.

1.2 Gateway Description

The MediaPack MP-1xx Series Analog VoIP gateways are cost-effective, cutting edge technology solutions, providing superior voice quality and optimized packet voice streaming (voice, fax and data traffic) over the same IP network. These gateways use the award-winning, field-proven Digital Signal Processing (DSP) voice compression technology used in other MediaPack and TrunkPack™ series products.

The MP-1xx gateways incorporate up to 24 analog ports for connection, either directly to an enterprise PBX (MP-10x/FXO), to phones, or to fax (MP-1xx/FXS), supporting up to 24 simultaneous VoIP calls.

Additionally, the MP-1xx units are equipped with a 10/100 Base-TX Ethernet port for connection to the network.

The MP-1xx gateways are best suited for small to medium size enterprises, branch offices or for residential media gateway solutions.

The MP-1xx gateways enable Users to make free local or international telephone/fax calls between the distributed company offices, using their existing telephones/fax. These calls are routed over the existing network ensuring that voice traffic uses minimum bandwidth.

The MP-1xx gateways are very compact devices that can be installed as a desk-top unit (refer to Section 3.3.1) or on the wall (refer to Section 3.3.4) or in a 19-inch rack (refer to Section 3.3.3 and Section 3.3.3).

The MP-1xx gateways support SIP (Session Initiation Protocol) or H.323 protocols, enabling the deployment of "voice over IP" solutions in environments where each enterprise or residential location is provided with a simple media gateway.

This provides the enterprise with a telephone connection (e.g., RJ-11), and the capability to transmit the voice and telephony signals over a packet network.


The MP-124 supports up to 24 analog telephone loop start FXS ports, shown in Figure 1-1.

Figure 1-1: MP-124 Gateway Front View



The MP-108 supports up to 8 analog telephone loop start FXS or FXO ports, shown in [Figure 1-2](#).

Figure 1-2: MP-108 Gateway Front View

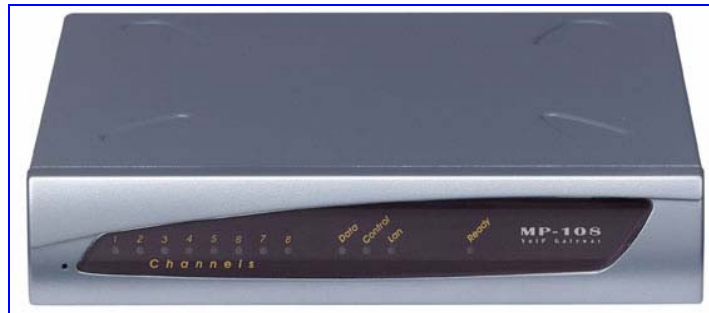

The MP-104 supports up to 4 analog telephone loop start FXS or FXO ports, shown in [Figure 1-3](#).

Figure 1-3: MP-104 Gateway Front View




The MP-102 supports up to 2 analog telephone loop start FXS ports, shown in [Figure 1-4](#).

Figure 1-4: MP-102 Gateway Front View



The layout diagram (Figure 1-5), illustrates a typical MP-108 and MP-104 or MP-102 VoIP application.

Figure 1-5: Typical MP-1xx VoIP Application

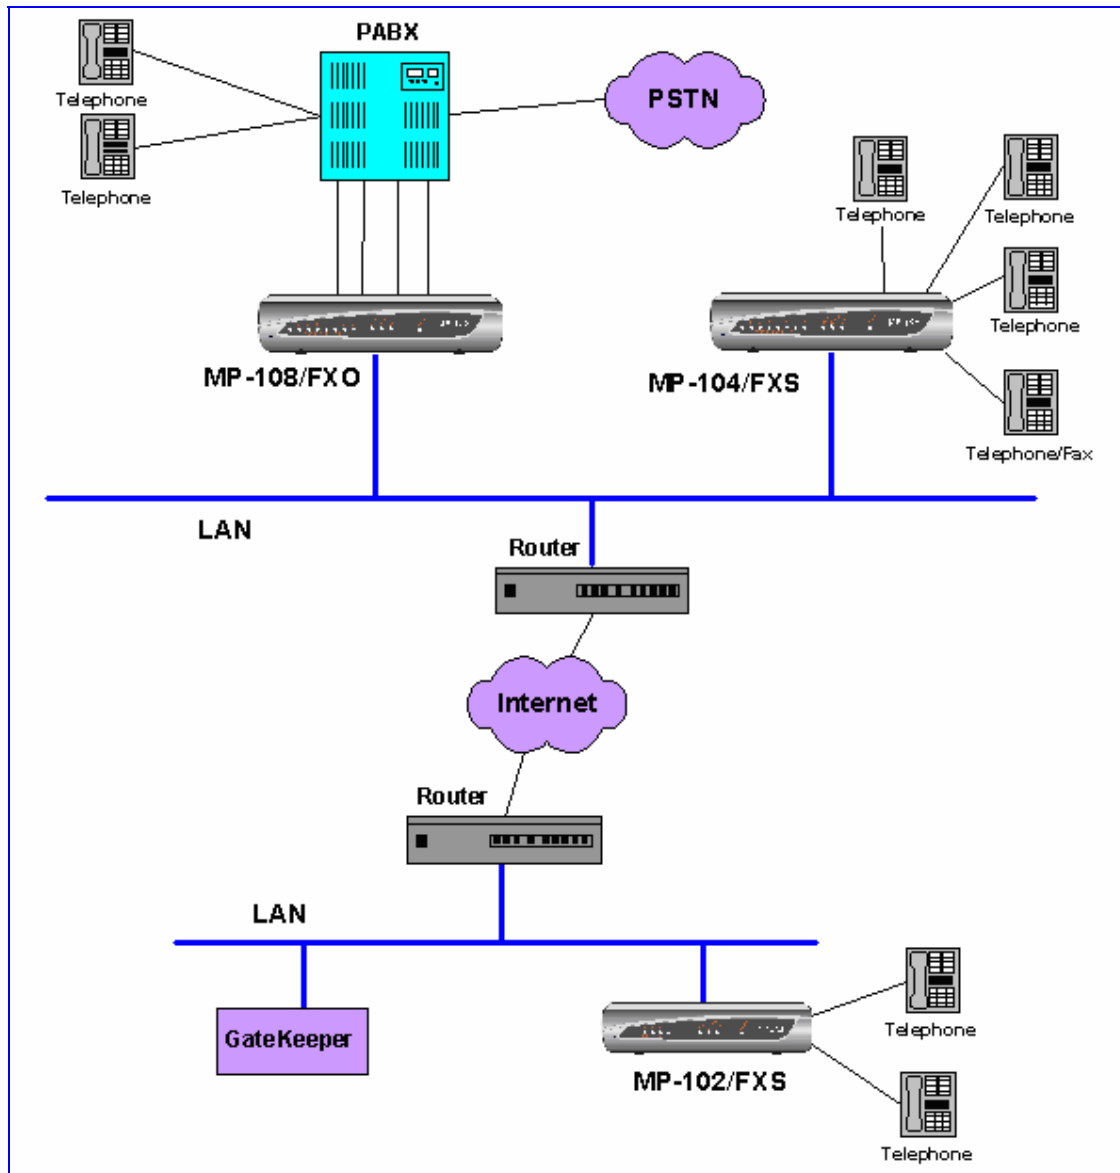

1.3 SIP Overview

SIP (Session Initialization Protocol) is an application-layer control (signaling) protocol used on the MP-1xx for creating, modifying, and terminating sessions with one or more participants. These sessions can include Internet telephone calls, media announcements and conferences.

SIP invitations are used to create sessions and carry session descriptions that enable participants to agree on a set of compatible media types. SIP uses elements called Proxy servers to help route requests to the user's current location, authenticate and authorize users for services, implement provider call-routing policies and provide features to users.

SIP also provides a registration function that enables users to upload their current locations for use by Proxy servers. SIP, on the MP-1xx, complies with the IETF (Internet Engineering Task Force) RFC 3261 (refer to <http://www.ietf.org>).

1.4 MP-1xx Features

This section provides a high-level overview of some of the many MP-1xx supported features.

1.4.1 General Features

- Superior, high quality Voice, Data and fax over IP networks.
- Spans a range of 2 to 24 analog ports.
- Supports analog telephone sets or analog PSTN/PBX trunk lines (FXS/FXO).
- Connects to the network via a 10/100 Base-TX Ethernet interface.
- Selectable G.711 or Low Bit Rate (LBR) coders per channel.
- T.38 fax with superior performance (handling a round-trip delay of up to nine seconds).
- Echo Canceler, Jitter Buffer, Voice Activity Detection (VAD) and Comfort Noise Generation (CNG) support.
- Web management for easy configuration and installation.
- Simple Network Management Protocol (SNMP) and Syslog support.
- Simple Network Time Protocol (SNTP) support, the time-of-day can be obtained from a standard SNTP server.

1.4.2 Hardware Features

- MP-124 19-inch, 1 U rugged enclosure provides up to 24 analog FXS ports, using a single 50 pin Telco connector.
- MP-10x compact, rugged enclosure only one-half of a 19-inch rack unit, 1 U high (1.75" or 44.5 mm).
- MP-124 devices: optional AC or DC power supply.
- Lifeline - provides a wired phone connection to PSTN line when there is no power, or the network fails (applies to MP-10x FXS gateways).
- LEDs on the front and rear panels that provide information on the operating status of the media gateway and the network interface.
- Restart button on the Front panel that restarts the MP-1xx gateway, and is also used to restore the MP-1xx parameters to their factory default values.

1.4.3 SIP Features

The MP-1xx SIP gateway complies with the IETF RFC 3261 standard.

- Reliable User Datagram Protocol (UDP) transport, with retransmissions.
- T.38 real time fax (using SIP).
Note: If the remote side includes the fax maximum rate parameter in the Session Description Protocol (SDP) body of the Invite message, the gateway returns the same rate in the response SDP.
- Works with Proxy or without Proxy, using an internal routing table.
- Fallback to internal routing table if Proxy is not responding.
- Supports up to four Proxy servers. If the primary Proxy fails, the MP-1xx automatically switches to a redundant Proxy.
- Supports Proxy server discovery using Domain Name Server (DNS) SRV records.

- Proxy and Registrar Authentication (handling 401 and 407 responses) using Basic or Digest methods.
- Single gateway Registration or multiple Registration of all gateway endpoints.
- Configuration of authentication username and password per each gateway endpoint, or single username and password per gateway.
- Supported methods: INVITE, CANCEL, BYE, ACK, REGISTER, OPTIONS, INFO, REFER, NOTIFY, PRACK, UPDATE and SUBSCRIBE.
- Modifying connection parameters in a call (re-INVITE).
- Working with Redirect server and handling 3xx responses.
- Early media (supporting 183 Session Progress).
- PRACK reliable provisional responses <RFC 3262>.
- Call Hold and Transfer Supplementary services using REFER, Refer-To, Referred-By, Replaces and NOTIFY.
- Call Forward (using 302 response): Immediate, Busy, No reply, Busy or No reply, Do Not Disturb.
- Supports RFC 3327 – Adding “Path” to Supported header.
- Supports RFC 3581 – Symmetric Response Routing.
- Session Timer <draft-ietf-sip-session-timer-13.txt>.
- Supports network asserted identity and privacy (RFC 3325 and RFC 3323).
- Supports Tel URI (Uniform Resource Identifier) according to RFC 2806 bis.
- Remote party ID <draft-ietf-sip-privacy-04.txt>.
- Obtaining Proxy Domain Name(s) from DHCP (Dynamic Host Control Protocol) according to RFC 3361.
- RFC 2833 relay for Dual Tone Multi Frequency (DTMF) digits, including payload type negotiation.
- DTMF out-of-band transfer using:
 - INFO method <draft-choudhuri-sip-info-digit-00.txt>.
 - INFO method, compatible with Cisco gateways.
 - NOTIFY method <draft-mahy-sipping-signaled-digits-01.txt>.
- Supported coders:
 - G.711 A-law 64 kbps (10, 20, 30, 40, 50, 60, 80, 100, 120 msec)
 - G.711 μ -law 64 kbps (10, 20, 30, 40, 50, 60, 80, 100, 120 msec)
 - G.723.1 5.3, 6.3 kbps (30, 60, 90, 120, 150 msec)
 - G.726 32 kbps (10, 20, 30, 40, 50, 60, 80, 100, 120 msec)
 - G.729A 8 kbps (10, 20, 30, 40, 50, 60, 80, 100, 120 msec)
 - G.729B is supported if Silence Suppression is enabled.
- Can negotiate coder from a list of given coders.
- Implementation of Message Waiting Indication (MWI) IETF draft-ietf-sipping-mwi-04.txt, including SUBSCRIBE (to the MWI server). The MP-1xx/FXS gateways can accept an MWI Notify message that indicates waiting messages or indicates that the MWI is cleared.

For more updated information on the gateway's supported features, refer to the latest MP-1xx SIP Release Notes.

Reader's Notes

2 MP-1xx Physical Description

This section provides detailed information on the MP-1xx hardware, the location and functionality of the LEDs, buttons and connectors on the front and rear panels.

For detailed information on installing the MP-1xx refer to Section 3 on page 25.

2.1 MP-1xx Front Panel

Figure 2-1 and Figure 2-2 illustrate the front layout of the MP-108 (almost identical on MP-104 and MP-102) and MP-124 respectively. Refer to Section 2.1.1 for meaning of the front panel buttons; refer to Section 2.1.2 for functionality of the front panel LEDs.

Figure 2-1: MP-108 Front Panel

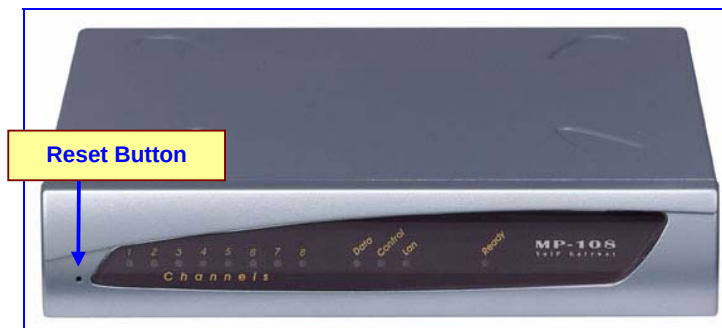


Figure 2-2: MP-124 Front Panel



2.1.1 MP-1xx Front Panel Buttons

Table 2-1 lists and describes the front panel buttons on the MP-1xx.

Table 2-1: Front Panel Buttons on the MP-1xx

Type	Function	Comment
Reset button	Reset the MP-1xx	Press the reset button with a paper clip or any other similar pointed object, until the gateway is reset.
	Restore the MP-1xx parameters to their factory default values	Refer to Section 4.2 on page 36.

2.1.2 MP-1xx Front Panel LEDs

Table 2-2 lists and describes the front panel LEDs on the MP-1xx.



Note: MP-1xx (FXS/FXO) media gateways feature almost identical front panel LEDs; they only differ in the number of channel LEDs that correspond to the number of channels.

Table 2-2: Indicator LEDs on the MP-1xx Front Panel

Label	Type	Color	State	Function
Ready	Device Status	Green	ON	Device Powered, self-test OK
		Orange	Blinking	Software Loading/Initialization
		Red	ON	Malfunction
LAN	Ethernet Link Status	Green	ON	Valid 10/100 Base-TX Ethernet connection
		Red	ON	Malfunction
Control	Control Link	Green	Blinking	Sending and receiving SIP messages
		Blank		No traffic
Data	Packet Status	Green	Blinking	Transmitting RTP (Real-Time Transport Protocol) Packets
		Red	Blinking	Receiving RTP Packets
		Blank	-	No traffic
Channels	Telephone Interface	Green	ON	Offhook / Ringing for FXS Phone Port
				FXO Line-Seize/Ringing State for Line Port
		Green	Blinking	There's an incoming call, before answering
		Red	ON	Line Malfunction
		Blank	-	Normal

2.2 MP-1xx Rear Panel

2.2.1 MP-10x Rear Panel

Figure 2-3 illustrates the rear panel layout of the MP-104. For descriptions of the MP-10x rear panel components, refer to Table 2-3. For the functionality of the MP-10x rear panel LEDs, refer to Table 2-4.



Tip 1: MP-10x (FXS/FXO) media gateways feature almost identical rear panel connectors and LEDs, located slightly differently from one device to the next.

Tip 2: The RJ-45 port (Eth 1) on the MP-10x/FXO rear panel is inverted on the MP-1xx/FXS. The label on the rear panel also distinguishes FXS from FXO devices.

Figure 2-3: MP-104/FXS Rear Panel Connectors

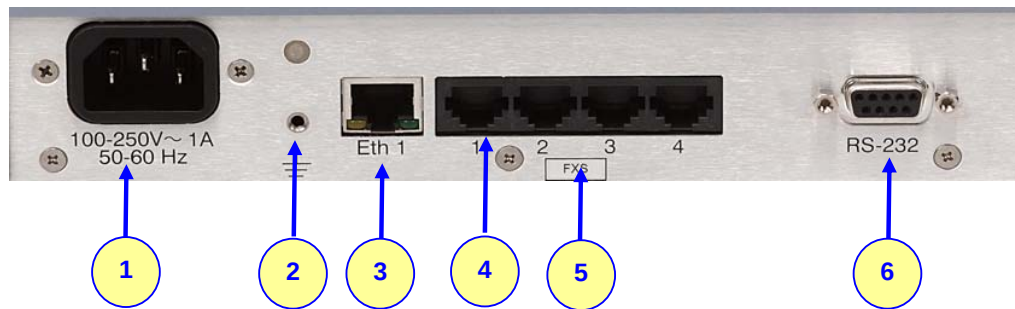


Table 2-3: MP-10x Rear Panel Component Descriptions

Item #	Label	Component Description
1	100-250V ~ 1A 50-60 Hz	AC power supply socket.
2		Protective earthing screw (mandatory for all installations).
3	Eth 1	10/100 Base-TX Ethernet connection.
4		2, 4 or 8 FXS/FXO ports.
5	FXS	FXS / FXO label.
6	RS-232	9 pin RS-232 status port (for Cable Wiring of the RS-232 refer to Figure 3-10 on page 32).

Table 2-4: Indicator LEDs on the MP-10x Rear Panel

Label	Type	Color	State	Meaning
ETH-1	Ethernet Status	Yellow	ON	Ethernet port receiving data
		Red	ON	Collision

Note that the Ethernet LEDs are located within the RJ-45 socket.

2.2.2 MP-124 Rear Panel

[Figure 2-4](#) illustrates the rear panel layout of the MP-124. For descriptions of the MP-124 rear panel components, refer to [Table 2-5](#). For the functionality of the MP-124 rear panel LEDs, refer to [Table 2-6](#).

Figure 2-4: MP-124 (FXS) Rear Panel Connectors

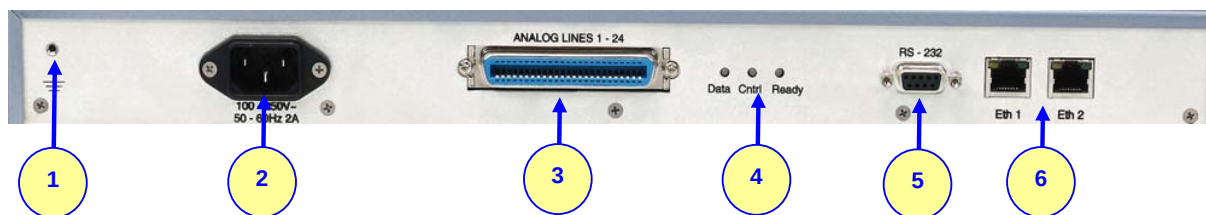


Table 2-5: MP-124 Rear Panel Component Descriptions

Item #	Label	Component Description
1		Protective earthing screw (mandatory for all installations).
2	100-250 V~ 50 - 60 Hz 2A	AC power supply socket.
3	ANALOG LINES 1 –24	50-pin Telco for 1 to 24 analog lines.
4	Data Cntrl Ready	LED indicators (described in Table 2-6).
5	RS-232	9 pin RS-232 status port (for Cable Wiring of the RS-232 refer to Figure 3-10 on page 32).
6	Eth 1 Eth 2	Dual 10/100 Base-TX Ethernet connections.
	48 V 2A max	Connection to external DC 40-60 V power supply (refer to Figure 3-9).



Note: The Dual In-line Package (DIP) switch, located on the MP-124 rear panel (supplied with some of the units), is not functional and should **not** be used.

The Ethernet LEDs are located within each of the RJ-45 sockets.

Note that on the MP-124 the rear panel also duplicates the Data, Control and Ready LEDs from the front panel.

Table 2-6: Indicator LEDs on the MP-124 Rear Panel

Label	Type	Color	State	Function
Data	Packet Status	Green	ON	Transmitting RTP Packets
		Red	ON	Receiving RTP Packets
		Blank		No traffic
Cntrl	Control Link	Green	Blinking	Sending and receiving H.323 messages
		Blank		No traffic
Ready	Device Status	Green	ON	Device Powered and Self-test OK
		Orange	ON	Software Loading/Initialization
		Red	ON	Malfunction
Eth 1	Ethernet Status	Green	ON	Valid 10/100 Base-TX Ethernet connection
		Red	ON	Malfunction
Eth 2	Ethernet Status	Green	ON	Valid 10/100 Base-TX Ethernet connection
		Red	ON	Malfunction

3 Installing the MP-1xx

This section provides information on the hardware installation procedure for the MP-1xx. For information on how to start using the gateway, refer to Section 4 on page 35. For detailed information on the MP-1xx connectors, LEDs and buttons, refer to Section 2 on page 21.



Caution Electrical Shock

The equipment must only be installed or serviced by qualified service personnel.

➤ **To install the MP-1xx, take these 4 steps:**

1. Unpack the MP-1xx (refer to Section 3.1 below).
2. Check the package contents (refer to Section 3.2 below).
3. Mount the MP-1xx (refer to Section 3.3 on page 26).
4. Cable the MP-1xx (refer to Section 3.4 on page 29).

After connecting the MP-1xx to the power source, the Ready and LAN LEDs on the front panel turn to green (after a self-testing period of about 1 minute). Any malfunction changes the Ready LED to red.

When you have completed the above relevant sections you are then ready to start configuring the gateway (Section 4 on page 35).

3.1 Unpacking

➤ **To unpack the MP-1xx, take these 6 steps:**

1. Open the carton and remove packing materials.
2. Remove the MP-1xx gateway from the carton.
3. Check that there is no equipment damage.
4. Check, retain and process any documents.
5. Notify AudioCodes or your local supplier of any damage or discrepancies.
6. Retain any diskettes or CDs.

3.2 Package Contents

Ensure that in addition to the MP-1xx, the package contains:

- AC power cable for the AC power supply option.
- DC terminal block (MP-124 only, for the DC power supply option).
- CD (software and documentation).
- Lifeline cable (RJ-11 adaptor cable for 1 to 2). (Supplied with MP-10x/FXS only).
- 3 brackets (2 short, 1 long) and bracket-to-device screws for 19-inch rack installation option (MP-10x only).
- 2 short equal-length brackets and bracket-to-device screws for MP-124 19-inch rack installation.
- The MP-1xx Fast Track Installation Guide.


3.3 Mounting the MP-1xx

The MP-1xx can be mounted on a desktop or on a wall (only MP-10x), or installed in a standard 19-inch rack. Refer to Section 3.4 on page 29 for cabling the MP-1xx.

3.3.1 Mounting the MP-1xx on a Desktop

No brackets are required. Simply place the MP-1xx on the desktop in the position you require.

Figure 3-1: Desktop or Shelf Mounting

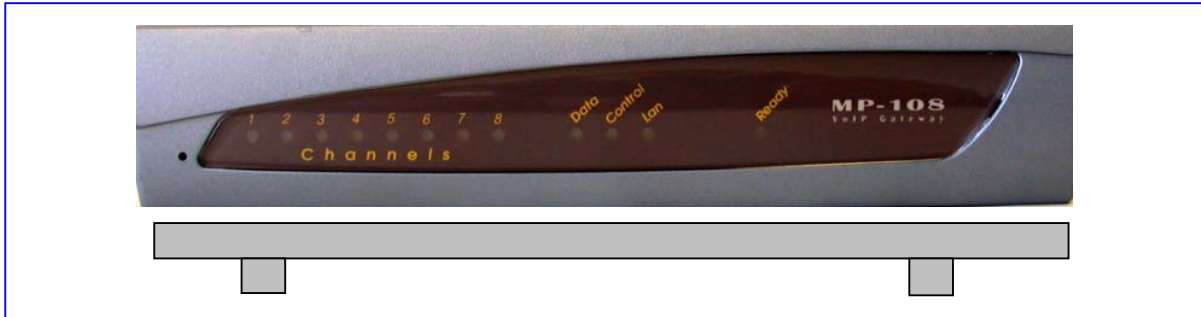

Rack Mount Safety Instructions (UL)

When installing the chassis in a rack, be sure to implement the following Safety instructions recommended by Underwriters Laboratories:

- **Elevated Operating Ambient** - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (Tma) specified by the manufacturer.
- **Reduced Air Flow** - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation on the equipment is not compromised.
- **Mechanical Loading** - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- **Circuit Overloading** - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- **Reliable Earthing** - Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips.)



3.3.2 Installing the MP-10x in a 19-inch Rack


The MP-10x is installed into a standard 19-inch rack by the addition of two supplied brackets (1 short, 1 long). The MP-108 with brackets for rack installation is shown in Figure 3-2.

➤ To install the MP-10x in a 19-inch rack, take these 9 steps:

1. Remove the two screws on one side of the device nearest the front panel.
2. Insert the peg on the short bracket into the third air vent down on the column of air vents nearest the front panel.

3. Swivel the bracket until the holes in the bracket line up with the two empty screw holes on the device.
4. Use the screws found in the devices' package to attach the short bracket to the side of the device.
5. Remove the two screws on the other side of the device nearest the front panel.
6. Position the long bracket so that the holes in the bracket line up with the two empty screw holes on the device.
7. Use the screws found in the device's package to attach the long bracket to the side of the device.
8. Position the device in the rack and line up the bracket holes with the rack frame holes.
9. Use four standard rack screws to attach the device to the rack. These screws are not provided with the device.

Figure 3-2: MP-108 with Brackets for Rack Installation

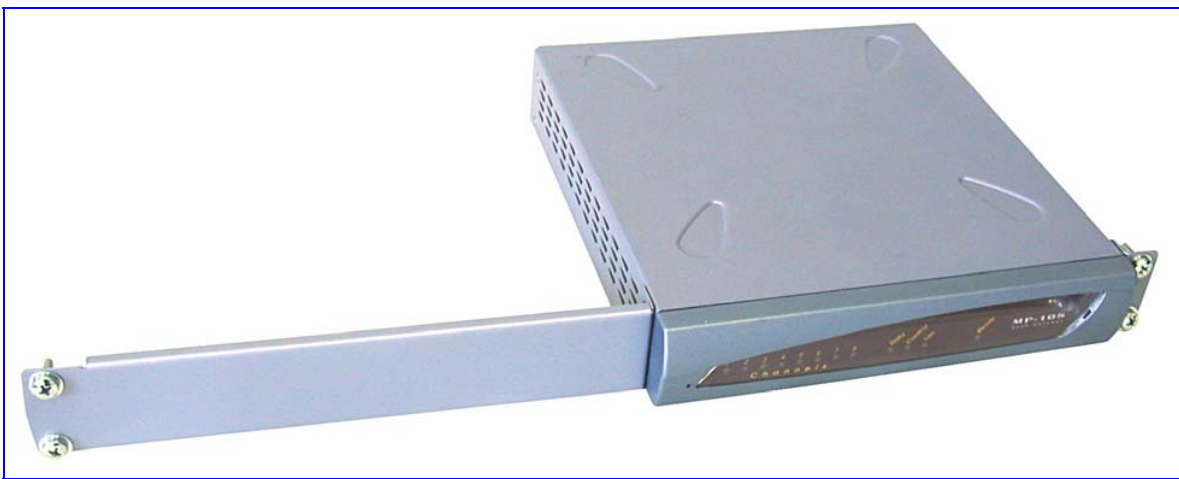

3.3.3 Installing the MP-124 in a 19-inch Rack

The MP-124 is installed into a standard 19-inch rack by the addition of two short (equal-length) supplied brackets. The MP-124 with brackets for rack installation is shown in [Figure 3-3](#).

➤ **To install the MP-124 in a 19-inch rack, take these 7 steps:**

1. Remove the two screws on one side of the device nearest the front panel.
2. Insert the peg on one of the brackets into the third air vent down on the column of air vents nearest the front panel.
3. Swivel the bracket until the holes in the bracket line up with the two empty screw holes on the device.
4. Use the screws found in the devices' package to attach the bracket to the side of the device.
5. Repeat steps 1 to 4 to attach the second bracket to the other side of the device.
6. Position the device in the rack and line up the bracket holes with the rack frame holes.
7. Use four standard rack screws to attach the device to the rack. These screws are not provided with the device.

Figure 3-3: MP-124 with Brackets for Rack Installation



3.3.4 Mounting the MP-10x on a Wall

The MP-10x is mounted on a wall by the addition of two short (equal-length) supplied brackets. The MP-102 with brackets for wall mount is shown in [Figure 3-4](#).

➤ **To mount the MP-10x on a wall, take these 7 steps:**

1. Remove the screw on the side of the device that is nearest the bottom and the front panel.
2. Insert the peg on the bracket into the third air vent down on the column of air vents nearest the front panel.
3. Swivel the bracket so that the side of the bracket is aligned with the base of the device and the hole in the bracket line up with the empty screw hole.
4. Attach the bracket using one of the screws provided in the device package.
5. Repeat steps 1 to 4 to attach the second bracket to the other side of the device.
6. Position the device on the wall with the base of the device next to the wall.
7. Use four screws to attach the device to the wall. These screws are not provided with the device.

Figure 3-4: MP-102 Wall Mount



3.4 Cabling the MP-1xx

Verify that you have the cables listed under column 'Cable' in [Table 3-1](#) before beginning to cable the MP-1xx according to the column 'Cabling Procedure'. For detailed information on the MP-1xx rear panel connectors, refer to [Section 2.2](#) on page [22](#).

Table 3-1: Cables and Cabling Procedure

Cable	Cabling Procedure	
RJ-45 Ethernet cable	When initializing (connecting the MP-1xx to the network for the first time) use a standard Ethernet cable to connect the network interface on your computer to a port on a network hub / switch. Use a second standard Ethernet cable to connect the MP-1xx to another port on the same network hub / switch. For normal use, connect the MP-1xx Ethernet connection directly to the network, using a standard RJ-45 Ethernet cable. For connector's pinout refer to Figure 3-5 on page 30 .	
RJ-11 two-wire telephone cords	Connect the RJ-11 connectors on the rear panel of the MP-10x/FXS to fax machine, modem, or phones (refer to Figure 3-6).	Ensure that FXS & FXO are connected to the correct devices, otherwise damage can occur.
	Connect RJ-11 connectors on the MP-10x/FXO rear panel to telephone exchange analog lines or PBX extensions (Figure 3-6).	
	MP-124/FXS ports are usually distributed using an MDF Adaptor Block (<i>special order option</i>). Refer to Figure 3-8 for details.	
Lifeline cable	For detailed information on setting up the Lifeline, refer to the procedure under Section 3.4.2 on page 32 .	
50-pin Telco cable (MP-124 devices only). An Octopus cable is not included with the MP-124 package.	1. Wire the 50-pin Telco connectors according to the pinout in Figure 3-7 on page 30, and Figure 3-8 on page 30. 2. Attach each pair of wires from a 25-pair Octopus cable to its corresponding socket on the MDF Adaptor Block's rear. 3. Connect the wire-pairs at the other end of the cable to a male 50-pin Telco connector. 4. Insert and fasten this connector to the female 50-pin Telco connector on the MP-124 rear panel (labeled Analog Lines 1-24). 5. Connect the telephone lines from the Adaptor Block to a fax machine, modem, or telephones by inserting each RJ-11 connector on the 2-wire line cords of the POTS phones into the RJ-11 sockets on the front of an MDF Adaptor Block as shown in Figure 3-8 on page 30.	
RS-232 serial cable	For detailed information on connecting the MP-1xx RS-232 port to your PC, refer to Section 3.4.1 on page 32 .	
Protective earthing strap	Connect an earthed strap to the chassis protective earthing screw and fasten it securely according to the safety standards.	
AC Power cable	Connect the MP-1xx 100-250V~ 50-60 Hz power socket to the mains.	
DC Power cable (MP-124 devices only)	Refer to Figure 3-9 . Insert two 18 AWG wires into the supplied DC terminal block and fasten the two screws located directly above each wire. Insert the DC terminal block into the DC inlet on the MP-124 rear panel and fasten it with the two adaptor-to-panel screws. Connect the other end of the cable to a 48 VDC power supply.	

Safety Notice

When installing the DC power supply on the MP-124, be sure to implement the following safety instructions:

- Connect the unit to an SELV source sufficiently isolated from the mains.
- Connect the unit permanently to earth via its protective earthing stud.

Figure 3-5: RJ-45 Ethernet Connector Pinout

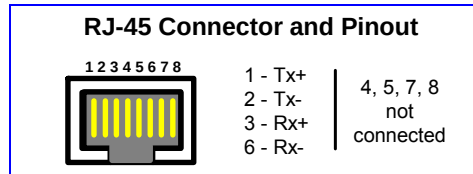


Figure 3-6: RJ-11 Phone Connector Pinout

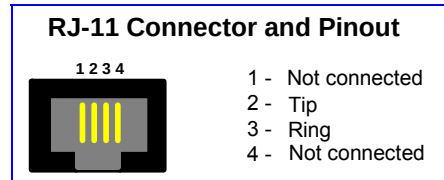


Figure 3-7: 50-pin Telco Connector (MP-124/FXS only)

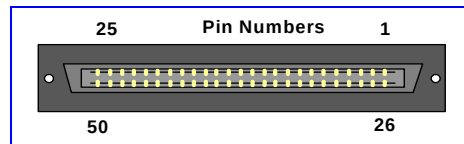


Figure 3-8: MP-124 in a 19-inch Rack with MDF Adaptor

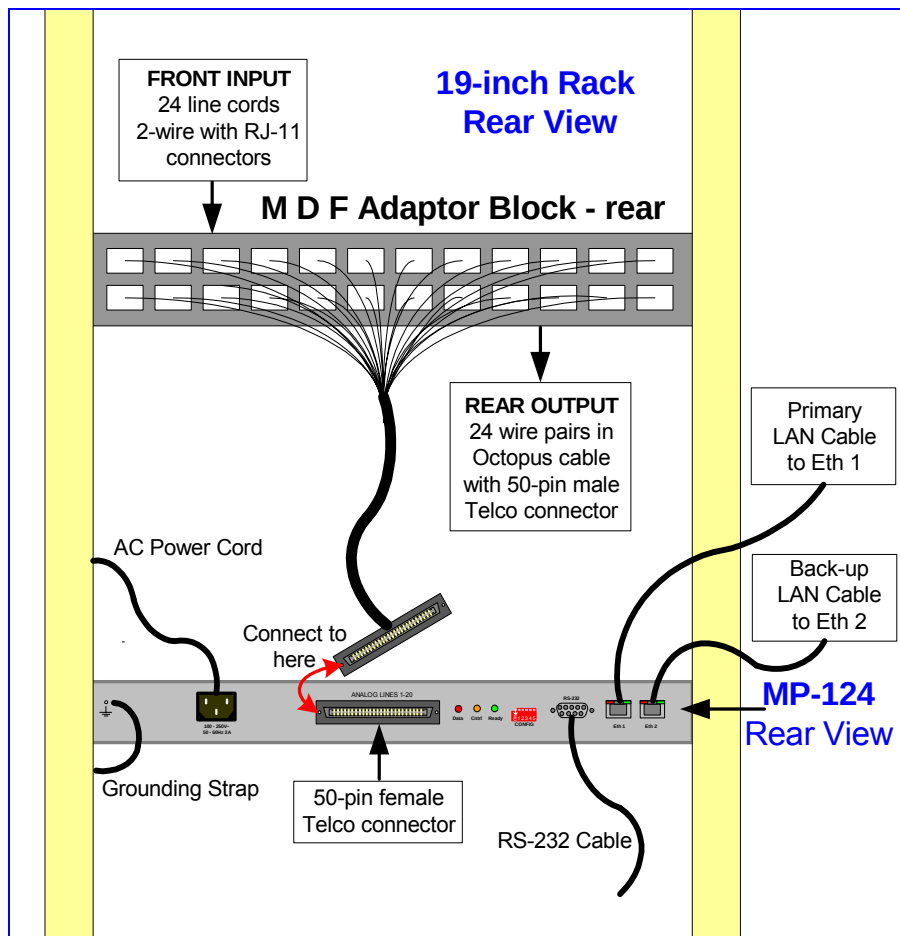
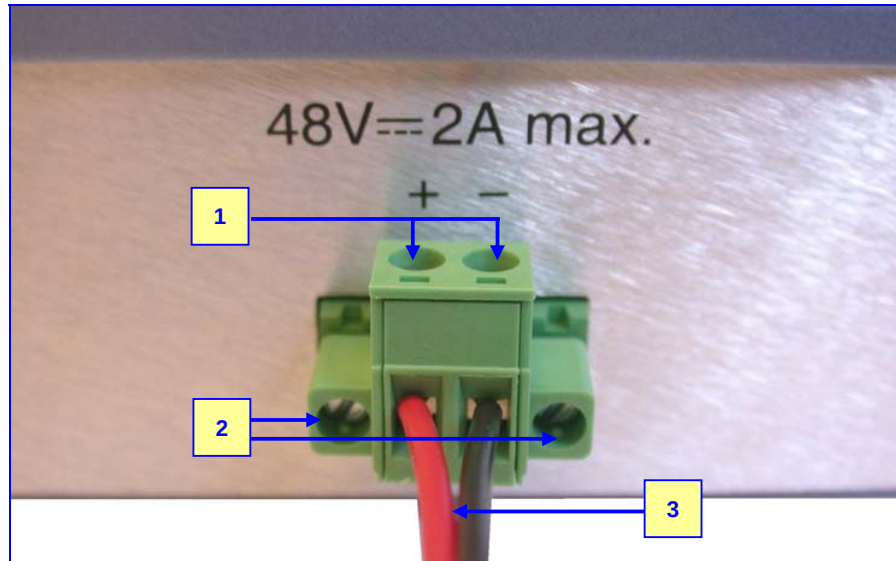


Figure 3-9: DC Power Supply on the MP-124**Table 3-2: DC Power Supply on the MP-124 Component Descriptions**

Item #	Component Description
1	2 screws for wire connection to the DC terminal block.
2	2 screws for connecting the DC terminal block to the MP-124 panel.
3	Two 18 AWG wires.

Table 3-3: Pin Allocation in the 50-pin Telco Connector


Phone Channel	Connector Pins	Phone Channel	Connector Pins
1	1/26	13	13/38
2	2/27	14	14/39
3	3/28	15	15/40
4	4/29	16	16/41
5	5/30	17	17/42
6	6/31	18	18/43
7	7/32	19	19/44
8	8/33	20	20/45
9	9/34	21	21/46
10	10/35	22	22/47
11	11/36	23	23/48
12	12/37	24	24/49

3.4.1 Connecting the MP-1xx RS-232 Port to Your PC

Using a standard RS-232 straight cable (not a cross-over cable) with DB-9 connectors, connect the MP-1xx RS-232 port to either COM1 or COM2 RS-232 communication port on your PC. The required connector pinout and gender are shown below in [Figure 3-10](#).

The RS-232 port is mainly used internally by service personnel for monitoring purposes. Advanced users can also use this feature to obtain log information (for example).

Figure 3-10: RS-232 Cable Wiring

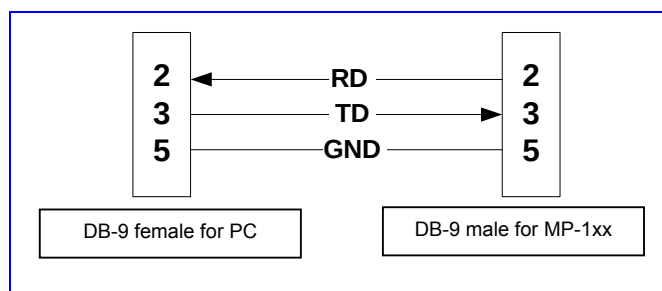

3.4.1.1 Configuring the Serial Connection

To communicate with the MP-1xx, set your serial communication software to the following communications port settings:

- Baud Rate: 115,200 bps
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: Hardware

3.4.2 Cabling the Lifeline Phone


The Lifeline provides a wired analog POTS phone connection to any PSTN or PBX FXS port when there is no power, or when the network connection fails. Users can therefore use the Lifeline phone even when the MP-1xx is not powered on or not connected to the network. With the MP-108/FXS and MP-104/FXS the Lifeline connection is provided on port #4 (refer to [Figure 3-12](#)). With the MP-102/FXS the Lifeline connection is provided on port #2.



Note: The MP-124 and MP-10x/FXO do NOT support the Lifeline.

The Lifeline's Splitter connects pins #1 and #4 to another source of an FXS port, and pins #2 and #3 to the POTS phone. Refer to the Lifeline Splitter pinout in [Figure 3-11](#).

Figure 3-11: Lifeline Splitter Pinout & RJ-11 Connector for MP-10x/FXS

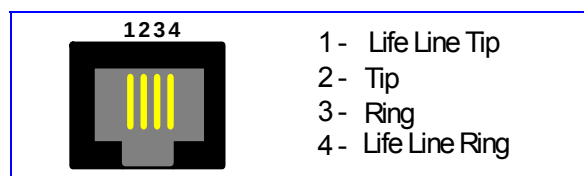

➤ **To cable the MP-10x/FXS Lifeline phone, take these 3 steps:**

1. Connect the Lifeline Splitter to port #4 (on the MP-104/FXS or MP-108/FXS) or to port #2 (on the MP-102/FXS).
2. Connect the Lifeline phone to Port A on the Lifeline Splitter.
3. Connect an analog PSTN line to Port B on the Lifeline Splitter.



Note: The use of the Lifeline on network failure can be disabled using the 'LifeLineType' *ini* file parameter (described in [Table 5-29](#) on page 108).

Figure 3-12: MP-104/FXS Lifeline Setup

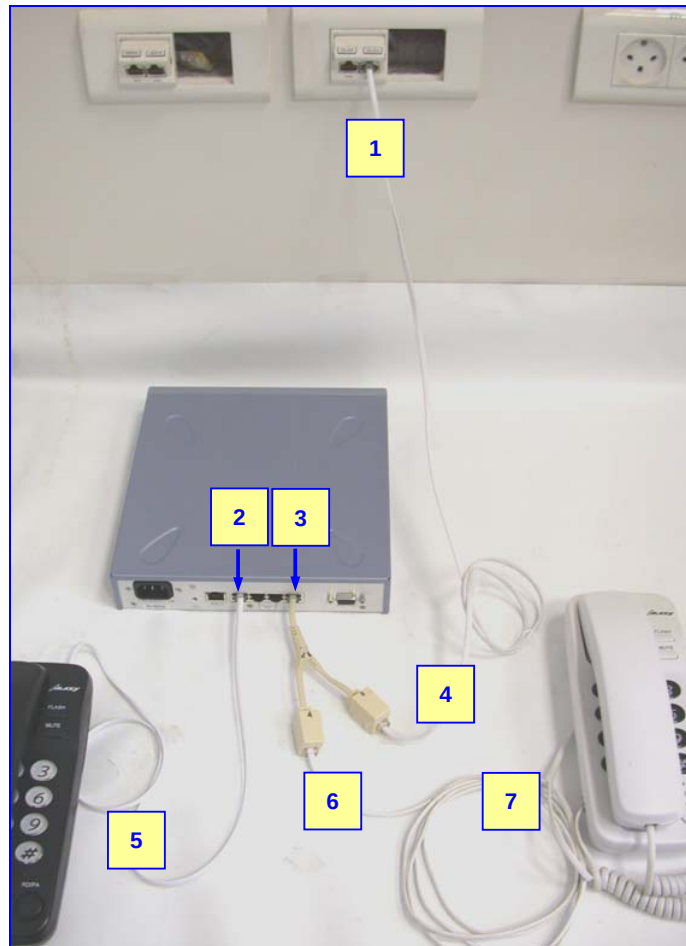


Table 3-4: MP-104/FXS Lifeline Setup Component Descriptions

Item #	Component Description
1	B: To PSTN wall port.
2	Phone to Port 1.
3	Lifeline to Port 4.
4	PSTN to Splitter (B).
5	Phone to Port 1.
6	Lifeline phone to Splitter (A).
7	Lifeline phone.

Reader's Notes

4 Getting Started

The MP-1xx is supplied with application software already resident in its flash memory (with factory default parameters).

Section 4.1 below describes how to assign an IP address to the MP-1xx, while Section 4.2 on page 36 describes how to set up the MP-1xx with basic parameters using a standard Web browser (such as Microsoft™ Internet Explorer).

For detailed information on how to *fully* configure the gateway refer to the Web Interface, described in Section 5 on page 39.

4.1 Assigning the MP-1xx IP Address

To assign an IP address to the MP-1xx use one of the following methods:

- HTTP using a Web browser (refer to Section 4.1.1 below).
- BootP (refer to Section 4.1.2 on page 36).
- DHCP (refer to Section 10.2 on page 175).
- Serial communication software (e.g., HyperTerminal™) connected to the MP-1xx via the RS-232 port (refer to Section 9.2.2 on page 170).

The default networking parameters are show in Table 4-1.

You can use the 'Reset' button to restore the MP-1xx networking parameters to their factory default values (refer to Section 4.2 on page 36).

Table 4-1: MP-1xx Default Networking Parameters

FXS or FXO	Default Value
FXS	10.1.10.10
FXO	10.1.10.11
MP-1xx default subnet mask is 255.255.0.0, default gateway IP address is 0.0.0.0	

4.1.1 Assigning an IP Address Using HTTP

➤ **To assign an IP address using HTTP, take these 8 steps:**

1. Connect your computer to the MP-1xx. Either connect the network interface on your computer to a port on a network hub / switch (refer to Table 3-1 on page 29 - RJ-45 Ethernet cable), or use an Ethernet cross-over cable to directly connect the network interface on your computer to the RJ-45 jack on the MP-1xx.
2. Change your PC's IP address and subnet mask to correspond with the MP-1xx factory default IP address and subnet mask, shown in Table 4-1. For details on changing the IP address and subnet mask of your PC, refer to Windows™ Online Help (Start>Help).
3. Access the MP-1xx Embedded Web Server (refer to Section 5.5 on page 40).
4. In the 'Quick Setup' screen (shown in Figure 4-1), set the MP-1xx 'IP Address', 'Subnet Mask' and 'Default Gateway IP Address' fields under 'IP Configuration' *to correspond with your network IP settings*. If your network doesn't feature a default gateway, enter a dummy value in the 'Default Gateway IP Address' field.

5. Click the **Reset** button and click **OK** in the prompt; the MP-1xx applies the changes and restarts. This takes approximately 1 minute to complete. When the MP-1xx has finished restarting, the Ready and LAN LEDs on the front panel are lit green.



Tip: Record and retain the IP address and subnet mask you assign the MP-1xx. Do the same when defining new username or password. If the Embedded Web Server is unavailable (for example, if you've lost your username and password), use the BootP/TFTP (Trivial File Transfer Protocol) configuration utility to access the device, "reflash" the load and reset the password (refer to [Appendix B](#) on page 197 for detailed information on using a BootP/TFTP configuration utility to access the device).

6. Disconnect your computer from the MP-1xx or from the hub / switch (depending on the connection method you used in step 1).
7. Reconnect the MP-1xx and your PC (if necessary) to the LAN.
8. Restore your PC's IP address & subnet mask to what they originally were. If necessary, restart your PC and re-access the MP-1xx via the Embedded Web Server with its new assigned IP address.

4.1.2 Assigning an IP Address Using BootP



Note: BootP procedure can also be performed using any standard compatible BootP server.



Tip: You can also use BootP to load the auxiliary files to the MP-1xx (refer to Section 5.11.2.1 on page 138).

➤ To assign an IP address using BootP, take these 3 steps:

1. Open the BootP application (supplied with the MP-1xx software package).
2. Add client configuration for the MP-1xx, refer to Section B.11.1 on page 203.
3. Reset the gateway *physically* causing it to use BootP; the MP-1xx changes its network parameters to the values provided by the BootP.

4.2 Restoring Networking Parameters to their Initial State

You can use the 'Reset' button to restore the MP-1xx networking parameters to their factory default values (described in [Table 4-1](#)) and to reset the username and password.

Note that the MP-1xx returns to the software version burned in flash. This process also restores the MP-1xx parameters to their factory settings, therefore you must load your previously backed-up *ini* file, or the default *ini* file (received with the software kit) to set them to their correct values.

➤ To restore networking parameters to their initial state, take these 6 steps:

1. Disconnect the MP-1xx from the power and network cables.

2. Reconnect the power cable; the gateway is powered up. After approximately 45 seconds the Ready LED turns to green and the Control LED blinks for about 3 seconds.
3. While the Control LED is blinking, press shortly on the reset button (located on the left side of the front panel); the gateway resets a second time and is restored with factory default parameters (username: "Admin", password: "Admin").
4. Reconnect the network cable.
5. Assigning the MP-1xx IP address (refer to Section 4.1 on page 35).
6. Load your previously backed-up *ini* file, or the default *ini* file (received with the software kit). To load the *ini* file via the Embedded Web Server, refer to Section 5.9.2.1 on page 120.

4.3 Configure the MP-1xx Basic Parameters

To configure the MP-1xx *basic* parameters use the Embedded Web Server's 'Quick Setup' screen (shown in Figure 4-1 below). Refer to Section 5.5 on page 40 for information on accessing the 'Quick Setup' screen.

Figure 4-1: Quick Setup Screen

Quick Setup	
IP Configuration	
IP Address	10.13.77.7
NAT IP Address	0.0.0.0
Subnet Mask	255.255.0.0
Default Gateway IP Address	10.13.0.1
SIP Parameters	
Gateway Name	
Working with Proxy	No
Proxy IP Address	10.13.8.10
Proxy Name	10.13.8.10
Enable Registration	No
Coder Name (msec)	
☒ 1st Coder	g711Ulaw64k 20
Tables	
Tel to IP Routing Table	-->
Endpoint Phone Number Table	-->

➤ To configure basic SIP parameters, take these 9 steps:

1. If the MP-1xx is behind a router with Network Address Translation (NAT) enabled, perform the following procedure. If it isn't, leave the 'NAT IP Address' field undefined.
 - Determine the "public" IP address assigned to the router (by using, for instance, router Web management). Enter this public IP address in the 'NAT IP Address' field.
 - Enable the DMZ (Demilitarized Zone) configuration on the residential router for the LAN port where the MP-1xx gateway is connected. This enables unknown packets to be routed to the DMZ port.

2. Under 'SIP Parameters', enter the MP-1xx Domain Name in the field 'Gateway Name'. If the field is not specified, the MP-1xx IP address is used instead (default).
3. When working with a Proxy server, set 'Working with Proxy' field to 'Yes' and enter the IP address of the primary Proxy server in the field 'Proxy IP Address'. When no Proxy is used, the internal routing table is used to route the calls.
4. Enter the Proxy Name in the field 'Proxy Name'. If Proxy name is used, it replaces the Proxy IP address in all SIP messages. This means that messages are still sent to the physical Proxy IP address but the SIP URI contains the Proxy name instead.
5. Configure 'Enable Registration' to 'Yes' or 'No':
'No' = the MP-1xx does not register to a Proxy server/Registrar (default).
'Yes' = the MP-1xx registers to a Proxy server/Registrar at power up and every 'Registration Time' seconds; The MP-1xx sends a register request according to the 'Authentication Mode' parameter. For detailed information on the parameters 'Registration Time' and 'Authentication Mode', refer to [Table 5-2](#) on page 49.
6. Select the coder (i.e., vocoder) that best suits your VoIP system requirements. The default coder is: G.7231 30 msec. To program the entire list of coders you want the MP-1xx to use, click the button on the left side of the '1st Coder' field; the drop-down list for the 2nd to 5th coders appears. Select coders according to your system requirements. Note that coders higher on the list are preferred and take precedence over coders lower on the list.



Note: The preferred coder is the coder that the MP-1xx uses as a first choice for all connections. If the far end gateway does not use this coder, the MP-1xx negotiates with the far end gateway to select a coder that both sides can use.

7. To program the Tel to IP Routing Table, press the arrow button next to 'Tel to IP Routing Table'. For information on how to configure the Tel to IP Routing Table, refer to [Section 5.8.4.2](#) on page 75.
8. To program the Endpoint Phone Number Table, press the arrow button next to 'Endpoint Phone Number'. For information on how to configure the Endpoint Phone Number Table, refer to [Section 5.8.6](#) on page 89.
9. Click the **Reset** button and click **OK** in the prompt; The MP-1xx applies the changes and restarts. This takes approximately 1 minute to complete. When the MP-1xx has finished restarting, the Ready and LAN LEDs on the front panel are lit green.

You are now ready to start using the VoIP gateway. To prevent unauthorized access to the MP-1xx, it is recommended that you change the username and password that are used to access the Web Interface. Refer to [Section 5.9.5](#) on page 123 for details on how to change the username and password.



Tip: Once the gateway is configured correctly back up your settings by making a copy of the VoIP gateway configuration (*ini* file) and store it in a directory on your computer. This saved file can be used to restore configuration settings at a future time. For information on backing up and restoring the gateway's configuration refer to [Section 5.9.2.1](#) on page 120.

5 Configuring the MP-1xx

5.1 Configuration Concepts

Users can utilize the the MP-1xx in a wide variety of applications, enabled by its parameters and configuration files (e.g., Call Progress Tones (CPT), etc.). The parameters can be configured and configuration files can be loaded using:

- A standard Web Browser (described and explained in this section).
- A configuration file referred to as the *ini* file. For information on how to use the *ini* file refer to Section 6 on page 141.
- An SNMP browser software (refer to Section 11 on page 179).
- AudioCodes' Element Management System (EMS) (refer to Section 11.8 on page 190 and to AudioCodes' EMS User's Manual or EMS Product Description).

To upgrade the MP-1xx (load new software or configuration files onto the gateway) use the Software Upgrade wizard, available through the Web Interface (refer to Section 5.11.1 on page 131), or alternatively use the BootP/TFTP configuration utility (refer to Section 10.3.1 on page 176).

For information on the configuration files refer to Section 6 on page 141.

5.2 Overview of the Embedded Web Server

The Embedded Web Server is used both for gateway configuration, including loading of configuration files, and for run-time monitoring. The Embedded Web Server can be accessed from a standard Web browser, such as Microsoft™ Internet Explorer, Netscape™ Navigator, etc. Specifically, Users can employ this facility to set up the gateway configuration parameters. Users also have the option to remotely reset the gateway and to permanently apply the new set of parameters.

5.3 Computer Requirements

To use the Web Interface, the following is needed:

- A computer capable of running your Web browser.
- A network connection to the VoIP gateway.
- One of the following compatible Web browsers:
 - Microsoft™ Internet Explorer™ (version 6.0 and higher).
 - Netscape™ Navigator™ (version 7.0 and higher).



Note: Some Java-script applications are not supported in Netscape.

5.4 Password Control

The Embedded Web Server is protected by a unique username and password combination. The first time a browser request is made, the User is requested to provide his username and password to obtain access. Subsequent requests are negotiated by the browser on behalf of the User, so that the User doesn't have to re-enter the username and password for each request, but the request is still authenticated (the Embedded Web Server uses the MD5 authentication method supported by the HTTP 1.1 protocol).

An additional level of protection is obtained by a restriction that no more than three IP addresses can access the Embedded Web Server concurrently. With this approach, a fourth User is told that the server is busy, even if the correct username and password were provided.

5.4.1 Embedded Web Server Username & Password

The default username and password for all gateways are:

- Username = "Admin" (case-sensitive)
- Password = "Admin" (case-sensitive)

For details on changing the username and password, refer to Section 5.9.5 on page 123. Note that the password and username can be a maximum of 7 case-sensitive characters.

The User can reset the Web username and password (to the default values) by enabling an *ini* file parameter called 'ResetWebPassword'. The Web password is automatically the default password.

5.5 Configuring the Web Interface via the *ini* File

Two additional security preferences can be configured using *ini* file parameters. These security levels provide protection against unauthorized access (such as Internet hacker attacks), particularly to Users without a firewall. For information on the *ini* file refer to Section 6 on page 141.

5.5.1 Limiting the Embedded Web Server to Read-Only Mode

Users can limit the Web Interface to read-only mode by changing the *ini* file parameter 'DisableWebConfig' to 1. In this mode all Web screens are read-only and cannot be modified. In addition, the following screens cannot be accessed: 'Quick Setup', 'Change Password', 'Reset', 'Save Configuration', 'Software Upgrade Wizard', 'Load Auxiliary Files', 'Configuration File' and 'Regional Settings'.

5.5.2 Disabling the Embedded Web Server


To deny access to the gateway through HTTP protocol, the User can disable the Embedded Web Server task. To disable the Web task, use the *ini* file parameter 'DisableWebTask = 1'. The default is to Web task enabled.

5.6 Accessing the Embedded Web Server

➤ **To access the Embedded Web Server, take these 4 steps:**

1. Open a standard Web-browsing application such as Microsoft™ Internet Explorer™ (Version 6.0 and higher) or Netscape™ Navigator™ (Version 7.0 and higher).
2. In the Uniform Resource Locator (URL) field, specify the IP address of the MP-1xx (e.g., http://10.1.10.10); the Embedded Web Server's 'Enter Network Password' screen appears, shown in Figure 5-1.


Figure 5-1: Embedded Web Server Login Screen

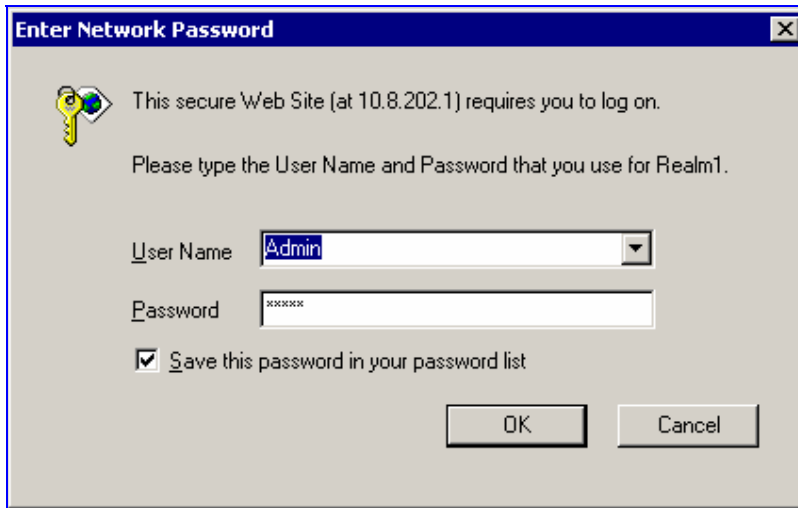

3. In the 'User Name' and 'Password' fields, enter the username (default: "Admin") and password (default: "Admin"). Note that the username and password are case-sensitive.
4. Click the **OK** button; the 'Quick Setup' screen is accessed (shown in Figure 4-1).

5.6.1 Using Internet Explorer to Access the Embedded Web Server

Internet explorer's security settings may block access to the gateway's Web browser if they're configured incorrectly. In this case, the following message is displayed:

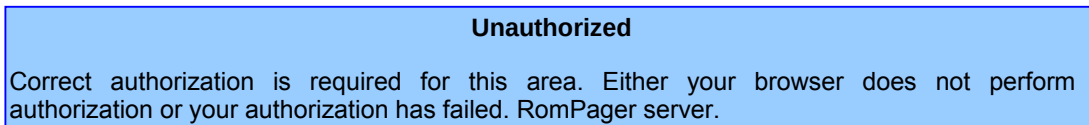


➤ **To troubleshoot blocked access to Internet Explorer™, take these 2 steps**

1. Delete all cookies from the Temporary Internet files. If this does not clear up the problem, the security settings may need to be altered (refer to Step 2).
2. In Internet Explorer, Tools, Internet Options select the Security tab, and then select Custom Level. Scroll down until the Logon options are displayed and change the setting to Prompt for username and password and then restart the browser. This fixes any issues related to domain use logon policy.

5.7 Getting Acquainted with the Web Interface

Figure 5-2 shows the general layout of the Web Interface screen.

Figure 5-2: MP-1xx Web Interface

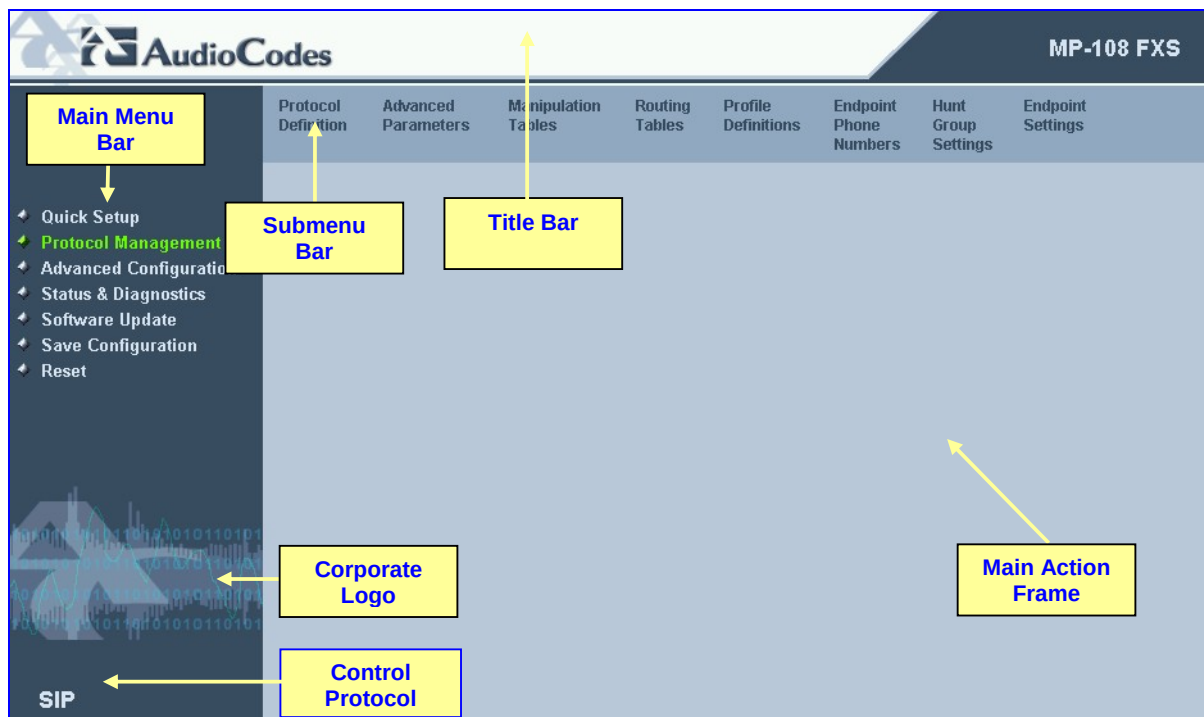

The Web Interface screen features the following components:

- **Title bar** - contains three configurable elements: corporate logo, a background image and the product's name. For information on how to modify these elements refer to [Appendix E](#) on page 213.
- **Main menu bar** - always appears on the left of every screen to quickly access parameters, submenus, submenu options, functions and operations.
- **Submenu bar** - appears on the top of screens and contains submenu options.
- **Main action frame** - the main area of the screen in which information is viewed and configured.
- **Corporate logo** – AudioCodes' corporate logo. For information on how to remove this logo [Appendix E](#) on page 213.
- **Control Protocol** – the MP-1xx control protocol.

5.7.1 Main Menu Bar

The main menu bar of the Web Interface is divided into the following 7 menus:

- **Quick Setup** – Use this menu to configure the gateway's basic settings; for the full list of configurable parameters go directly to 'Protocol Management' and 'Advanced Configuration' menus. An example of the Quick Setup configuration is described in Section 4.2 on page 36.
- **Protocol Management** – Use this subdivided menu to configure the gateway's control protocol parameters and tables (refer to Section 5.8 on page 44).

- **Advanced Configuration** – Use this subdivided menu to set the gateway's advanced configuration parameters (for advanced users only) (refer to Section 5.9 on page 103).
- **Status & Diagnostics** – Use this subdivided menu to view and monitor the gateway's channels, Syslog messages, hardware / software product information, and to assess the gateway's statistics and IP connectivity information (refer to Section 5.10 on page 124).
- **Software Update** – Use this subdivided menu when you want to load new software or configuration files onto the gateway (refer to Section 5.11 on page 131).
- **Save Configuration** – Use this menu to save configuration changes to the non-volatile flash memory (refer to Section 5.12 on page 139).
- **Reset** – Use this menu to remotely reset the gateway. Note that you can choose to save the gateway configuration to flash memory before reset (refer to Section 5.12 on page 139).

When positioning your cursor over a parameter name (or a table) for more than 1 second, a short description of this parameter is displayed. Note that those parameters that are preceded with an exclamation mark (!) are *Not* changeable on-the-fly and require reset.

5.7.2 Saving Changes

To save changes to the volatile memory (RAM) press the **Submit** button (changes to parameters with on-the-fly capabilities are immediately available, other parameter are updated only after a gateway reset). Parameters that are only saved to the volatile memory revert to their previous settings after hardware reset. When performing a software reset (i.e., via Web or SNMP) you can choose to save the changes to the non-volatile memory. To save changes so they are available after a power fail, you must save the changes to the non-volatile memory (flash). When **Save Configuration** is performed, all parameters are saved to the flash memory.

➤ **To save the changes to flash, take these 2 steps:**

1. Click the **Save Configuration** button; the 'Save Configuration to Flash Memory' screen appears.
2. Click the **Save Configuration** button in the middle of the screen; a confirmation message appears when the save is complete.

Note: When you reset the MP-1xx from the Web Interface, you can choose to save the configuration to flash memory.

5.7.3 Entering Phone Numbers in Various Tables

Phone numbers entered into various tables on the gateway, such as the Tel to IP routing table, must be entered without any formatting characters. For example, if you wish to enter the phone number 555-1212, it must be entered as 5551212 without the hyphen (-). If the hyphen is entered, the entry does not work. The hyphen character is used in number entry only, as part of a range definition. For example, the entry [20-29] means "all numbers in the range 20 to 29".

5.8 Protocol Management

Use this subdivided menu to configure the gateway's SIP parameters and tables.



Note: Those parameters contained within square brackets are the names used to configure the parameters via the *ini* file.

5.8.1 Protocol Definition Parameters

Use this submenu to configure the gateway's specific SIP protocol parameters.

5.8.1.1 General Parameters

Use this screen to configure general SIP parameters.

➤ **To configure the general parameters under Protocol Definition, take these 4 steps:**

1. Open the 'General Parameters' screen (**Protocol Management** menu > **Protocol Definition** submenu > **General Parameters** option); the 'General Parameters' screen is displayed.

Figure 5-3: Protocol Definition, General Parameters Screen

General	
PRACK Mode	Disable
Channel Select Mode	By Phone Number
Enable Early Media	Disable
Session-Expires Time	0
Minimum Session-Expires	90
Asserted Identity Mode	Disabled
Enable T.38 Fax Relay	Disable
! Detect Fax on Answer Tone	Initiate T.38 on Preamble
! SIP Local Port	5060
SIP Destination Port	5060
Use "user=phone" in SIP URL	Yes
Use "user=phone" in From Header	No
Tel to IP No Answer Timeout	180
Add Number Plan and Type to Remote Party ID Header	Yes
Use Source Number as Display Name	No
Play Ringback Tone to IP	Don't Play
Play Ringback Tone to Tel	Play According to Early Me
Retransmission Parameters	
! SIP T1 Retransmission timer [msec]	500
! SIP T2 Retransmission timer [msec]	4000
SIP Maximum RTX	7

2. Configure the general parameters under Protocol Definition according to [Table 5-1](#).
3. Click the **Submit** button to save your changes.
4. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-1: Protocol Definition, General Parameters (continues on pages 45 to 47)

Parameter	Description
PRACK Mode [PRACKMode]	PRACK mechanism mode for 1XX reliable responses: Disable [0]. Supported [1] (default). Required [2]. Note 1: The Supported and Required headers contain the "100rel" parameter. Note 2: MP-1xx sends PRACK message if 180/183 response is received with "100rel" in the Supported or the Required headers.
Channel Select Mode [ChannelSelectMode]	Port allocation algorithm for IP to Tel calls. You can select one of the following methods: - By phone number [0] = Select the gateway port according to the called number (called number is defined in the 'Endpoint Phone Number' table). - Cyclic Ascending [1] = Select the next available channel in an ascending cycle order. Always select the next higher channel number in the hunt group. When the gateway reaches the highest channel number in the hunt group, it selects the lowest channel number in the hunt group and then starts ascending again. - Ascending [2] = Select the lowest available channel. Always start at the lowest channel number in the hunt group and if that channel is not available, select the next higher channel. - Cyclic Descending [3] = Select the next available channel in descending cycle order. Always select the next lower channel number in the hunt group. When the gateway reaches the lowest channel number in the hunt group, it selects the highest channel number in the hunt group and then starts descending again. - Descending [4] = Select the highest available channel. Always start at the highest channel number in the hunt group and if that channel is not available, select the next lower channel. - Number + Cyclic Ascending [5] = First select the gateway port according to the called number (called number is defined in the 'Endpoint Phone Number' table). If the called number isn't found, then select the next available channel in ascending cyclic order. Note that if the called number is found, but the port associated with this number is busy, the call is released. The default method is 'By Phone Number'.
Enable Early Media [EnableEarlyMedia]	No [0] = Early Media is disabled (default). Yes [1] = Enable Early Media. If enabled, the gateway sends 183 Session Progress response with SDP (instead of 180 Ringing), allowing the media stream to be set up prior to the answering of the call. Note that to send 183 response you must also set the parameter 'ProgressIndicator2IP' to 1. If it is equal to 0, 180 Ringing response is sent. Note: Generally, this parameter is set to 1.
Session-Expires Time [SIPSessionExpires]	Determines the timeout (in seconds) for keeping a "re-INVITE" message alive within a SIP session. The SIP session is refreshed (using INVITE) each time this timer expires. The default is 0 (not activated).
Minimum Session-Expires [MINSE]	Defines the time (in seconds) that is used in the Min-SE header field. This field defines the minimum time that the user agent supports for session refresh. The valid range is 10 to 100000. The default value is 90.

Table 5-1: Protocol Definition, General Parameters (continues on pages 45 to 47)

Parameter	Description
Asserted Identity Mode [AssertedIdMode]	Disable [0] = None (default). Adding PAsserted Identity [1]. Adding PPreferred Identity [2]. The Asserted ID mode defines the header that is used in the generated INVITE request. The header also depends on the calling Privacy: allowed or restricted. The P-asserted (or P-preferred) headers are used to present the originating party's Caller ID. The Caller ID is composed of a Calling Number and (optionally) a Calling Name. P-asserted (or P-preferred) headers are used together with the Privacy header. If Caller ID is restricted the "Privacy: id" is included. Otherwise for allowed Caller ID the "Privacy: none" is used. If Caller ID is restricted (received from Tel or configured in the gateway), the From header is set to <anonymous@anonymous.invalid>.
Enable T.38 Fax Relay [IsFaxUsed]	Determines the SIP signaling method used to establish and convey a fax session after a fax is detected. No Fax [0] = No fax negotiation using SIP signaling (default). T.38 Relay [1] = Initiates T.38 fax relay. G.711 Transport [2] = Initiates fax using the coder G.711 A-law/μ-law (if not previously selected) with adaptations (refer to note 1). Note 1: Fax adaptations: Echo Cancellation = On Silence Compression = Off Echo Cancellation Non-Linear Processor Mode = Off Dynamic Jitter Buffer Minimum Delay = 40 Dynamic Jitter Buffer Optimization Factor = 13 Note 2: If the gateway initiates a fax session using G.711 (option 2), a 'gpmid' attribute is added to the SDP in the following format: For A-law: 'a=gpmid:0 vbd=yes;ecan=on'. For μ-law: 'a=gpmid:8 vbd=yes;ecan=on'. Note 3: When 'IsFaxUsed' is set to 1 or 2, the parameter 'FaxTransportMode' is ignored.
Detect Fax on Answer Tone [DetFaxOnAnswerTone]	Initiate T.38 on Preamble [0] = Terminating fax gateway initiates T.38 session on receiving of HDLC preamble signal from fax (default) Initiate T.38 on CED [1] = Terminating fax gateway initiates T.38 session on receiving of CED answer tone from fax. Note: This parameters is applicable only if 'IsFaxUsed = 1'.
SIP Local Port [LocalSIPPort]	Local UDP port used to receive SIP messages. The default value is 5060.
SIP Destination Port [SIPDestinationPort]	SIP UDP destination port for sending SIP messages. The default value is 5060.
Use "user=phone" in SIP URL [IsUserPhone]	No [0] = "user=phone" string isn't used in SIP URL. Yes [1] = "user=phone" string is part of the SIP URL (default).
Use "user=phone" in From header [IsUserPhoneInFrom]	No [0] = Doesn't use ";user=phone" string in From header (default). Yes [1] = ";user=phone" string is part of the From header.
Tel to IP No Answer Timeout [IPAlertTimeout]	Defines the time (in seconds) the gateway waits for a 200 OK response from the called party (IP side) after sending an Invite message. If the timer expires, the call is released. The valid range is 0 to 3600. The default value is 180.
Add Number Plan and Type to Remote Party ID Header [AddTON2RPI]	No [0] = TON/PLAN parameters aren't included in the RPID header. Yes [1] = TON/PLAN parameters are included in the RPID header (default). If RPID header is enabled (EnableRPIHeader = 1) and 'AddTON2RPI=1', it is possible to configure the calling and called number type and number plan using the Number Manipulation tables for Tel→IP calls.
Use Source Number as Display Name [UseSourceNumberAsDisplayName]	No [0] = Interworks the Tel calling name to SIP Display Name (default). Yes [1] = Set Display Name to Calling Number if not configured. Applicable to Tel→IP calls. If enabled and calling party name is not defined (CallerDisplayInfoX = <name> is not specified per gateway's x port), the calling number is used instead.

Table 5-1: Protocol Definition, General Parameters (continues on pages 45 to 47)

Parameter	Description
Play Ringback Tone to IP [PlayRBTone2IP]	Don't Play [0] = Ringback tone isn't played to the IP side of the call (default). Play [1] = Ringback tone is played to the IP side of the call after SIP 183 session progress response is sent. Note 1: To enable the gateway to send a 183 response, set 'EnableEarlyMedia' to 1. Note 2: If 'EnableDigitDelivery = 1', the gateway doesn't play a Ringback tone to IP and doesn't send a 183 response.
Play Ringback Tone to Tel [PlayRBTone2Tel]	Don't Play [0] = Ringback Tone isn't played. Always Play [1] = Ringback Tone is played to the Tel side of the call when 180/183 response is received. Play According to PI [3] = N/A. Play According to 180/183 [2] = Ringback Tone is played to the Tel side of the call if no SDP is received in 180/183 responses. If 180/183 with SDP message is received, the gateway cuts through the voice channel and doesn't play Ringback tone (default).
Retransmission Parameters	
SIP T1 Retransmission Timer [msec] [SipT1Rtx]	The time interval (in msec) between the first transmission of a SIP message and the first retransmission of the same message. The default is 500. Note: The time interval between subsequent retransmissions of the same SIP message starts with SipT1Rtx and is multiplied by two until SipT2Rtx. For example (assuming that SipT1Rtx = 500 and SipT2Rtx = 4000): The first retransmission is sent after 500 msec. The second retransmission is sent after 1000 (2*500) msec. The third retransmission is sent after 2000 (2*1000) msec. The fourth retransmission and subsequent retransmissions until SIPMaxRtx are sent after 4000 (2*2000) msec.
SIP T2 Retransmission Timer [msec] [SipT2Rtx]	The maximum interval (in msec) between retransmissions of SIP messages. The default is 4000. Note: The time interval between subsequent retransmissions of the same SIP message starts with SipT1Rtx and is multiplied by two until SipT2Rtx.
SIP Maximum Rtx [SIPMaxRtx]	Number of UDP retransmissions of SIP messages. The range is 1 to 7. The default value is 7.

5.8.1.2 Proxy & Registration Parameters

Use this screen to configure parameters that are associated with Proxy and Registration.

➤ **To configure the Proxy & Registration parameters, take these 4 steps:**

1. Open the 'Proxy & Registration' parameters screen (**Protocol Management** menu > **Protocol Definition** submenu > **Proxy & Registration** option); the 'Proxy & Registration' parameters screen is displayed.

Figure 5-4: Proxy & Registration Parameters Screen

Proxy & Registration	
I Enable Proxy	Don't Use Proxy ▾
Proxy Name	10.8.8.10
I Proxy IP Address	10.8.8.10
Gateway Name	10.8.8.10
Gateway Registration Name	
First Redundant Proxy IP Address	0.0.0.0
Second Redundant Proxy IP Address	0.0.0.0
Third Redundant Proxy IP Address	0.0.0.0
Enable Proxy SRV Queries	Disable ▾
Redundancy Mode	Parking ▾
Is Proxy Trusted	Yes ▾
I Enable Registration	Disable ▾
Registrar Name	
Registrar IP Address	
Registration Time	180
Re-registration Timing [%]	50
Registration Retry Time	30
I Enable Proxy Keep Alive	Disable ▾
Proxy Keep Alive Time	60
Use Gateway Name for OPTIONS	No ▾
Enable Fallback to Routing Table	Enable ▾
Prefer Routing Table	No ▾
Use Routing Table for Host Names and Profiles	Disable ▾
Always Use Proxy	Disable ▾
Send All Invite to Proxy	No ▾
Enable Proxy Hot-Swap	Disable ▾
Number of RTX Before Hot-Swap	3
User Name	35073159
Password	***
Cnonce	0a123bcf
I Authentication Mode	Per Endpoint ▾

2. Configure the Proxy & Registration parameters according to [Table 5-2](#).
3. Click the **Submit** button to save your changes, or click the **Register** or **Un-Register** buttons to save your changes and to register / unregister to a Proxy / Registrar.
4. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-2: Proxy & Registration Parameters (continues on pages 49 to 52)

Parameter	Description
Enable Proxy [IsProxyUsed]	Don't Use Proxy [0] = Proxy isn't used, the internal routing table is used instead (default). Use Proxy [1] = Proxy is used. If you are using a Proxy server, enter the IP address of the primary Proxy server in the Proxy IP address field. If you are not using a Proxy server, you must configure the Tel to IP Routing table on the gateway (described in Section 5.8.4.2 on page 75).
Proxy Name [ProxyName]	Defines the Home Proxy Domain Name. If specified, the Proxy Name is used as Request-URI in REGISTER, INVITE and other SIP messages. If not specified, the Proxy IP address is used instead.
Proxy IP Address [ProxyIP]	IP address (and optionally port number) of the primary Proxy server you are using. Enter the IP address as FQDN or in dotted format notation (for example 201.10.8.1). You can also specify the selected port in the format: <IP Address>:<port>. This parameter is applicable only if you select 'Yes' in the 'Is Proxy Used' field. If you enable Proxy Redundancy (by setting EnableProxyKeepAlive=1), the gateway can work with up to three Proxy servers. If there is no response from the primary Proxy, the gateway tries to communicate with the redundant Proxies. When a redundant Proxy is found, the gateway either continues working with it until the next failure occurs or reverts to the primary Proxy (refer to the 'Redundancy Mode' parameter). If none of the Proxy servers respond, the gateway goes over the list again. The gateway also provides real time switching (hotswap mode), between the primary and redundant proxies ('IsProxyHotSwap=1'). If the first Proxy doesn't respond to Invite message, the same Invite message is immediately sent to the second Proxy. Note 1: If 'EnableProxyKeepAlive=1', the gateway monitors the connection with the Proxies by using keep-alive messages ("OPTIONS"). Note 2: To use Proxy Redundancy, you must specify one or more redundant Proxies using multiple 'ProxyIP= <IP address>' definitions. Note 3: When port number is specified (e.g., domain.com:5080), DNS SRV queries aren't performed, even if 'EnableProxySRVQuery' is set to 1.
Gateway Name [SIPGatewayName]	Use this parameter to assign a name to the device (For example: 'gateway1.com'). Ensure that the name you choose is the one that the Proxy is configured with to identify your media gateway. Note: If specified, the gateway Name is used as the host part of the SIP URL, in both 'To' and 'From' headers. If not specified, the gateway IP address is used instead (default).
Gateway Registration Name [GWRegistrationName]	Defines the user name that is used in From and To headers of Register messages. Applicable only to single registration per gateway ('AuthenticationMode = 1'). If 'GWRegistrationName' isn't specified (default), the 'Username' parameter is used instead. Note: If "AuthenticationMode=0", all the gateway's endpoints are registered with a user name that equals to the endpoint's phone number.
First Redundant Proxy IP Address [ProxyIP]	IP addresses of the first redundant Proxy you are using. Enter the IP address as FQDN or in dotted format notation (for example 192.10.1.255). You can also specify the selected port in the format: <IP Address>:<port>. Note 1: This parameter is available only if you select "Yes" in the 'Enable Proxy' field. Note 2: When port number is specified, DNS SRV queries aren't performed, even if 'EnableProxySRVQuery' is set to 1. ini file note: The IP address of the first redundant Proxy is defined by the second repetition of the <i>ini</i> file parameter 'ProxyIP'.

Table 5-2: Proxy & Registration Parameters (continues on pages 49 to 52)

Parameter	Description
Second Redundant Proxy IP Address [ProxyIP]	IP addresses of the second redundant Proxy you are using. Enter the IP address as FQDN or in dotted format notation (for example 192.10.1.255). You can also specify the selected port in the format: <IP Address>:<port>. Note 1: This parameter is available only if you select “Yes” in the ‘Enable Proxy’ field. Note 2: When port number is specified, DNS SRV queries aren’t performed, even if ‘EnableProxySRVQuery’ is set to 1. ini file note: The IP address of the second redundant Proxy is defined by the third repetition of the <i>ini</i> file parameter ‘ProxyIP’.
Third Redundant Proxy IP Address [ProxyIP]	IP addresses of the third redundant Proxy you are using. Enter the IP address as FQDN or in dotted format notation (for example 192.10.1.255). You can also specify the selected port in the format: <IP Address>:<port>. Note 1: This parameter is available only if you select “Yes” in the ‘Enable Proxy’ field. Note 2: When port number is specified, DNS SRV queries aren’t performed, even if ‘EnableProxySRVQuery’ is set to 1. ini file note: The IP addresses of the third redundant Proxy is defined by the forth repetition of the <i>ini</i> file parameter ‘ProxyIP’.
Enable Proxy SRV Queries [EnableProxySRVQuery]	Enables the use of DNS Service Record (SRV) queries to discover Proxy servers. Disable [0] = Disabled (default). Enable [1] = Enabled. If enabled and the Proxy IP address parameter contains a domain name without port definition (e.g., ProxyIP = domain.com), an SRV query is performed. The SRV query returns up to four Proxy host names and their weights. The gateway then performs DNS A-record queries for each Proxy host name (according to the received weights) to locate up to four Proxy IP addresses. Therefore, if the first SRV query returns two domain names, and the A-record queries return 2 IP addresses each, no more searches are performed. If the Proxy IP address parameter contains a domain name with port definition (e.g., ProxyIP = domain.com:5080), the gateway performs a regular DNS A-record query. Note: This mechanism is applicable only if ‘EnableProxyKeepAlive = 1’.
Redundancy Mode [ProxyRedundancyMode]	Parking [0] = Gateway continues working with the last active Proxy until the next failure (default). Homing [1] = Gateway always tries to work with the primary Proxy server (switches back to the main Proxy whenever it is available). Note: To use Redundancy Mode, enable Keep-alive with Proxy option (Enable Proxy Keep Alive = Yes).
Is Proxy Trusted [IsTrustedProxy]	This parameter isn’t applicable and must always be set to ‘Yes’ [1]. The parameter ‘AssertedIdMode’ should be used instead.
Enable Registration [IsRegisterNeeded]	No [0] = Gateway doesn’t register to Proxy / Registrar (default). Yes [1] = Gateway registers to Proxy / Registrar when the device is powered up and every Registration Time seconds. Note: The gateway sends a register request for each channel or for the entire gateway (according to the Authentication Mode parameter).
Registrar Name [RegistrarName]	Registrar Domain Name. If specified, the name is used as Request-URI in Register messages. If isn’t specified (default), the Registrar IP address or Proxy name or Proxy IP address is used instead.
Registrar IP Address [RegistrarIP]	IP address of Registrar server (optional). Enter the IP address in dotted format notation, for example 201.10.8.1. Note: If not specified, the Register request is sent to the primary Proxy server (refer to ‘Proxy IP address’ parameter).
Registration Time [RegistrationTime]	Time (in seconds) for which registration to a Proxy server is valid. The value is used in the “Expires = ” header. Typically a value of 3600 is assigned, for one hour registration. The gateway resumes registration when half the defined timeout period expires. The default is 3600 seconds.

Table 5-2: Proxy & Registration Parameters (continues on pages 49 to 52)

Parameter	Description
Re-registration Timing (%) [RegistrationTimeDivider]	Defines the re-registration timing (in percentage). The timing is a percentage of the re-register timing set by the Registration server. The valid range is 50 to 100. The default value is 50. For example: If 'RegistrationTimeDivider = 70' (%) and Registration Expires time = 3600, the gateway resends its registration request after $3600 \times 70\% = 2520$ sec.
Registration Retry Time [RegistrationRetryTime]	Defines the time period (in seconds) after which a Registration request is resent if registration fails with 4xx, or there is no response from the Proxy/Registrar. The default is 30 seconds. The range is 10 to 3600.
Enable Proxy Keep Alive [EnableProxyKeepAlive]	No [0] = Disable (default). Yes [1] = Keep alive with Proxy is enabled. If enabled, 'OPTIONS' SIP message is sent every 'Proxy Keep-Alive Time'. Note: This parameter must be enabled when Proxy redundancy is used.
Proxy Keep Alive Time [ProxyKeepAliveTime]	Defines the Proxy keep-alive time interval (in seconds) between OPTIONS messages. The default value is 60 seconds.
Use Gateway Name for OPTIONS [UseGatewayNameForOptions]	No [0] = Use the gateway's IP address in keep-alive OPTIONS messages (default). Yes [1] = Use 'GatewayName' in keep-alive OPTIONS messages. The OPTIONS Request-URI host part contains either the gateway's IP address or a string defined by the parameter 'Gatewayname'. The gateway uses the OPTIONS request as a keep-alive message to its primary and redundant Proxies.
Enable Fallback to Routing Table [IsFallbackUsed]	No [0] = Gateway fallback is not used (default). Yes [1] = Internal Tel to IP Routing table is used when Proxy servers are not available. When the gateway falls back to the internal Tel to IP Routing table, the gateway continues scanning for a Proxy. When the gateway finds an active Proxy, it switches from internal routing back to Proxy routing. Note: To enable the redundant Proxies mechanism set 'EnableProxyKeepAlive' to 1.
PreferRouteTable [Prefer Routing Table]	Determines if the local Tel to IP routing table takes precedence over a Proxy for routing calls. No [0] = Only Proxy is used to route calls (default). Yes [1] = The Proxy checks the 'Destination IP Address' field in the 'Tel to IP Routing' table for a match with the outgoing call. Only if a match is not found, a Proxy is used. Note: Applicable only if Proxy is not always used ('AlwaysSendToProxy' = 0, 'SendInviteToProxy' = 0).
Use Routing Table for Host Names and Profiles [AlwaysUseRouteTable]	Use the internal Tel to IP routing table to obtain the URL Host name and (optionally) an IP profile (per call), even if Proxy server is used. No [0] = Don't use (default). Yes [1] = Use. Note: This Domain name is used, instead of Proxy name or Proxy IP address, in the INVITE SIP URL.
Always Use Proxy [AlwaysSendToProxy]	No [0] = Use standard SIP routing rules (default). Yes [1] = All SIP messages and Responses are sent to Proxy server. Note: Applicable only if Proxy server is used.
Send All Invite to Proxy [SendInviteToProxy]	No [0] = Invite messages, generated as a result of Transfer or Redirect, are sent directly to the URL (according to the refer-to header in the REFER message or contact header in 30x response) (default). Yes [1] = All Invite messages, including those generated as a result of Transfer or Redirect are sent to Proxy. Note: Applicable only if Proxy server is used and "AlwaysSendtoProxy=0".
Enable Proxy Hot-Swap [IsProxyHotSwap]	Enable Proxy Hot-Swap redundancy mode. No [0] = Disabled (default). Yes [1] = Enabled. If Hot Swap is enabled, SIP Invite message is first sent to the primary Proxy server. If there is no response from the primary Proxy server for 'Number of RTX before Hot-Swap' retransmissions, the Invite message is resent to the redundant Proxy server.

Table 5-2: Proxy & Registration Parameters (continues on pages 49 to 52)

Parameter	Description
Number of RTX Before Hot-Swap [ProxyHotSwapRtx]	Number of retransmitted Invite messages before call is routed (hot swapped) to another Proxy. The range is 1-30. The default is 3. Note: This parameter is also used for alternative routing using the Tel to IP Routing table. If a domain name in the routing table is resolved into 2 IP addresses, and if there is no response for 'ProxyHotSwapRtx' retransmissions to the Invite message that is sent to the first IP address, the gateway immediately initiates a call to the second IP address.
User Name [UserName] Note: The Authentication table can be used instead.	Username used for Registration and for BASIC/DIGEST authentication process with Proxy. Parameter doesn't have a default value (empty string). Note: Applicable only if single gateway registration is used ('Authentication Mode = Authentication Per gateway').
Password [Password]	Password used for BASIC/DIGEST authentication process with Proxy. Single password is used for all gateway ports. The default is "Default_Passwd". Note: The Authentication table can be used instead.
Cnonce [Cnonce]	String used by the server and client to provide mutual authentication. (Free format i.e., "Cnonce = 0a4f113b"). The default is "Default_Cnonce".
Authentication Mode [AuthenticationMode]	Per Endpoint [0] = Registration & Authentication separately for each endpoint (default). Per gateway [1] = Single Registration & Authentication for the gateway. Per Ch. Select Mode [2] = N/A. Usually Authentication on a per endpoint basis is used for FXS gateways, in which each endpoint registers (and authenticates) separately with its own username and password. Single Registration and Authentication (Authentication Mode=1) is usually defined for FXO gateways.

5.8.1.3 Coders

From the Coders screen you can configure the first to fifth preferred coders (and their corresponding ptimes) for the gateway. The first coder is the highest priority coder and is used by the gateway whenever possible. If the far end gateway cannot use the coder assigned as the first coder, the gateway attempts to use the next coder and so forth.

➤ **To configure the Gateway's coders, take these 6 steps:**

1. Open the 'Coders' screen (**Protocol Management** menu > **Protocol Definition** submenu > **Coders** option); the 'Coders' screen is displayed.

Figure 5-5: Coders Screen

Coders		
1st Coder	g711Ulaw64k	20
2nd Coder	g729	30
3rd Coder	g726	10
4th Coder		
5th Coder		

2. From the coder drop-down list, select the coder you want to use. For the full list of available coders and their corresponding ptimes refer to [Table 5-3](#).
Note: Each coder can appear only once.
3. From the drop-down list to the right of the coder list, select the size of the Voice Packet (ptime) used with this coder in milliseconds. Selecting the size of the packet determines how many coder payloads are combined into one RTP (voice) packet.
Note 1: The ptime packetization period depends on the selected coder name.
Note 2: If not specified, the ptime gets a default value.
Note 3: The ptime specifies the maximum packetization time the gateway can receive.
4. Repeat steps 2 and 3 for the second to fifth coders (optional).
5. Click the **Submit** button to save your changes.
6. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.



Note: Only the ptime of the first coder in the defined coder list is declared in Invite/200 OK SDP, even if multiple coders are defined.

Table 5-3: *ini* File Coder Parameter

Parameter	Description																				
CoderName	Enter the coders in the format: CoderName=<Coder>,<ptime>. For example: CoderName = g711Alaw64k,20 CoderName = g711Ulaw64k,40 CoderName = g7231,90 Note 1: This parameter (CoderName) can appear up to 10 times. Note 2: The coder name is case-sensitive. You can select the following coders: <table> <tr> <td>g711Alaw64k</td><td>– G.711 A-law.</td></tr> <tr> <td>g711Ulaw64k</td><td>– G.711 μ-law.</td></tr> <tr> <td>g7231</td><td>– G.723.1 6.3 kbps (default).</td></tr> <tr> <td>g7231r53</td><td>– G.723.1 5.3 kbps.</td></tr> <tr> <td>g726</td><td>– G.726 ADPCM 32 kbps (Payload Type = 35).</td></tr> <tr> <td>g729</td><td>– G.729A.</td></tr> </table> Note: G.729B is supported if the coder G.729 is selected and 'EnableSilenceCompression' equals 1 or 2. The RTP packetization period (ptime, in msec) depends on the selected coder name, and can have the following values: <table> <tr> <td>g711</td><td>– 10, 20, 30, 40, 50, 60, 80, 100, 120 (default=20).</td></tr> <tr> <td>g729</td><td>– 10, 20, 30, 40, 50, 60, 80, 100, 120 (default=20).</td></tr> <tr> <td>g723</td><td>– 30, 60, 90, 120, 150 (default = 30).</td></tr> <tr> <td>G.726</td><td>– 10, 20, 40, 60, 80, 100, 120 (default=20).</td></tr> </table>	g711Alaw64k	– G.711 A-law.	g711Ulaw64k	– G.711 μ -law.	g7231	– G.723.1 6.3 kbps (default).	g7231r53	– G.723.1 5.3 kbps.	g726	– G.726 ADPCM 32 kbps (Payload Type = 35).	g729	– G.729A.	g711	– 10, 20, 30, 40, 50, 60, 80, 100, 120 (default=20).	g729	– 10, 20, 30, 40, 50, 60, 80, 100, 120 (default=20).	g723	– 30, 60, 90, 120, 150 (default = 30).	G.726	– 10, 20, 40, 60, 80, 100, 120 (default=20).
g711Alaw64k	– G.711 A-law.																				
g711Ulaw64k	– G.711 μ -law.																				
g7231	– G.723.1 6.3 kbps (default).																				
g7231r53	– G.723.1 5.3 kbps.																				
g726	– G.726 ADPCM 32 kbps (Payload Type = 35).																				
g729	– G.729A.																				
g711	– 10, 20, 30, 40, 50, 60, 80, 100, 120 (default=20).																				
g729	– 10, 20, 30, 40, 50, 60, 80, 100, 120 (default=20).																				
g723	– 30, 60, 90, 120, 150 (default = 30).																				
G.726	– 10, 20, 40, 60, 80, 100, 120 (default=20).																				

5.8.1.4 DTMF & Dialing Parameters

Use this screen to configure parameters that are associated with DTMF and dialing.

➤ **To configure the dialing parameters, take these 4 steps:**

1. Open the 'DTMF & Dialing' screen (**Protocol Management** menu > **Protocol Definition** submenu > **DTMF & Dialing** option); the 'DTMF & Dialing' parameters screen is displayed.

Figure 5-6: DTMF & Dialing Parameters Screen

DTMF & Dialing	
Max Digits In Phone Num	4
Inter Digit Timeout [sec]	3
Use Out-of-Band DTMF	No
Out-of-Band DTMF Format	Info. (Cisco)
Declare RFC 2833 in SDP	No
DTMF RFC 2833 Negotiation	Disable
RFC 2833 Payload Type	96
Use Info for Hook-Flash	No
Digit Mapping Rules	
Dial Tone Duration [sec]	16
Hot Line Dial Tone Duration [sec]	16
Enable Special Digits	Disable
Default Destination Number	1000

2. Configure the DTMF & Dialing parameters according to [Table 5-4](#).
3. Click the **Submit** button to save your changes.
4. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-4: DTMF & Dialing Parameters (continues on pages 55 to 57)

Parameter	Description
Max Digits in Phone Num [MaxDigits]	Maximum number of digits that can be dialed. You can enter a value from 1 to 49. The default value is 5.
Note: Digit Mapping Rules can be used instead.	Note: Dialing ends when the maximum number of digits is dialed, the Interdigit Timeout expires, the '#' key is dialed, or a digit map pattern is matched.
Inter Digits Timeout [sec] [TimeBetweenDigits]	Time in seconds that the gateway waits between digits dialed by the user. When the Interdigit Timeout expires, the gateway attempts to dial the digits already received. You can enter a value of 1 to 10 seconds. The default value is 4 seconds.

Table 5-4: DTMF & Dialing Parameters (continues on pages 55 to 57)

Parameter	Description
Use Out-of-Band DTMF [IsDTMFUsed]	Use out-of-band signaling to relay DTMF digits. No [0] = DTMF digits are sent in-band (default). Yes [1] = DTMF digits are sent out-of-band according to the parameter 'Out-of-band DTMF format'. Note: When out-of-band DTMF transfer is used (Enable DTMF = Yes), the parameter 'DTMF Transport Type' is automatically set to 0 (erase the DTMF digits from the RTP stream).
Out-of-Band DTMF Format [OutOfBandDTMFFormat]	The exact method to send out-of-band DTMF digits. Info (Nortel) [1] = Sends DTMF digits according with "IETF draft-choudhuri-sip-info-digit-00". Info (Cisco) [2] = Sends DTMF digits according with Cisco format (default). Notify (3Com) [3] = NOTIFY format <draft-mahy-sipping-signaled-digits-01.txt>. Note 1: To use out-of-band DTMF, set 'Enable DTMF = yes' ('IsDTMFUsed=1'). Note 2: When using out-of-band DTMF, the "DTMFTransportType" parameter is automatically set to 0, to erase the DTMF digits from the RTP stream.
Declare RFC 2833 in SDP [RxDTMFOption]	Defines the supported Receive DTMF negotiation method. No [0] = Don't declare RFC 2833 Telephony-event parameter in SDP Yes [3] = Declare RFC 2833 Telephony-event parameter in SDP (default) The MP-1xx is designed to always be receptive to RFC 2833 DTMF relay packets. Therefore, it is always correct to include the "Telephony-event" parameter as a default in the SDP. However some gateways use the absence of the "telephony-event" from the SDP to decide to send DTMF digits in-band using G.711 coder, if this is the case you can set "RxDTMFOption=0".
DTMF RFC 2833 Negotiation [TxDTMFOption]	No [0] = No negotiation, DTMF digit is sent according to the parameters 'DTMF Transport Type' and 'RFC2833PayloadType'. Yes [4] = Enable RFC 2833 payload type (PT) negotiation (default). Note 1: This parameter is applicable only if "IsDTMFUsed=0" (out-of-band DTMF is not used). Note 2: If enabled, the gateway: • Negotiates RFC 2833 payload type using local and remote SDPs. • Sends DTMF packets using RFC 2833 PT according to the PT in the received SDP. • Expects to receive RFC 2833 packets with the same PT as configured by the "RFC2833PayloadType" parameter. Note 3: If the remote party doesn't include the RFC 2833 DTMF relay payload type in the SDP, the gateway uses the same PT for send and for receive. Note 4: If TxDTMFOption is set to 0, the RFC 2833 payload type is set according to the parameter 'RFC2833PayloadType' for both transmit and receive.
RFC 2833 Payload Type [RFC2833PayloadType]	The RFC 2833 DTMF relay dynamic payload type. Range: 96 to 99, 106 to 127; Default = 96 The 100, 102 to 105 range is allocated for proprietary usage. Note 1: Cisco is using payload type 101 for RFC 2833. Note 2: When RFC 2833 payload type (PT) negotiation is used (TxDTMFOption=4), this payload type is used for the received DTMF packets. If negotiation isn't used, this payload type is used for receive and for transmit.
Use Info for Hook-Flash [IsHookFlashUsed]	No [0] = INFO message isn't sent (default). Yes [1] = Proprietary INFO message with hook-flash is sent when hook-flash is detected (FXS). FXO gateways generate a hook-flash signal when INFO message with hook-flash is received. Note: When either of the supplementary services (Hold, Transfer or Call Waiting) is enabled, hook-flash is used internally, and thus the hook-flash signal <i>isn't</i> sent via an INFO message.

Table 5-4: DTMF & Dialing Parameters (continues on pages 55 to 57)

Parameter	Description
Digit Mapping Rules [DigitMapping]	Digit map pattern. If the digit string (dialed number) has matched one of the patterns in the digit map, the gateway stops collecting digits and starts to establish a call with the collected number The digit map pattern contains up to 8 options, each up to 22 characters that are separated by a vertical bar (). Available notations: • [n-m] represents a range of numbers • '.' (single dot) represents repetition • 'x' represents any single digit • 'T' represents a dial timer (configured by TimeBetweenDigits parameter) • 'S' should be used when a specific rule, that is part of a general rule, is to be applied immediately. For example, if you enter the general rule x.T and the specific rule 11x, you should append 'S' to the specific rule 11xS. For example: 11xS 00T [(1-7)xxx 8xxxxxxx #xxxxxxx]*xx 91xxxxxxxxx 9011x.T
Dial Tone Duration [sec] [TimeForDialTone]	Time in seconds that the dial tone is played. The default time is 16 seconds. FXS Gateway ports play the dial tone after phone is picked up; while FXO Gateway ports play the dial tone after port is seized in response to ringing. Note 1: During play of dial tone, the Gateway waits for DTMF digits. Note 2: 'TimeForDialTone' is not applicable when Automatic Dialing is enabled.
Hot Line Dial Tone Duration [HotLineDialToneDuration]	Duration (in seconds) of the Hotline dial tone. If no digits are received during the Hotline dial tone duration, the gateway initiates a call to a preconfigured number (set in the automatic dialing table). The valid range is 0 to 60. The default time is 5 seconds. Applicable to FXS and FXO gateways.
Enable Special Digits [IsSpecialDigits]	Disable [0] = "*" or "#" terminate number collection (default). Enable [1] = if you want to allow "*" and "#" to be used for telephone numbers dialed by a user or entered for the endpoint telephone number. Note: The # and * can always be used as first digit of a dialed number, even if you select 'Disable' for this parameter.
Default Destination Number [DefaultNumber]	Defines the telephone number that the gateway uses if the parameters 'TrunkGroup_x' or 'ChannelList' don't include a phone number. The parameter is used as a starting number for the list of channels comprising all hunt groups in the gateway.

5.8.2 Configuring the Advanced Parameters

Use this submenu to configure the gateway's advanced control protocol parameters.

5.8.2.1 General Parameters

Use this screen to configure general control protocol parameters.

➤ **To configure the general parameters under Advanced Parameters, take these 4 steps:**

1. Open the 'General Parameters' screen (**Protocol Management** menu > **Advanced Parameters** submenu > **General Parameters** option); the 'General Parameters' screen is displayed.

Figure 5-7: Advanced Parameters, General Parameters Screen

General Parameters	
Signaling DiffServ	0
IP Security	Disable
Filter Calls to IP	Don't Filter
! Enable Digit Delivery to Tel	Disable
! Enable Digit Delivery to IP	Disable
Enable DID Wink	Disable
Re-answer Time	0
Disconnect and Answer Supervision	
Enable Polarity Reversal	Disable
Enable Current Disconnect	Disable
Disconnect on Broken Connection	Yes
Broken Connection Timeout [100 msec]	100
Disconnect Call on Silence Detection	No
Silence Detection Period [sec]	120
Silence Detection Method	Voice/Energy Detectors
CDR and Debug	
CDR Server IP Address	
CDR Report Level	None
Debug Level	5
Misc. Parameters	
Progress Indicator to IP	Not Configured
Enable Busy Out	Disable
Default Release Cause	3
Delay After Reset [sec]	0
Max Number of Active Calls	8
Max Call Duration [sec]	0
Enable LAN Watchdog	Disable
Enable Calls Cut Through	Disable

2. Configure the general parameters under 'Advanced Parameters' according to [Table 5-5](#).
3. Click the **Submit** button to save your changes.
4. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-5: Advanced Parameters, General Parameters (continues on pages 59 to 62)

Parameter	Description
Signaling DiffServ [ControlIPDiffServ]	Defines the value of the 'DiffServ' field in the IP header for SIP messages. The valid range is 0 to 63. The default value is 0.
IP Security [SecureCallsFromIP]	No [0] = Gateway accepts all SIP calls (default). Yes [1] = Gateway accepts SIP calls only from IP addresses defined in the Tel to IP routing table. The gateway rejects all calls from unknown IP addresses. For detailed information on the Tel to IP Routing table refer to Section 5.8.4.2 on page 75. Note: Specifying the IP address of a Proxy server in the Tel to IP Routing table enables the gateway to only accept calls originating in the Proxy server and rejects all other calls.
Filter Calls to IP [FilterCalls2IP]	Don't Filter [0] = Disabled (default) Filter [1] = Enabled If the filter calls to IP feature is enabled, then when a Proxy is used, the gateway first checks the Tel→IP routing table before making a call through the Proxy. If the number is not allowed (number isn't listed or a Call Restriction routing rule, IP=0.0.0.0, is applied), the call is released.
Enable Digit Delivery to IP [EnableDigitDelivery2IP]	Disable [0] = Disabled (default). Enable [1] = Enable digit delivery to IP. The digit delivery feature enables sending of DTMF digits to the destination IP address after the Tel→IP call was answered. To enable this feature, modify the called number to include at least one 'p' character. The gateway uses the digits before the 'p' character in the initial Invite message. After the call was answered the gateway waits for the required time (# of 'p' * 1.5 seconds) and then sends the rest of the DTMF digits using the method chosen (in-band, out-of-band). Note: The called number can include several 'p' characters (1.5 seconds pause). For example, the called number can be as follows: pp699, p9p300.
Enable Digit Delivery to Tel [EnableDigitDelivery]	Disable [0] = Disabled (default). Enable [1] = Enable Digit Delivery feature for MP-1xx/FXO & FXS. The digit delivery feature enables sending of DTMF digits to the gateway's port after the line is offhooked (FXS) or seized (FXO). For IP→Tel calls, after the line is offhooked / seized, the MP-1xx plays the DTMF digits (of the called number) towards the phone line. Note 1: The called number can also include the characters 'p' (1.5 seconds pause) and 'd' (detection of dial tone). If the character 'd' is used, it must be the first "digit" in the called number. The character 'p' can be used several times. For example, the called number can be as follows: d1005, dpp699, p9p300. To add the 'd' and 'p' digits, use the usual number manipulation rules. Note 2: To use this feature with FXO gateways, configure the gateway to work in one stage dialing mode. Note 3: If the parameter 'EnableDigitDelivery' is enabled, it is possible to configure the gateway to wait for dial tone per destination phone number (before or during dialing of destination phone number), therefore the parameter 'IsWaitForDialTone' (that is configurable for the entire gateway) is ignored. Note 4: The FXS gateway sends 200 OK messages only after it finishes playing the DTMF digits to the phone line.

Table 5-5: Advanced Parameters, General Parameters (continues on pages 59 to 62)

Parameter	Description
Enable DID Wink [EnableDIDWink]	Disable [0] = DID is disabled (default). Enable [1] = Enable DID. If enabled, the MP-1xx can be used for connection to EIA/TIA-464B DID Loop Start lines. Both FXO (detection) and FXS (generation) are supported. An FXO gateway dials DTMF digits after a Wink signal is detected (instead of a Dial tone). An FXS gateway generates the Wink signal after the detection of offhook (instead of playing a Dial tone).
Reanswer Time [RegretTime]	The time period (in seconds) after user hangs up the phone and before call is disconnected (FXS). Also called regret time. The default time is 0 seconds.
Disconnect and Answer Supervision	
Enable Polarity Reversal [EnableReversalPolarity]	Disable [0] = Disable the polarity reversal service (default). Enable [1] = Enable the polarity reversal service. If the polarity reversal service is enabled, then the FXS gateway changes the line polarity on call answer and changes it back on call release. The FXO gateway sends a 200 OK response when polarity reversal signal is detected, and releases a call when a second polarity reversal signal is detected.
Enable Current Disconnect [EnableCurrentDisconnect]	Disable [0] = Disable the current disconnect service (default). Enable [1] = Enable the current disconnect service. If the current disconnect service is enabled, the FXO gateway releases a call when current disconnect signal is detected on its port, while the FXS gateway generates a "Current Disconnect Pulse" after a call is released from IP. The current disconnect duration is determined by the parameter 'CurrentDisconnectDuration'. The current disconnect threshold (FXO only) is determined by the parameter 'CurrentDisconnectDefaultThreshold'. The frequency at which the analog line voltage is sampled is determined by the parameter 'TimeToSampleAnalogLineVoltage'.
Disconnect on Broken Connection [DisconnectOnBrokenConnection]	No [0] = Don't release the call. Yes [1] = Call is released if RTP packets are not received for a predefined timeout (default). Note 1: If enabled, the timeout is set by the parameter 'BrokenConnectionEventTimeout', in 100 msec resolution. The default timeout is 10 seconds: (BrokenConnectionEventTimeout=100). Note 2: This feature is applicable only if RTP session is used without Silence Compression. If Silence Compression is enabled, the Gateway doesn't detect that the RTP connection is broken. Note 3: During a call, if the source IP address (from where the RTP packets were sent) is changed without notifying the Gateway, the Gateway filters these RTP packets. To overcome this issue, set 'DisconnectOnBrokenConnection=0'; the Gateway doesn't detect RTP packets arriving from the original source IP address, and switches (after 300 msec) to the RTP packets arriving from the new source IP address.
Broken Connection Timeout [BrokenConnectionEventTimeout]	The amount of time (in 100 msec units) an RTP packet isn't received, after which a call is disconnected. The valid range is 1 to 1000. The default value is 100 (10 seconds). Note 1: Applicable only if 'DisconnectOnBrokenConnection = 1'. Note 2: Currently this feature works only if Silence Suppression is disabled.
Disconnect Call on Silence Detection [EnableSilenceDisconnect]	Yes [1] = The FXO gateway disconnect calls in which silence occurs in both (call) directions for more than 120 seconds. No [0] = Call is not disconnected when silence is detected (default). The silence duration can be set by the 'FarEndDisconnectSilencePeriod' parameter (default 120). Note: To activate this feature set DSP Template to 2 or 3.
Silence Detection Period [sec] [FarEndDisconnectSilencePeriod]	Duration of silence period (in seconds) prior to call disconnection. The range is 10 to 28800 (8 hours). The default is 120 seconds. Applicable to gateways, that use DSP templates 2 or 3.

Table 5-5: Advanced Parameters, General Parameters (continues on pages 59 to 62)

Parameter	Description
Silence Detection Method [FarEndDisconnectSilenceMethod]	Silence detection method. None [0] = Silence detection option is disabled. Packets Count [1] = According to packet count. Voice/Energy Detectors [2] = According to energy and voice detectors (default). All [3] = According to packet count and energy / voice detectors.
CDR and Debug	
CDR Server IP Address [CDRSyslogServerIP]	Defines the destination IP address for CDR logs. The default value is a null string that causes the CDR messages to be sent with all Syslog messages. Note: The CDR messages are sent to UDP port 514 (default Syslog port).
CDR Report Level [CDRReportLevel]	None [0] = Call Detail Recording (CDR) information isn't sent to the Syslog server (default). End Call [1] = CDR information is sent to the Syslog server at end of each Call. Start & End Call [2] = CDR information is sent to the Syslog server at the start and at the end of each Call. The CDR Syslog message complies with RFC 3161 and is identified by: Facility = 17 (local1) and Severity = 6 (Informational).
Debug Level [GwDebugLevel]	Syslog logging level. One of the following debug levels can be selected: 0 [0] = Debug is disabled (default) 1 [1] = Flow debugging is enabled 2 [2] = Flow and device interface debugging are enabled 3 [3] = Flow, device interface and stack interface debugging are enabled 4 [4] = Flow, device interface, stack interface and session manager debugging are enabled 5 [5] = Flow, device interface, stack interface, session manager and device interface expanded debugging are enabled. Note: Usually set to 5 if debug traces are needed.
Misc. Parameters	
Progress Indicator to IP [ProgressIndicator2IP]	No PI [0] = For IP→Tel calls, the gateway sends "180 Ringing" SIP response to IP after placing a call to phone (FXS) or to PBX (FXO). PI = 1, PI = 8 [1], [8] = For IP→Tel calls, if 'EnableEarlyMedia=1', the gateway sends "183 session in progress" message + SDP, immediately after a call is placed to Phone/PBX. This is used to cut through the voice path, before remote party answers the call, enabling the originating party to listen to network Call Progress Tones (such as Ringback tone or other network announcements). Not Configured [-1] = Default values are used. The default for FXO gateways is 1; The default for FXS gateways is 0.
Enable Busy Out [EnableBusyOut]	No [0] = 'Busy out' feature is not used (default). Yes [1] = The MP-1xx/FXS gateway plays a reorder tone when the phone is offhooked and one of the following occurs: There is a network problem. Proxy servers do not respond and the internal routing table is not configured.
Default Release Cause [DefaultReleaseCause]	Default Release Cause (to IP) for IP→Tel calls, used when the gateway initiates a call release, and if an explicit matching cause for this release isn't found, a default release cause can be configured: The default release cause is: NO_ROUTE_TO_DESTINATION (3). Other common values are: NO_CIRCUIT_AVAILABLE (34), DESTINATION_OUT_OF_ORDER (27), etc. Note: The default release cause is described in the Q.931 notation, and is translated to corresponding SIP 40x or 50x value. For example: 404 for 3, 503 for 34 and 502 for 27.
Delay After Reset [sec] [GWAppDelayTime]	Defines the amount of time (in seconds) the gateway's operation is delayed after a reset cycle. The valid range is 0 to 600. The default value is 5 seconds. Note: This feature helps to overcome connection problems caused by some LAN routers or IP configuration parameters change by a DHCP Server.

Table 5-5: Advanced Parameters, General Parameters (continues on pages 59 to 62)

Parameter	Description
Max Number of Active Calls [MaxActiveCalls]	Defines the maximum number of calls that the gateway can have active at the same time. If the maximum number of calls is reached, new calls are not established. The default value is max available channels (no restriction on the maximum number of calls). The valid range is 1 to max number of channels.
Max Call Duration (sec) [MaxCallDuration]	Defines the maximum call duration in seconds. If this time expires, both sides of the call are released (IP and Tel). The default time is 0 seconds (no limitation).
Enable LAN Watchdog [EnableLanWatchDog]	Disable [0] = Disable LAN Watch-Dog (default). Enable [1] = Enable LAN Watch-Dog. If LAN Watch-Dog is enabled, the gateway restarts when a network failure is detected.
Enable Calls Cut Through [CutThrough]	Enables users to receive incoming IP calls while the port is in an offhooked state. Disable [0] = Disabled (default). Enable [1] = Enabled. If enabled, FXS gateways answer the call and “cut through” the voice channel, if there is no other active call on that port, even if the port is in offhooked state. When the call is terminated (by the remote party), the gateway plays a reorder tone for ‘TimeForReorderTone’ seconds and is then ready to answer the next incoming call, without onhooking the phone. The waiting call is automatically answered by the gateway when the current call is terminated (EnableCallWaiting=1). Note: This option is applicable only to FXS gateways.

5.8.2.2 Supplementary Services

Use this screen to configure parameters that are associated with supplementary services. For detailed information on the supplementary services, refer to Section 8.4 on page 153.

➤ **To configure the supplementary services' parameters, take these 4 steps:**

1. Open the 'Supplementary Services' screen (**Protocol Management** menu > **Advanced Parameters** submenu > **Supplementary Services** option); the 'Supplementary Services' screen is displayed.

Figure 5-8: Supplementary Services Parameters Screen

Supplementary Services	
! Enable Hold	Enable
Hold Format	0.0.0.0
! Enable Transfer	Enable
Transfer Prefix	
! Enable Call Forward	Enable
! Enable Call Waiting	Enable
Number of Call Waiting Indications	2
Time Between Call Waiting Indications	10
Time Before Waiting Indication	0
Waiting Beep Duration	300
Enable Caller ID	Disable
Caller ID Type	Bellcore
MWI Parameters	
! Enable MWI	Disable
MWI Analog Lamp	Disable
MWI Display	Disable
Subscribe to MWI	No
MWI Server IP Address	0.0.0.0
MWI Subscribe Expiration Time	7200
MWI Subscribe Retry Time	120
Stutter Tone Duration	2000

2. Configure the supplementary services parameters according to Table 5-6.
3. Click the **Submit** button to save your changes, or click the **Subscribe for MWI** or **Un-Subscribe for MWI** buttons to save your changes and to subscribe / unsubscribe to the MWI server.
4. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.

Table 5-6: Supplementary Services Parameters (continues on pages 64 to 65)

Parameter	Description
Enable Hold [EnableHold]	No [0] = Disable the Hold service (default). Yes [1] = Enable the Hold service. If the Hold service is enabled, a user can activate Hold (or Unhold) using the hook-flash. On receiving a Hold request, the remote party is put on-hold and hears the hold tone. Note: To use this service, the gateways at both ends must support this option.
Hold Format [HoldFormat]	Determines the format of the hold request. 0.0.0.0 [0] = The connection IP address in SDP is 0.0.0.0 (default). Send Only [1] = The last attribute of the SDP contains the following "a=sendonly".
Enable Transfer [EnableTransfer]	No [0] = Disable the Call Transfer service (default). Yes [1] = Enable the Call Transfer service (using REFER). If the Transfer service is enabled, the user can activate Transfer using hook-flash signaling. If this service is enabled, the remote party performs the call transfer. Note 1: To use this service, the gateways at both ends must support this option. Note 2: To use this service, set the parameter 'Enable Hold' to 'Yes'.
Transfer Prefix [xferPrefix]	Defined string that is added, as a prefix, to the transferred / forwarded called number, when Refer / Redirect message is received. Note 1: The number manipulation rules apply to the user part of the "REFER-TO / Contact" URL before it is sent in the INVITE message. Note 2: The 'xferprefix' parameter can be used to apply different manipulation rules to differentiate the transferred / forwarded number from the original dialed number.
Enable Call Forward [EnableForward]	No [0] = Disable the Call Forward service (default). Yes [1] = Enable Call Forward service (using REFER). For FXS gateways a Call Forward table must be defined to use the Call Forward service. To define the Call Forward table, refer to Section 5.8.8.4 on page 96. Note: To use this service, the gateways at both ends must support this option.
Enable Call Waiting [EnableCallWaiting]	No [0] = Disable the Call Waiting service (default). Yes [1] = Enable the Call Waiting service. If enabled, when an FXS gateway receives a call on a busy endpoint, it responds with a 182 response (and not with a 486 busy). The gateway plays a call waiting indication signal. When hook-flash is detected, the gateway switches to the waiting call. The gateway that initiated the waiting call plays a Call Waiting Ringback tone to the calling party after a 182 response is received. Note 1: The gateway's Call Progress Tones file must include a "call waiting Ringback" tone (caller side) and a "call waiting" tone (called side, FXS only). Note 2: The 'Enable Hold' parameter must be enabled on both the calling and the called sides. For information on the Call Waiting feature refer to Section 8.4.5 on page 155. For information on the Call Progress Tones file refer to Section 7.1 on page 143.
Number of Call Waiting Indications [NumberOfWaitingIndications]	Number of waiting indications that are played to the receiving side of the call (FXS only) for Call Waiting. The default value is 2.
Time Between Call Waiting Indications [TimeBetweenWaitingIndications]	Difference (in seconds) between call waiting indications (FXS only) for Call Waiting. The default value is 10 seconds.
Time before Waiting Indication [TimeBeforeWaitingIndication]	Defines the interval (in seconds) before a call waiting indication is played to the port that is currently in a call (FXS only). The valid range is 0 to 100. The default time is 0 seconds.
[Waiting Beep Duration] WaitingBeepDuration	Duration (in msec) of waiting indications that are played to the receiving side of the call (FXS only) for Call Waiting. The default value is 300.

Table 5-6: Supplementary Services Parameters (continues on pages 64 to 65)

Parameter	Description
Enable Caller ID [EnableCallerID]	No [0] = Disable the Caller ID service (default). Yes [1] = Enable the Caller ID service. If the Caller ID service is enabled, then, for FXS gateways, calling number and Display text are sent to gateway port. For FXO gateways, the Caller ID signal is detected and is sent to IP in SIP INVITE message (as "Display" element). For information on the Caller ID table refer to Section 5.8.8.3 on page 95. To disable/enable caller I generation per port, refer to Section 5.8.8.5 on page 98.
Caller ID Type [CallerIDType]	Defines one of the following standards for detection (FXO) and generation (FXS) of Caller ID signals. Bellcore [0] (default). ETSI [1]. NTT [2]. British [4]. DTMF ETSI [16]. Denmark [17]. India [18]. Brazil [19]. Note: The Caller ID signals are generated/detected between the first and the second rings.
MWI Parameters	
Enable MWI [EnableMWI]	Enable MWI (message waiting indication). Disable [0] = Disabled (default). Enable [1] = MWI service is enabled. This parameter is applicable only to FXS gateways. Note: The MP-1xx only supports reception of MWI. For detailed information on MWI, refer to Section 8.4.6 on page 156.
MWI Analog Lamp [MWIAnalogLamp]	Disable [0] = Disable (default). Enable [1] = Enable visual Message Waiting Indication, supplies line voltage of approximately 100 VDC to activate the phone's lamp. This parameter is applicable only to FXS gateways.
MWI Display [MWIDisplay]	Disable [0] = MWI information isn't sent to display (default). Enable [1] = MWI information is sent to display. If enabled, the gateway generates an MWI FSK message that is displayed on the MWI display. This parameter is applicable only to FXS gateways.
Subscribe to MWI [EnableMWISubscription]	Disable [0] = Disable MWI subscription (default). Enable [1] = Enable subscription to MWI (to MWIServerIP address). Note: Use the parameter 'SubscriptionMode' (described in Table 5-26 on page 101) to determine whether the gateway subscribes separately per endpoint or for the entire gateway.
MWI Server IP Address [MWIServerIP]	MWI server IP address. If provided, the gateway subscribes to this IP address. Can be configured as a numerical IP address or as a domain name. If not configured, the Proxy IP address is used instead.
MWI Subscribe Expiration Time [MWIExpirationTime]	MWI subscription expiration time in seconds. The default is 7200 seconds. The range is 10 to 72000.
MWI Subscribe Retry Time [SubscribeRetryTime]	Subscription retry time in seconds. The default is 120 seconds. The range is 10 to 7200.
Stutter Tone Duration [StutterToneDuration]	Duration (in msec) of the played stutter dial tone that indicates waiting message(s). The default is 2000 (2 seconds). The range is 1000 to 60000. The Stutter tone is played (instead of a regular Dial tone) when a MWI is received. The tone is composed of a 'Confirmation tone' that is played for 'StutterToneDuration' followed by a 'Stutter tone'. Both tones are defined in the CPT file. Note: This parameter is applicable only to FXS gateways. For detailed information on Message Waiting Indication (MWI), refer to Section 8.4.6 on page 156.

5.8.2.3 Keypad Features

The Keypad Features screen (applicable only to FXS gateways) enables you to activate / deactivate the following features directly from the connected telephone's keypad:

- Call Forward (refer to Section 5.8.8.4 on page 96).
- Caller ID Restriction (refer to Section 5.8.8.3 on page 95).
- Hotline (refer to Section 5.8.8.2 on page 94).

➤ **To configure the keypad features, take these 4 steps:**

1. Open the 'Keypad Features' screen (**Protocol Management** menu > **Advanced Parameters** submenu > **Keypad Features** option); the 'Keypad Features' screen is displayed.

Figure 5-9: Keypad Features Screen

Keypad Features	
Forward	
Unconditional	*72
No Answer	*73
On Busy	*74
On Busy or No Answer	
Do Not Disturb	
Deactivate	*75
Caller ID Restriction	
Activate	*46
Deactivate	*47
Hotline	
Activate	*76
Deactivate	*77

2. Configure the Keypad Features according to Table 5-7.
3. Click the **Submit** button to save your changes.
4. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.



Note: The method used by the gateway to collect dialed numbers is identical to the method used during a regular call (i.e., max digits, interdigit timeout, digit map, etc.).

Table 5-7: Keypad Features Parameters

Parameter	Description
Forward	
Unconditional [KeyCFUnCond]	Keypad sequence that activates the immediate forward option.
No Answer [KeyCFNoAnswer]	Keypad sequence that activates the forward on no answer option.
On Busy [KeyCFBusy]	Keypad sequence that activates the forward on busy option.
On Busy or No Answer [KeyCFBusyOrNoAnswer]	Keypad sequence that activates the forward on 'busy or no answer' option.
Do Not Disturb [KeyCFDoNotDisturb]	Keypad sequence that activates the Do Not Disturb option.
To activate the required forward method from the telephone:	
- Dial the preconfigured sequence number on the keypad; a dial tone is heard. - Dial the telephone number to which the call is forwarded (terminate the number with #); a confirmation tone is heard.	
Deactivate [KeyCFDeact]	Keypad sequence that deactivates any of the forward options. After the sequence is pressed a confirmation tone is heard.
Caller ID Restriction	
Activate [KeyCLIR]	Keypad sequence that activates the restricted Caller ID option. After the sequence is pressed a confirmation tone is heard.
Deactivate [KeyCLIRDeact]	Keypad sequence that deactivates the restricted Caller ID option. After the sequence is pressed a confirmation tone is heard.
Hotline	
Activate [KeyHotLine]	Keypad sequence that activates the delayed hotline option. To activate the delayed hotline option from the telephone: - Dial the preconfigured sequence number on the keypad; a dial tone is heard. - Dial the telephone number to which the phone automatically dials after a configurable delay (terminate the number with #); a confirmation tone is heard.
Deactivate [KeyHotLineDeact]	Keypad sequence that deactivates the delayed hotline option. After the sequence is pressed a confirmation tone is heard.

5.8.3 Configuring the Number Manipulation Tables

The VoIP gateway provides four Number Manipulation tables for incoming and outgoing calls. These tables are used to modify the destination and source telephone numbers so that the calls can be routed correctly.

The Manipulation Tables are:

- Destination Phone Number Manipulation Table for IP→Tel calls
- Destination Phone Number Manipulation Table for Tel→IP call
- Source Phone Number Manipulation Table for IP→Tel calls
- Source Phone Number Manipulation Table for Tel→IP calls



Note: Number manipulation can occur either before or after a routing decision is made. For example, you can route a call to a specific hunt group according to its original number, and then you can remove / add a prefix to that number before it is routed. To control when number manipulation is done, set the IP to Tel Routing Mode (described in [Table 5-12](#)) and the Tel to IP Routing Mode (described in [Table 5-11](#)) parameters.

Possible uses for number manipulation can be as follows:

- To strip/add dialing plan digits from/to the number. For example, a user could dial 9 in front of each number in order to indicate an external line. This number (9) can be removed here before the call is setup.
- Allow / disallow Caller ID information to be sent according to destination / source prefixes. For detailed information on Caller ID refer to [Section 5.8.8.3](#) on page 95.

➤ To configure the Number Manipulation tables, take these 5 steps:

1. Open the Number Manipulation screen you want to configure (**Protocol Management** menu > **Manipulation Tables** submenu); the relevant Manipulation table screen is displayed. [Figure 5-10](#) shows the 'Source Phone Number Manipulation Table for Tel→IP calls'.

Figure 5-10: Source Phone Number Manipulation Table for Tel→IP calls

	Dest. Prefix	Source Prefix	Num of Stripped Digits	Prefix (Suffix) to Add	Number of Digits to Leave	Presentation
1	03	201	0	972		Allowed
2		1001	4	5(23)		Restricted
3		123451001#	0	(8)	4	Not Configured
4		[30-40]xx	(1)	2		Not Configured
5	[6,7,8]	2001	5	3		Not Configured
6						Not Configured
7						Not Configured

2. In the 'Table Index' drop-down list, select the range of entries that you want to edit (up to 20 entries can be configured for Source Number Manipulation and 50 entries for Destination Number Manipulation).
3. Configure the Number Manipulation table according to [Table 5-8](#).

4. Click the **Submit** button to save your changes.
5. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.

Table 5-8: Number Manipulation Parameters

Parameter	Description
Destination Prefix	Each entry in the Destination Prefix fields represents a destination telephone number prefix. An asterisk (*) represents any number.
Source Prefix	Each entry in the Source Prefix fields represents a source telephone number prefix. An asterisk (*) represents any number.
Source IP	Each entry in the Source IP fields represents the source IP address of the call (obtained from the Contact header in the Invite message). This column only applies to the 'Destination Phone Number Manipulation Table for IP to Tel'. Note: The source IP address can include the "x" wildcard to represent <u>single</u> digits. For example: 10.8.8.xx represents all the addresses between 10.8.8.10 to 10.8.8.99.
The manipulation rules are applied to any incoming call whose: • Destination number prefix matches the prefix defined in the 'Destination Number' field. • Source number prefix matches the prefix defined in the 'Source Prefix' field. • Source IP address matches the IP address defined in the 'Source IP' field (if applicable). Note that number manipulation can be performed using a combination of each of the above criteria, or using each criterion independently. Note: For available notations that represent multiple numbers refer to Section 5.8.3.1 on page 71.	
Num of stripped digits	• Enter the number of digits that you want to remove from the left of the telephone number prefix. For example, if you enter 3 and the phone number is 5551234, the new phone number is 1234. • Enter the number of digits (in brackets) that you want to remove from the right of the telephone number prefix. Note: A combination of the two options is allowed (e.g., 2(3)).
Prefix / Suffix to add	• Prefix - Enter the number / string you want to add to the front of the phone number. For example, if you enter 9 and the phone number is 1234, the new number is 91234. • Suffix - Enter the number / string (in brackets) you want to add to the end of the phone number. For example, if you enter (00) and the phone number is 1234, the new number is 123400. Note: You can enter a prefix and a suffix in the same field (e.g., 9(00)).
Number of digits to leave	Enter the number of digits that you want to leave from the right.
Note: The manipulation rules are executed in the following order: 1. Num of stripped digits 2. Number of digits to leave 3. Prefix / suffix to add Figure 5-10 on the previous page exemplifies the use of these manipulation rules in the 'Source Phone Number Manipulation Table for Tel→IP Calls': • When destination number equals 035000 and source number equals 20155, the source number is changed to 97220155. • When source number equals 1001876, it is changed to 587623. • Source number 1234510012001 is changed to 20018. • Source number 3122 is changed to 2312.	
Presentation	Select 'Allowed' to send Caller ID information when a call is made using these destination / source prefixes. Select 'Restricted' if you want to restrict Caller ID information for these prefixes. When set to 'Not Configured', the privacy is determined according to the Caller ID table (refer to Section 5.8.8.3 on page 95). Note: If 'Presentation' is set to 'Restricted' and 'Asserted Identity Mode' is set to 'P-Asserted', the From header in Invite message is: From: "anonymous" <sip:anonymous@anonymous.invalid> and "privacy: id" header is included in the Invite message.

Table 5-9: Number Manipulation *ini* File Parameters (continues on pages 70 to 71)

Parameter	Description
NumberMapTel2IP	Manipulates the destination number for Tel to IP calls. NumberMapTel2IP = a,b,c,d,e,f,g a = Destination number prefix b = Number of stripped digits from the left, or (if brackets are used) from the right. A combination of both options is allowed. c = String to add as prefix, or (if brackets are used) as suffix. A combination of both options is allowed. d = Number of remaining digits from the right e = Number Plan used in RPID header f = Number Type used in RPID header g = Source number prefix The 'b' to 'f' manipulation rules are applied if the called and calling numbers match the 'a' and 'g' conditions. The manipulation rules are executed in the following order: 'b', 'd' and 'c'. Parameters can be skipped by using the sign "\$\$", for example: NumberMapTel2IP=01,2,972,\$\$,0,0,\$\$ NumberMapTel2IP=03,(2),667,\$\$,0,0,22 Note: Number Plan & Type can optionally be used in Remote Party ID (RPID) header by using the 'EnableRPIHeader' and 'AddTON2RPI' parameters.
NumberMapIP2Tel	Manipulate the destination number for IP to Tel calls. NumberMapIP2Tel = a,b,c,d,e,f,g,h,i a = Destination number prefix. b = Number of stripped digits from the left, or (if brackets are used) from the right. A combination of both options is allowed. c = String to add as prefix, or (if brackets are used) as suffix. A combination of both options is allowed. d = Number of remaining digits from the right. e = Not applicable, set to \$\$. f = Not applicable, set to \$\$. g = Source number prefix. h = Not applicable, set to \$\$. i = Source IP address (obtained from the Contact header in the Invite message). The 'b' to 'd' manipulation rules are applied if the called and calling numbers match the 'a', 'g' and 'i' conditions. The manipulation rules are executed in the following order: 'b', 'd' and 'c'. Parameters can be skipped by using the sign "\$\$", for example: NumberMapIP2Tel=01,2,972,\$\$,,\$\$,034,\$\$,10.13.77.8 NumberMapIP2Tel=03,(2),667,\$\$,,\$\$,22 Note: The Source IP address can include the "x" wildcard to represent <u>single</u> digits. For example: 10.8.8.xx represents all the addresses between 10.8.8.10 to 10.8.8.99.

Parameter	Description
SourceNumberMapTel2IP	SourceNumberMapTel2IP = a,b,c,d,e,f,g,h a = Source number prefix b = Number of stripped digits from the left, or (if in brackets are used) from right. A combination of both options is allowed. c = String to add as prefix, or (if in brackets are used) as suffix. A combination of both options is allowed. d = Number of remaining digits from the right e = Number Plan used in RPID header f = Number Type used in RPID header g = Destination number prefix h = Calling number presentation (0 to allow presentation, 1 to restrict presentation) The 'b' to 'f' and 'h' manipulation rules are applied if the called and calling numbers match the 'a' and 'g' conditions. The manipulation rules are executed in the following order: 'b', 'd' and 'c'. Parameters can be skipped by using the sign "\$\$", for example: SourceNumberMapTel2IP=01,2,972,\$\$,0,0,\$\$,1 SourceNumberMapTel2IP=03,(2),667,\$\$,0,0,22 Note 1: 'Presentation' is set to 'Restricted' only if 'Asserted Identity Mode' is set to 'P-Asserted'. Note 2: Number Plan & Type can optionally be used in Remote Party ID (RPID) header by using the 'EnableRPIHeader' and 'AddTON2RPI' parameters.
SourceNumberMapIP2Tel	Manipulate the destination number for IP to Tel calls. NumberMapIP2Tel = a,b,c,d,e,f,g a = Source number prefix b = Number of stripped digits from the left, or (if brackets are used) from the right. A combination of both options is allowed. c = String to add as prefix, or (if brackets are used) as suffix. A combination of both options is allowed. d = Number of remaining digits from the right e = Not in use, should be set to \$\$ f = Not in use, should be set to \$\$ g = Destination number prefix The 'b' to 'd' manipulation rules are applied if the called and calling numbers match the 'a' and 'g' conditions. The manipulation rules are executed in the following order: 'b', 'd' and 'c'. Parameters can be skipped by using the sign "\$\$", for example: NumberMapIP2Tel =01,2,972,\$\$,,\$\$,034 NumberMapIP2Tel =03,(2),667,\$\$,,\$\$,22

5.8.3.1 Dialing Plan Notation

The dialing plan notation applies, in addition to the four Manipulation tables, also to Tel→IP Routing table and to IP→Hunt Group Routing table.

When entering a number in the destination and source 'Prefix' columns, you can create an entry that represents multiple numbers using the following notation:

- [n-m] represents a range of numbers
- [n,m] represents multiple numbers. Note that this notation only supports single digit numbers.
- x represents any single digit
- # (that terminates the number) represents the end of a number
- A single asterisk (*) represents any number

For example:

- [5551200-5551300]# represents all numbers from 5551200 to 5551300
- [2,3,4] represents all numbers that start with the numbers 2, 3 and 4
- 54324 represents any number that starts with 54324
- 54324xx# represents a 7 digit number that starts with 54324
- 123[100-200]# represents all numbers from 123100 to 123200.

The VoIP gateway matches the rules starting at the top of the table. For this reason, enter more specific rules above more generic rules. For example, if you enter 551 in entry 1 and 55 in entry 2, the VoIP gateway applies rule 1 to numbers that starts with 551 and applies rule 2 to numbers that start with 550, 552, 553, 554, 555, 556, 557, 558 and 559. However if you enter 55 in entry 1 and 551 in entry 2, the VoIP gateway applies rule 1 to all numbers that start with 55 including numbers that start with 551.

5.8.4 Configuring the Routing Tables

Use this submenu to configure the gateway's IP→Tel and Tel→IP routing tables and their associated parameters.

5.8.4.1 General Parameters

Use this screen to configure the gateway's IP→Tel and Tel→IP routing parameters.

➤ **To configure the general parameters under Routing Tables, take these 4 steps:**

1. Open the 'General Parameters' screen (**Protocol Management** menu > **Routing Tables** submenu > **General** option); the 'General Parameters' screen is displayed.

Figure 5-11: Routing Tables, General Parameters Screen

General Parameters	
Add Hunt Group ID as Prefix	No
Add Port Number as Prefix	No
IP to Tel Remove Routing Table Prefix	No
Enable Alt Routing Tel to IP	Disable
Alt Routing Tel to IP Mode	None
Max Allowed Packet Loss for Alt Routing [%]	20
Max Allowed Delay for Alt Routing [msec]	250

2. Configure the general parameters under 'Routing Tables' according to [Table 5-10](#).
3. Click the **Submit** button to save your changes.
4. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-10: Routing Tables, General Parameters (continues on pages 73 to 74)

Parameter	Description
Add Hunt Group ID as Prefix [AddTrunkGroupAsPrefix]	No [0] = Don't add hunt group ID as prefix (default). Yes [1] = Add hunt group ID as prefix to called number. If enabled, then the hunt group ID is added as a prefix to the destination phone number for Tel→IP calls. Note 1: This option can be used to define various routing rules. Note 2: To use this feature you must configure the hunt group IDs.
Add Port Number as Prefix [AddPortAsPrefix]	No [0] = Disable the add port as prefix service (default). Yes [1] = Enable the add port as prefix service. If enabled, then the gateway's port number (single digit in the range 1 to 8 in MP-10x, two digits in the range 01 to 24 in MP-124) is added as a prefix to the destination phone number for Tel→IP calls. Note: This option can be used to define various routing rules.

Table 5-10: Routing Tables, General Parameters (continues on pages 73 to 74)

Parameter	Description
IP to Tel Remove Routing Table Prefix [RemovePrefix]	No [0] = Don't remove prefix (default) Yes [1] = Remove the prefix (defined in the IP to Hunt Group Routing table) from a telephone number for an IP→Tel call, before forwarding it to Tel. For example: To route an incoming IP→Tel Call with destination number 21100, the IP to Hunt Group Routing table is scanned for a matching prefix. If such prefix is found, 21 for instance, then before the call is routed to the corresponding hunt group the prefix (21) is removed from the original number, so that only 100 is left. Note 1: Applicable only if number manipulation is performed after call routing for IP→Tel calls (refer to 'IP to Tel Routing Mode' parameter). Note 2: Similar operation (of removing the prefix) is also achieved by using the usual number manipulation rules.
Enable Alt Routing Tel to IP [AltRoutingTel2IPEnable]	No [0] = Disable the Alternative Routing feature (default). Yes [1] = Enable the Alternative Routing feature. Status Only [2] = The Alternative Routing feature is disabled. A read only information on the quality of service of the destination IP addresses is provided. For information on the Alternative Routing feature refer to Section 8.3 on page 152.
Alt Routing Tel to IP Mode [AltRoutingTel2IPMode]	None [0] = Alternative routing is not used. Conn [1] = Alternative routing is performed if ping to initial destination failed. QoS [2] = Alternative routing is performed if poor quality of service was detected. Both [3] = Alternative routing is performed if, either ping to initial destination failed, or poor quality of service was detected, or DNS host name is not resolved (default). Note: QoS (Quality of Service) is quantified according to delay and packet loss, calculated according to previous calls. Qos statistics are reset if no new data is received for two minutes. For information on the Alternative Routing feature refer to 8.3 on page 152.
Max Allowed Packet Loss for Alt Routing [%] [IPConnQoSMaxAllowedPL]	Packet loss percentage at which the IP connection is considered a failure. The range is 1% to 20%. The default value is 20%.
Max Allowed Delay for Alt Routing [msec] [IPConnQoSMaxAllowedDelay]	Transmission delay (in msec) at which the IP connection is considered a failure. The range is 100 to 1000. The default value is 250 msec.

5.8.4.2 Tel to IP Routing Table

The Tel to IP Routing Table is used to route incoming Tel calls to IP addresses. This routing table associates a called / calling telephone number's prefixes with a destination IP address or with an FQDN (Fully Qualified Domain Name). When a call is routed through the VoIP gateway (Proxy isn't used), the called and calling numbers are compared to the list of prefixes on the IP Routing Table (up to 50 prefixes can be configured); Calls that match these prefixes are sent to the corresponding IP address. If the number dialed does not match these prefixes, the call is not made.

When using a Proxy server, you do not need to configure the Tel to IP Routing Table. However, if you want to use fallback routing when communication with Proxy servers is lost, or to use the 'Filter Calls to IP' and 'IP Security' features, or to obtain different SIP URI host names (per called number) or to assign IP profiles, you need to configure the IP Routing Table.

Note that for the Tel to IP Routing table to take precedence over a Proxy for routing calls, set the parameter 'PreferRouteTable' to 1. The gateway checks the 'Destination IP Address' field in the 'Tel to IP Routing' table for a match with the outgoing call. Only if a match is not found, a Proxy is used.

Possible uses for Tel to IP Routing can be as follows:

- Can fallback to internal routing table if there is no communication with the Proxy servers.
- Call Restriction – (when Proxy isn't used), reject all outgoing Tel→IP calls that are associated with the destination IP address: 0.0.0.0.
- IP Security – When the IP Security feature is enabled (SecureCallFromIP = 1), the VoIP gateway accepts only those IP→Tel calls with a source IP address identical to one of the IP addresses entered in the Tel to IP Routing Table.
- Filter Calls to IP – When a Proxy is used, the gateway checks the Tel→IP routing table before a telephone number is routed to the Proxy. If the number is not allowed (number isn't listed or a Call Restriction routing rule was applied), the call is released.
- Always Use Routing Table – When this feature is enabled (AlwaysUseRouteTable = 1), even if a Proxy server is used, the SIP URI host name in the sent INVITE message is obtained from this table. Using this feature users are able to assign a different SIP URI host name for different called and/or calling numbers.
- Assign Profiles to destination address (also when a Proxy is used).
- Alternative Routing – (When Proxy isn't used) an alternative IP destination for telephone number prefixes is available. To associate an alternative IP address to called telephone number prefix, assign it with an additional entry (with a different IP address), or use an FQDN that resolves to two IP addresses. Call is sent to the alternative destination when one of the following occurs:
 - No ping to the initial destination is available, or when poor QoS (delay or packet loss, calculated according to previous calls) is detected, or when a DNS host name is not resolved. For detailed information on Alternative Routing, refer to Section 8.3 on page 152.
 - When a release reason that is defined in the 'Reasons for Alternative Tel to IP Routing' table is received. For detailed information on the 'Reasons for Alternative Routing Tables' refer to Section 5.8.4.5 on page 81.

Alternative routing (using this table) is commonly implemented when there is no response to an Invite message (after Invite retransmissions). The gateway then issues an internal 408 'No Response' implicit release reason. If this reason is included in the 'Reasons for Alternative Routing' table, the gateway immediately initiates a call to the redundant destination using the next matched entry in the 'Tel to IP Routing' table. Note that if a domain name in this table is resolved to two IP addresses, the timeout for Invite retransmissions can be reduced by using the parameter 'Number of RTX Before Hotswap'.



Tip: Tel to IP routing can be performed either before or after applying the number manipulation rules. To control when number manipulation is done, set the Tel to IP Routing Mode parameter (described in [Table 5-11](#)).

➤ **To configure the Tel to IP Routing table, take these 6 steps:**

1. Open the 'Tel to IP Routing' screen (**Protocol Management** menu > **Routing Tables** submenu > **Tel to IP Routing** option); the 'Tel to IP Routing' screen is displayed (shown in [Figure 5-12](#)).
2. In the 'Tel to IP Routing Mode' field, select the Tel to IP routing mode (refer to [Table 5-11](#)).
3. In the 'Routing Index' drop-down list, select the range of entries that you want to edit.
4. Configure the Tel to IP Routing table according to [Table 5-11](#).
5. Click the **Submit** button to save your changes.
6. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Figure 5-12: Tel to IP Routing Table Screen

	Dest. Phone Prefix	Source Phone Prefix	Dest. IP Address	Profile ID	Status
1	10	100	10.33.45.63	1	OK
2	20	*	10.33.45.60	1	QOS Low
3	[3,4,6]	*	10.33.45.64	1	OK
4	54324	[1,2]	Domain.com	1	Dns Error
5	9	*	0.0.0.0	2	n/a
6	8xx#	*	10.13.77.7	1	Ping Error
7	*	*	10.13.77.7	1	OK
8					

Table 5-11: Tel to IP Routing Table

Parameter	Description
Tel to IP Routing Mode [RouteModeTel2IP]	Route calls before manipulation [0] = Tel→IP calls are routed before the number manipulation rules are applied (default). Route calls after manipulation [1] = Tel→IP calls are routed after the number manipulation rules are applied. Note: Not applicable if Proxy routing is used.
Destination Phone Prefix	Each entry in the Destination Phone Prefix fields represents a called telephone number prefix. The prefix can be 1 to 19 digits long. An asterisk (*) represents all numbers.
Source Phone Prefix	Each entry in the Source Phone Prefix fields represents a calling telephone number prefix. The prefix can be 1 to 19 digits long. An asterisk (*) represents all numbers.
Any telephone number whose destination number matches the prefix defined in the 'Destination Phone Prefix' field and its source number matches the prefix defined in the adjacent 'Source Phone Prefix' field, is sent to the IP address entered in the 'IP Address' field. Note that Tel to IP routing can be performed according to a combination of source and destination phone prefixes, or using each independently.	
Note 1: An additional entry of the same prefixes can be assigned to enable alternative routing. Note 2: For available notations that represent multiple numbers refer to Section 5.8.3.1 on page 71.	

Table 5-11: Tel to IP Routing Table

Parameter	Description
Destination IP Address	In each of the IP Address fields, enter the IP address that is assigned to these prefixes. Domain names, such as domain.com, can be used instead of IP addresses. To discard outgoing IP calls, enter 0.0.0.0 in this field. Note: When using domain names, you must enter a DNS server IP address, or alternatively define these names in the 'Internal DNS Table'.
Profile ID	Enter the number of the IP profile that is assigned to the destination IP address defined in the 'Destination IP Address' field.
Status	A read only field representing the quality of service of the destination IP address. N/A = Alternative Routing feature is disabled. OK = IP route is available Ping Error = No ping to IP destination, route is not available QoS Low = Bad QoS of IP destination, route is not available DNS Error = No DNS resolution (only when domain name is used instead of an IP address).
Parameter Name in <i>ini</i> File	Parameter Format
Prefix	Prefix = <Destination Phone Prefix>,<IP Address>,<Source Phone Prefix>,<Profile ID> For example: Prefix = 20,10.2.10.2,202,1 Prefix = 10[340-451]xxx#,10.2.10.6,*,1 Prefix = *,gateway.domain.com,* Note 1: <destination / source phone prefix> can be single number or a range of numbers. For available notations refer to Section 5.8.3.1 on page 71. Note 2: This parameter can appear up to 50 times. Note 3: Parameters can be skipped by using the sign "\$\$", for example: Prefix = \$\$,10.2.10.2,202,1

5.8.4.3 IP to Hunt Group Routing

The IP to Hunt Group Routing Table is used to route incoming IP calls to groups of channels called hunt groups. Calls are assigned to hunt groups according to any combination of the following three options (or using each independently):

- Destination phone prefix
- Source phone prefix
- Source IP address

The call is then sent to the VoIP gateway channels assigned to that hunt group. The specific channel, within a hunt group, that is assigned to accept the call is determined according to the hunt group's channel selection mode which is defined in the Hunt Group Settings table (Section 5.8.7 on page 91) or according to the global parameter 'ChannelSelectMode' (refer to Table 5-5 on page 59). Hunt groups can be used on both FXO and FXS gateways; however, usually they are used with FXO gateways.

Note: When a release reason that is defined in the 'Reasons for Alternative IP to Tel Routing' table is received for a specific IP→Tel call, an alternative hunt group for that call is available. To associate an alternative hunt group to an incoming IP call, assign it with an additional entry in the 'IP to Hunt Group Routing' table (repeat the same routing rules with a different hunt group ID). For detailed information on the 'Reasons for Alternative Routing Tables' refer to Section 5.8.4.5 on page 81.

To use hunt groups you must also do the following.

- You must assign a hunt group ID to the VoIP gateway channels on the Endpoint Phone Number screen. For information on how to assign a hunt group ID to a channel, refer to Section 5.8.6 on page 89.
- You can configure the Hunt Group Settings table to determine the method in which new calls are assigned to channels within the hunt groups (a different method for each hunt group can be configured). For information on how to enable this option, refer to Section 5.8.7 on page 91. If a Channel Select Mode for a specific hunt group isn't specified, then the global "Channel Select Mode" parameter (defined in 'General Parameters' screen under 'Advanced Parameters') applies.

➤ To configure the IP to Hunt Group Routing table, take these 6 steps:

1. Open the 'IP to Hunt Group Routing' screen (**Protocol Management** menu > **Routing Tables** submenu > **IP to Hunt Group Routing** option); the 'IP to Hunt Group Routing' table screen is displayed (shown in Figure 5-13).

Figure 5-13: IP to Hunt Group Routing Table Screen

	Dest. Phone Prefix	Source Phone Prefix	Source IP Address	Hunt Group ID	Profile ID
1	10	*	0	1	2
2	20	101	0	1	2
3					
4					
5	[5010-5020]	*	0	3	1
6	6xx	*	0	3	1
7	71234#	*	0	3	1
8	*	*	0	4	3
9					

2. In the 'IP to Tel Routing Mode' field, select the IP to Tel routing mode (refer to [Table 5-12](#)).
3. In the 'Routing Index' drop-down list, select the range of entries that you want to edit (up to 24 entries can be configured).
4. Configure the IP to Hunt Group Routing table according to [Table 5-12](#).
5. Click the **Submit** button to save your changes.
6. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-12: IP to Hunt Group Routing Table

Parameter	Description
IP to Tel Routing Mode [RouteModelIP2Tel]	Route calls before manipulation [0] = IP→Tel calls are routed before the number manipulation rules are applied (default). Route calls after manipulation [1] = IP→Tel calls are routed after the number manipulation rules are applied.
Destination Phone Prefix	Each entry in the Destination Phone Prefix fields represents a called telephone number prefix. The prefix can be 1 to 49 digits long. An asterisk (*) represents all numbers.
Source Phone Prefix	Each entry in the Source Phone Prefix fields represents a calling telephone number prefix. The prefix can be 1 to 49 digits long. An asterisk (*) represents all numbers.
Source IP Address	Each entry in the Source IP Address fields represents the source IP address of an IP→Tel call (obtained from the Contact header in the Invite message). Note: The source IP address can include the "x" wildcard to represent <u>single</u> digits. For example: 10.8.8.xx represents all the addresses between 10.8.8.10 to 10.8.8.99.
Any SIP incoming call whose destination number matches the prefix defined in the 'Destination Phone Prefix' field <i>and</i> its source number matches the prefix defined in the adjacent 'Source Phone Prefix' field <i>and</i> its source IP address matches the address defined in the 'Source IP Address' field, is assigned to the hunt group entered in the field to the right of these fields. Note that IP to hunt group routing can be performed according to any combination of source / destination phone prefixes and source IP address, or using each independently. Note: For available notations that represent multiple numbers (used in the prefix columns), refer to Section 5.8.3.1 on page 71.	
Hunt Group ID	In each of the Hunt Group ID fields, enter the hunt group ID to which calls that match these prefixes are assigned.
Profile ID	Enter the number of the IP profile that is assigned to the routing rule.
Parameter Name in <i>ini</i> File	Parameter Format
PSTNPrefix	PSTNPrefix = a,b,c,d,e a = Destination Number Prefix b = Hunt Group ID c = Source Number Prefix d = Source IP address (obtained from the Contact header in the Invite message) e = IP Profile ID Selection of hunt groups (for IP to Tel calls) is according to destination number, source number and source IP address. Note 1: To support the 'in call alternative routing' feature, Users can use two entries that support the same call, but assigned it with a different hunt groups. The second entree functions as an alternative selection if the first rule fails as a result of one of the release reasons listed in the AltRouteCauseIP2Tel table. Note 2: An optional IP ProfileID (1 to 5) can be applied to each routing rule. Note 3: The Source IP Address can include the "x" wildcard to represent <u>single</u> digits. For example: 10.8.8.xx represents all IP addresses between 10.8.8.10 to 10.8.8.99. Note 4: For available notations that represent multiple numbers refer to Section 5.8.3.1 on page 71. Note 5: This parameter can appear up to 24 times.

5.8.4.4 Internal DNS Table

The internal DNS table, similar to a DNS resolution, translates hostnames into IP addresses. This table is used when hostname translation is required (e.g., 'Tel to IP Routing' table, etc.). Two different IP addresses can be assigned to the same hostname. If the hostname isn't found in this table, the gateway communicates with an external DNS server.

Assigning two IP addresses to hostname can be used for alternative routing (using the 'Tel to IP Routing' table).

➤ **To configure the internal DNS table, take these 7 steps:**

1. Open the 'Internal DNS Table' screen (**Protocol Management** menu > **Routing Tables** submenu > **Internal DNS Table** option); the 'Internal DNS Table' screen is displayed.

Figure 5-14: Internal DNS Table Screen

Internal DNS Table			
	DNS Name	First IP Address	Second IP Address
1	DomainName.com	10.8.21.4	10.13.2.95
2			
3			

2. In the 'DNS Name' field, enter the hostname to be translated. You can enter a string up to 31 characters long.
3. In the 'First IP Address' field, enter the first IP address that the hostname is translated to.
4. In the 'Second IP Address' field, enter the second IP address that the hostname is translated to.
5. Repeat steps 2 to 4, for each Internal DNS Table entry.
6. Click the **Submit** button to save your changes.
7. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.

Table 5-13: Internal DNS *ini* File Parameter

Parameter Name in <i>ini</i> File	Parameter Format
DNS2IP	DNS2IP = <Hostname>, <first IP address>, <second IP address> For example: DNS2IP = Domainname.com, 10.8.21.4, 10.13.2.95 Note: This parameter can appear up to 10 times.

5.8.4.5 Reasons for Alternative Routing

The Reasons for Alternative Routing screen includes two tables (Tel→IP and IP→Tel). Each table enables you to define up to 4 different release reasons. If a call is released as a result of one of these reasons, the gateway tries to find an alternative route to that call. The release reason for IP→Tel calls is provided in Q.931 notation. The release reason for Tel→IP calls is provided in SIP 4xx, 5xx and 6xx response codes. For Tel→IP calls an alternative IP address, for IP→Tel calls an alternative hunt group.

Refer to 'Tel to IP Routing' on page 75 for information on defining an alternative IP address. Refer to the 'IP to Hunt Group Routing' on page 78 for information on defining an alternative hunt group.

You can use this table for example:

For Tel→IP calls, when there is no response to an Invite message (after Invite retransmissions), and the gateway then issues an internal 408 'No Response' implicit release reason.

For IP→Tel calls, when the destination is busy, and release reason #17 is issued or for other call releases that issue the default release reason (#3). Refer to 'DefaultReleaseCause' in Table 5-5.

Note: The reasons for alternative routing option for Tel→IP calls only applies when Proxy isn't used.

➤ **To configure the reasons for alternative routing, take these 5 steps:**

1. Open the 'Reasons for Alternative Routing' screen (**Protocol Management** menu > **Routing Tables** submenu > **Reasons for Alternative Routing** option); the 'Reasons for Alternative Routing' screen is displayed.

Figure 5-15: Reasons for Alternative Routing Screen

Reasons for Redundant Routing	
IP to Tel Reasons	
Reason 1	3
Reason 2	17
Reason 3	6
Reason 4	1
Tel to IP Reasons	
Reason 1	408
Reason 2	486
Reason 3	
Reason 4	

2. In the 'IP to Tel Reasons' table, from the drop-down list select up to 4 different call failure reasons that invoke an alternative IP to Tel routing.
3. In the 'Tel to IP Reasons' table, from the drop-down list select up to 4 different call failure reasons that invoke an alternative Tel to IP routing.
4. Click the **Submit** button to save your changes.
5. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.

Table 5-14: Reasons for Alternative Routing *ini* File Parameter

Parameter Name in <i>ini</i> File	Parameter Format
AltRouteCauseTel2IP	AltRouteCauseTel2IP = <SIP Call failure reason from IP> For example: AltRouteCauseTel2IP = 408 (Response timeout). AltRouteCauseTel2IP = 486 (User is busy). Note: This parameter can appear up to 4 times.
AltRouteCauseIP2Tel	AltRouteCauseIP2Tel = <Call failure reason from Tel> For example: AltRouteCauseIP2Tel = 3 (No route to destination). AltRouteCauseIP2Tel = 17 (Busy here). Note: This parameter can appear up to 4 times.

5.8.5 Configuring the Profile Definitions

Utilizing the Profiles feature, the MP-1xx provides high-level adaptation when connected to a variety of equipment (from both Tel and IP sides) and protocols, each of which require a different system behavior. Using Profiles, users can assign different Profiles (behavior) on a per-call basis, using the Tel to IP and IP to Hunt Group Routing tables, or associate different Profiles to the gateway's endpoint(s). The Profiles contain parameters such as Coders, T.38 Relay, Voice and DTMF Gains, Silence Suppression, Echo Canceler, RTP DiffServ, Current Disconnect and more. The Profiles feature allows users to tune these parameters or turn them on or off, per source or destination routing and/or the specific gateway or its ports. For example, specific ports can be designated to have a profile which always uses G.711.

Each call can be associated with one or two Profiles, Tel Profile and (or) IP Profile. If both IP and Tel profiles apply to the same call, the coders and other common parameters of the preferred Profile (determined by the Preference option) are applied to that call. If the Preference of the Tel and IP Profiles is identical, the Tel Profile parameters are applied.



Note: The default values of the parameters in the Tel and IP Profiles are identical to the Web/ini file parameter values. If a value of a parameter is changed in the Web/ini file, it is automatically updated in the Profiles correspondingly. After any parameter in the Profile is modified by the user, modifications to parameters in the Web/ini file no longer impact that Profile.

5.8.5.1 Coder Group Settings

Use the Coders Group Settings screen to define up to four different coder groups. These coder groups are used in the Tel and IP Profile Settings screens to assign different coders to Profiles.

➤ **To configure the coder group settings, take these 8 steps:**

1. Open the 'Coder Group Settings' screen (**Protocol Management** menu > **Profile Definitions** submenu > **Coder Group Settings** option); the 'Coder Group Settings' screen is displayed.

Figure 5-16: Coder Group Settings Screen

Coder Group Settings		
Coder Group ID	1	
1st Coder	g711Alaw64k	20
2nd Coder	g711Ulaw64k	10
3rd Coder		20
4th Coder		20
5th Coder		20

2. In the 'Coder Group ID' drop-down list, select the coder group you want to edit (up to four coder groups can be configured).
3. From the coder drop-down list, select the coder you want to use. For the full list of available coders and their corresponding ptimes refer to [Table 5-15](#).
Note: Each coder can appear only once.
4. From the drop-down list to the right of the coder list, select the size of the Voice Packet (ptime) used with this coder in milliseconds. Selecting the size of the packet determines how

many coder payloads are combined into one RTP (voice) packet.

Note 1: The ptime packetization period depends on the selected coder name.

Note 2: If not specified, the ptime gets a default value.

Note 3: The ptime specifies the maximum packetization time the gateway can receive.

5. Repeat steps 3 and 4 for the second to fifth coders (optional).
6. Repeat steps 2 to 5 for the second to forth coder groups (optional).
7. Click the **Submit** button to save your changes.
8. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.



Note: In the current version, only the ptime of the first coder is sent in the SDP section of the Invite message.

Table 5-15: ini File Coder Group Parameters

Parameter	Description
CoderName_ID	Coder list for Profiles (up to five coders in each group). The CoderName_ID parameter (ID from 1 to 4) provides groups of coders that can be associated with IP or Tel profiles. You can select the following coders: - g711Alaw64k – G.711 A-law. - g711Ulaw64k – G.711 μ-law. - g7231 – G.723.1 6.3 kbps (default). - g7231r53 – G.723.1 5.3 kbps. - g726 – G.726 ADPCM 32 kbps (Payload Type = 35). - g729 – G.729A. The RTP packetization period (ptime, in msec) depends on the selected Coder name, and can have the following values: - g711 family – 10, 20, 30, 40, 50, 60, 80, 100, 120 (default=20). - g729 – 10, 20, 30, 40, 50, 60, 80, 100, 120 (default=20). - g723 family – 30, 60, 90, 120, 150 (default = 30). - G.726 family – 10, 20, 30, 40, 50, 60, 80, 100, 120 (default=20) Note: G.729B is supported if the coder G.729 is selected and 'EnableSilenceCompression' equals 1 or 2. ini file note 1: This parameter (CoderName_ID) can appear up to 20 times (five coders in four coder groups). ini file note 2: The coder name is case-sensitive. ini file note 3: Enter in the format: Coder,ptime. For example, the following three coders belong to coder group with ID=1: CoderName_1 = g711Alaw64k,20 CoderName_1 = g711Ulaw64k,40 CoderName_1 = g7231,90

5.8.5.2 Tel Profile Settings

Use the Tel Profile Settings screen to define up to four different Tel Profiles. These Profiles are used in the 'Endpoint Phone Number' table to associate different Profiles to gateway's endpoints, thereby applying different behavior to different MP-1xx ports.

➤ **To configure the Tel Profile settings, take these 9 steps:**

1. Open the 'Tel Profile Settings' screen (**Protocol Management** menu > **Profile Definitions** submenu > **Tel Profile Settings** option); the 'Tel Profile Settings' screen is displayed.

Figure 5-17: Tel Profile Settings Screen

Tel Profile Settings	
Profile ID	2
Profile Name	Default Tel Profile
Profile Parameters	
Profile Preference	1
Is Fax Used	No
Jitter Buffer Minimum Delay [msec]	70
Jitter Buffer Frame Error/Delay Opt. Factor	7
RTP IP Diff Serv	0
Signaling DiffServ	0
Voice Volume (-32 to 31 dB)	1
DTMF Volume (-31 to 0 dB)	-11
Input Gain (-32 to 31 dB)	0
Enable Polarity Reversal	Disable
Enable Current Disconnect	Disable
Enable Digit Delivery	Disable
Echo Canceler	Enable
Coder Group	
Coder Group	Default Coder Group

2. In the 'Profile ID' drop-down list, select the Tel Profile you want to edit (up to four Tel Profiles can be configured).
3. In the 'Profile Name' field, enter a name that enables you to identify the Profile intuitively and easily.
4. In the 'Profile Preference' drop-down list, select the preference (1-10) of the current Profile. The preference option is used to determine the priority of the Profile. If both IP and Tel profiles apply to the same call, the coders and other common parameters of the preferred Profile are applied to that call. If the Preference of the Tel and IP Profiles is identical, the Tel Profile parameters are applied.
Note: If the coder lists of both IP and Tel Profiles apply to the same call, an intersection of the coders is performed (i.e., only common coders remain). The order of the coders is determined by the preference.

5. Configure the Profile's parameters according to your requirements. For detailed information on each parameter refer to the description of the screen in which it is configured as an individual parameter.
6. In the 'Coder Group' drop-down list, select the coder group you want to assign to that Profile. You can select the gateway's default coders (refer to Section 5.8.1.3 on page 53) or one of the coder groups you defined in the Coder Group Settings screen (refer to Section 5.8.5.1 on page 83).
7. Repeat steps 2 to 6 for the second to fifth Tel Profiles (optional).
8. Click the **Submit** button to save your changes.
9. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.

Table 5-16: ini File Tel Profile Settings

Parameter	Description
TelProfile_ID	TelProfile_<Profile ID> = <Profile Name>,<Preference>,<Coder Group ID>,<IsFaxUsed *>,<DJBufMinDelay *>,<DJBufOptFactor *>,<IPDiffServ *>,<ControlIPDiffServ*>,<DTMFVolume>,<InputGain>,<VoiceVolume>,<EnableReversePolarity>,<EnableCurrentDisconnect>,<EnableDigitDelivery>,<ECE> For example: TelProfile_1 = FaxProfile,1,2,0,10,5,22,33,2,22,34,1,0,1,1 TelProfile_2 = ModemProfile,0,10,13,\$\$, \$\$, \$\$, \$\$, \$\$,0,\$\$,0,0,1,1 \$\$ = Not configured, the default value of the parameter is used. (*) = Common parameter used in both IP and Tel profiles. Note: This parameter can appear up to 4 times.

5.8.5.3 IP Profile Settings

Use the IP Profile Settings screen to define up to four different IP Profiles. These Profiles are used in the Tel to IP and IP to Hunt Group Routing tables to associate different Profiles to routing rules. IP Profiles can also be used when working with Proxy server (set 'AlwaysUseRouteTable' to 1).

➤ **To configure the IP Profile settings, take these 9 steps:**

1. Open the 'IP Profile Settings' screen (**Protocol Management** menu > **Profile Definitions** submenu > **IP Profile Settings** option); the 'IP Profile Settings' screen is displayed.

Figure 5-18: IP Profile Settings Screen

IP Profile Settings	
Profile ID	1
Profile Name	Default Ip Profile
Profile Parameters	
Profile Preference	1
Is Fax Used	No
Jitter Buffer Minimum Delay [msec]	70
Jitter Buffer Frame Error/Delay Opt. Factor	7
RTP IP Diff Serv	0
Signaling DiffServ	0
Silence Suppression	Disable
RTP Redundancy Depth	0
Coder Group	
Coder Group	Default Coder Group

2. In the 'Profile ID' drop-down list, select the IP Profile you want to edit (up to four IP Profiles can be configured).
3. In the 'Profile Name' field, enter a name that enables you to identify the Profile intuitively and easily.
4. In the 'Profile Preference' drop-down list, select the preference (1-10) of the current Profile. The preference option is used to determine the priority of the Profile. If both IP and Tel profiles apply to the same call, the coders and other common parameters of the preferred Profile are applied to that call. If the Preference of the Tel and IP Profiles is identical, the Tel Profile parameters are applied.
Note: If the coder lists of both IP and Tel Profiles apply to the same call, an intersection of the coders is performed (i.e., only common coders remain). The order of the coders is determined by the preference.
5. Configure the Profile's parameters according to your requirements. For detailed information on each parameter refer to the description of the screen in which it is configured as an individual parameter.
6. In the 'Coder Group' drop-down list, select the coder group you want to assign to that Profile. You can select the gateway's default coders (refer to Section 5.8.1.3 on page 53) or one of the coder groups you defined in the Coder Group Settings screen (refer to Section 5.8.5.1 on page 83).

7. Repeat steps 2 to 6 for the second to fifth IP Profiles (optional).
8. Click the **Submit** button to save your changes.
9. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.

Table 5-17: ini File IP Profile Settings

Parameter	Description
IPProfile_ID	IPProfile_<Profile ID> = <Profile Name>,<Preference>,<Coder Group ID>,<IsFaxUsed *>,<DJBufMinDelay *>,<DJBufOptFactor *>,<IPDiffServ *>,<ControlIPDiffServ *>,<EnableSilenceCompression>,<RTPRedundancyDepth> For example: IPProfile_1 = name1,2,1,0,10,13,15,44,1,1 IPProfile_2 = name2,\$,\$,\$,\$,\$,\$,\$,\$,\$,\$,\$,1 \$\$ = Not configured, the default value of the parameter is used. (*) = Common parameter used in both IP and Tel profiles. Note: This parameter can appear up to 4 times.

5.8.6 Configuring the Endpoint Phone Numbers

From the Endpoint Phone Numbers screen you can enable and assign telephone numbers, hunt groups (optional) and profiles to the VoIP gateway ports.

➤ **To configure the Endpoint Phone Numbers table, take these 4 steps:**

1. Open the 'Endpoint Phone Numbers Table' screen (**Protocol Management** menu > **Endpoint Phone Numbers**); the 'Endpoint Phone Numbers Table' screen is displayed.

Figure 5-19: Endpoint Phone Number Table Screen

Endpoint Phone Number Table					
Channel(s)	Phone Number	Hunt Group ID	Profile ID		
1	1-4	101	1	1	
2	5	201	1	1	
3	6	202	2	1	
4	7	203	2	2	
5	8	302	2	2	
6					
7					
8					

2. Configure the Endpoint Phone Numbers according to [Table 5-18](#). You must enter a number in the Phone Number fields for each port that you want to use.
3. Click the **Submit** button to save your changes, or click the **Register** or **Un-Register** buttons to save your changes and to register / unregister to a Proxy / Registrar.
4. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-18: Endpoint Phone Numbers Table

Parameter	Description
Channel(s)	The numbers (1-8) in the Channel(s) fields represent the ports on the back of the VoIP gateway. To enable a VoIP gateway channel, you must enter the port number on this screen. [n-m] represents a range of ports. For example, enter [1-4] to specify the ports from 1 to 4. Note: For FXO gateways, the number of defined endpoints must not exceed the number of connected physical lines.
Phone Number	In each of the Phone Number fields, enter the telephone number that is assigned to that channel. For a range of channels enter the first number in an ordered sequence. These numbers are also used for port allocation for IP to Tel calls, if the hunt group's 'Channel Select Mode' is set to 'By Phone Number'.

Table 5-18: Endpoint Phone Numbers Table

Parameter	Description
Hunt Group ID	In each of the Hunt Group ID fields, enter the hunt group ID (1-99) assigned to the channel(s). The same hunt group ID can be used for more than one channel and in more than one field. The hunt group ID is an optional field that is used to define a group of common behavior channels that are used for routing IP to Tel calls. If an IP to Tel call is assigned to a hunt group, the call is routed to the channel or channels that correspond to the hunt group ID. You can configure the Hunt Group Settings table to determine the method in which new calls are assigned to channels within the hunt groups (refer to Section 5.8.7 on page 91). Note: If you enter a hunt group ID, you must configure the IP to Hunt Group Routing Table (assigns incoming IP calls to the appropriate hunt group). If you do not configure the IP to Hunt Group Routing Table, calls don't complete. For information on how to configure this table refer to Section 5.8.4.3.
Profile ID	Enter the number of the Tel profile that is assigned to the endpoints defined in the 'Channel(s)' field.
Parameter Name in <i>ini</i> File	Parameter Format
TrunkGroup_x	TrunkGroup_<Hunt Group ID> = <Starting channel> - <Ending channel>, <Phone Number>, <Tel Profile ID> For example: TrunkGroup_1 = 1-4,100 TrunkGroup_2 = 5-8,200,1 Note 1: The numbering of channels starts with 1. Note 2: 'Hunt Group ID' can be set to any number in the range 1 to 99. Note 3: When 'x' (Hunt Group ID) is omitted, the functionality of the TrunkGroup parameter is similar to the functionality of ChannelList and Channel2Phone parameters. Note 4: This parameter can appear up to 8 times for MP-108 Gateways and up to 24 times for MP-124 Gateways. Note 5: An optional Tel ProfileID (1 to 5) can be applied to each group of channels.
ChannelList Note: TrunkGroup_x parameter can be used instead.	List of phone numbers for MP-1xx channels a, b, c, d a = first channel. b = number of channels starting from "a". c = the phone number of the first channel. d = Tel Profile ID assigned to the group of channels. For example: ChannelList = 0,8,101, defines phone numbers 101 to 108 for up to 8 MP-108 channels. Note 1: The <i>ini</i> file can include up to 24 "ChannelList = " entries. Note 2: The "ChannelList" can be used instead of, or in addition to, Channel2Phone parameter.
Channel2Phone	Phone number of channel. Its format: Channel2Phone = "<channel>, <number>" <channel> is 0...23. Example: "Channel2Phone = 0, 1002" Appears once for each channel: 8 times for MP-108, or 4 times for MP-104 and twice for MP-102. For 8-port and 24-port gateways it is suggested to use "TrunkGroup" parameter, where in a single line, all gateway's phone numbers can be defined. Note: When 'Channel2Phone' is used to define an endpoint, hunt group and profile can't be assigned to that endpoint.

5.8.7 Configuring the Hunt Group Settings

The Hunt Group Settings Table is used to determine the method in which new calls are assigned to channels within each hunt group. If such a rule doesn't exist (for a specific hunt group), the global rule, defined by the Channel Select Mode parameter (Protocol Definition > General Parameters), applies.

➤ **To configure the Hunt Group Settings table, take these 7 steps:**

1. Open the 'Hunt Group Settings' screen (**Protocol Management** menu > **Hunt Group Settings**); the 'Hunt Group Settings' screen is displayed.

Figure 5-20: Hunt Group Settings screen

Hunt Group ID	Channel Select Mode
1	By Phone Number
2	Cyclic Ascending
3	Cyclic Ascending
4	
5	
6	
7	
8	
9	
10	
11	
12	

2. In the **Routing Index** drop-down list, select the range of entries that you want to edit (up to 24 entries can be configured).
3. In the **Hunt Group ID** field, enter the hunt group ID number.
4. In the **Channel Select Mode** drop-down list, select the Channel Select Mode that determines the method in which new calls are assigned to channels within the hunt groups entered in the field to the right of this field. For information on available Channel Select Modes refer to [Table 5-19](#).
5. Repeat steps 4 and 5, for each defined hunt group.
6. Click the **Submit** button to save your changes.
7. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-19: Channel Select Modes

Mode	Description
By phone number	Select the gateway port according to the called number (refer to the note below).
Cyclic Ascending	Select the next available channel in ascending cycle order. Always select the next higher channel number in the hunt group. When the gateway reaches the highest channel number in the hunt group, it selects the lowest channel number in the hunt group and then starts ascending again.
Ascending	Select the lowest available channel. Always start at the lowest channel number in the hunt group and if that channel is not available, select the next higher channel.
Cyclic Descending	Select the next available channel in descending cycle order. Always select the next lower channel number in the hunt group. When the gateway reaches the lowest channel number in the hunt group, it selects the highest channel number in the hunt group and then start descending again.
Descending	Select the highest available channel. Always start at the highest channel number in the hunt group and if that channel is not available, select the next lower channel.
Number + Cyclic Ascending	First select the gateway port according to the called number (refer to the note below). If the called number isn't found, then select the next available channel in ascending cyclic order. Note that if the called number is found, but the port associated with this number is busy, the call is released.
Parameter Name in <i>ini</i> File	Parameter Format
TrunkGroupSettings	TrunkGroupSettings = <Hunt group ID>, <Channel select Mode> For example: TrunkGroupSettings = 1,5 <Channel Select Mode> can accept the following values: • 0 = By Phone Number • 1 = Cyclic Ascending • 2 = Ascending • 3 = Cyclic Descending • 4 = Descending • 5 = Number + Cyclic Ascending Note: This parameter can appear up to 24 times.



Note: The gateway's port numbers are defined in the 'Endpoint Phone Numbers' table under the 'Phone Number' column. For detailed information on the 'Endpoint Phone Numbers' table refer to Section 5.8.6 on page 89).

5.8.8 Configuring the Endpoint Settings

The Endpoint Settings screens enable you to configure port-specific parameters.

5.8.8.1 Authentication

The Authentication Table (normally used with FXS gateways) defines a username and password combination for authentication for each MP-1xx port.

The 'Authentication Mode' parameter (described in [Table 5-2](#)) determines if authentication is performed per port or for the entire gateway. If authentication is performed for the entire gateway, this table is ignored.

Note that if either the username or password field is omitted, the port's phone number (defined in [Table 5-18](#)) and global password (refer to the parameter 'Password' described in [Table 5-2](#)) are used instead.

➤ **To configure the Authentication Table, take these 6 steps:**

1. Set the 'Authentication Mode' parameter to 'Authentication per Endpoint'.
2. Open the 'Authentication' screen (**Protocol Management** menu > **Endpoint Settings** > **Authentication** option); the 'Authentication' screen is displayed.

Figure 5-21: Authentication Screen

Authentication			
Gateway Port	User Name		Password
Port 1			
Port 2			
Port 3			
Port 4			

3. In the 'User Name' and 'Password' fields for a port, enter the username and password combination respectively.
4. Repeat step 4 for each port.
5. Click the **Submit** button to save your changes.
6. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-20: Authentication *ini* File Parameter

Parameter Name in <i>ini</i> File	Parameter Format
Authentication_x	Authentication_<Port Number> = <Username>,<Password> For example: Authentication_0 = david,14325 Authentication_1 = Alex,18552 Note: Using the sign "\$\$" enables the User to omit either the username or the password. For instance, Authentication_5 = \$\$, 152. In this case, endpoint 5's phone number is used instead of username.

5.8.8.2 Automatic Dialing

Use the Automatic Dialing Table to define telephone numbers that are automatically dialed when a specific port is used.

➤ **To configure the Automatic Dialing table, take these 6 steps:**

1. Open the 'Automatic Dialing' screen (**Protocol Management** menu > **Endpoint Settings** submenu > **Automatic Dialing** option); the 'Automatic Dialing' screen is displayed.

Figure 5-22: Automatic Dialing Table Screen

Automatic Dialing			
Gateway Port	Destination Phone Number		Auto Dial Status
Port 1	1001		Enable
Port 2	1002		Enable
Port 3			Disable
Port 4	911		Hot Line

2. In the 'Destination Phone Number' field for a port, enter the telephone number to dial.
3. In the 'Auto Dial Status' field, select one of the following:
 - **Enable [1]** – When a port is selected, when making a call, the number in the Destination Phone Number field is automatically dialed if phone is offhooked (for FXS gateways) or ring signal is applied to port (FXO gateways).
 - **Disable [0]** – The automatic dialing option on the specific port is disabled (the number in the Destination Phone Number field is ignored).
 - **Hotline [2]** – When a phone is offhooked and no digit is pressed for 'HotLineDialToneDuration', the number in the Destination Phone Number field is automatically dialed (applies to FXS and FXO gateways).
4. Repeat step 3 for each port you want to use for Automatic Dialing.
5. Click the **Submit** button to save your changes.
6. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.



- Note 1:** After a ring signal is detected, on an 'Enabled' FXO port, the gateway initiates a call to the destination number without seizing the line. The line is seized only after the call is answered.
- Note 2:** After a ring signal is detected on a 'Disabled' or 'Hotline' FXO port, the gateway seizes the line.

Table 5-21: Automatic Dialing *ini* File Parameter

Parameter Name in <i>ini</i> File	Parameter Format
TargetOfChannelX	TargetOfChannel<Port> = <Phone>,<Mode> For example: TargetOfChannel0 = 1001,1 TargetOfChannel3 = 911,2 Note 1: The numbering of channels starts with 0. Note 2: Define this parameter for each gateway port you want to use for Automatic Dialing. Note 3: This parameter can appear up to 8 times for MP-108 gateways and up to 24 times for MP-124 gateways.

5.8.8.3 Caller ID

Use the Caller Display Information screen to send (to IP) Caller ID information when a call is made using the VoIP gateway (relevant to both FXS and FXO). The person receiving the call can use this information for caller identification. The information on this table is sent in an INVITE message in the 'From' header. For information on Caller ID restriction according to destination / source prefixes refer to Section 5.8.3 on page 68.



Note: If Caller ID name is detected on an FXO line (EnableCallerID = 1), it is used instead of the Caller ID name defined in this table (FXO gateways only).

➤ To configure the Caller ID table, take these 6 steps:

1. Open the 'Caller Display Information' screen (**Protocol Management** menu > **Endpoint Settings** submenu > **Caller ID** option); the 'Caller Display Information' screen is displayed.

Figure 5-23: Caller Display Information Screen

Caller Display Information		
Gateway Port	Caller ID/Name	Presentation
Port 1	Susan C.	Allowed
Port 2	Lee D.	Restricted
Port 3	Mark M.	Restricted
Port 4	John H.	Allowed
Port 5	Private	Restricted
Port 6		Allowed
Port 7		Allowed
Port 8		Allowed

2. In the Caller ID/Name field, enter the Caller ID string. The Caller ID string can contain up to 18 characters.
Note that when the FXS gateway receives "Private" or "Anonymous" strings in the 'From' header, it doesn't send the calling name or number to the Caller ID display.

3. In the 'Presentation' field, select 'Allowed' [0] to send the string in the Caller ID/Name field when a (Tel→IP) call is made using this VoIP gateway port. Select 'Restricted' [1] if you don't want to send this string. Note that when 'Presentation' is set to 'Restricted', the parameter 'Asserted Identity Mode' must be set to 'P-Asserted'.
Note: The value of the 'Presentation' field can (optionally) be overridden by configuring the 'Presentation' parameter in the 'Source Number Manipulation' table.
 To maintain backward compatibility, when the strings "Private" or "Anonymous" are set in the Caller ID/Name field, the Caller ID is restricted and the value in the Presentation field is ignored.
4. Repeat steps 2 and 3 for each VoIP gateway port.
5. Click the **Submit** button to save your changes.
6. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.

Table 5-22: Caller ID ini File Parameter

Parameter Name in ini File	Parameter Format
CallerDisplayInfoX	CallerDisplayInfo<channel> = <Caller ID string>,<Restriction> 0 = Not restricted (default). 1 = Restricted. For example: CallerDisplayInfo0 = Susan C.,0 CallerDisplayInfo2 = Mark M.,1 Note 1: The numbering of channels starts with 0. Note 2: This parameter can appear up to eight times for MP-108, and up to 24 times for MP-124.

5.8.8.4 Call Forward

The VoIP gateway allows you to forward incoming IP→Tel calls (using 302 response) based on the VoIP gateway port to which the call is routed (applicable only to FXS gateways).

The Call Forwarding Table is applicable only if the Call Forward feature is enabled. To enable Call Forward set 'Enable Call Forward' to 'Enable' in the 'Supplementary Services' screen, or 'EnableForward=1' in the ini file (refer to Table 5-6).

➤ To configure the Call Forward table, take these 4 steps:

1. Open the 'Call Forward Table' screen (**Protocol Management** menu > **Endpoint Settings** submenu > **Call Forward** option); the 'Call Forward Table' screen is displayed.

Figure 5-24: Call Forwarding Table Screen

Call Forward Table				
Gateway Port	Forward Type	Forward to Phone Number	Time for No Reply	Forward
Port 1	On busy	201		
Port 2	On busy	201		
Port 3	Immediate	202@10.2.1.1		
Port 4	Not in use			
Port 5	No reply	203	30	

2. Configure the Call Forward parameters for each port according to the table below.
3. Click the **Submit** button to save your changes.
4. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.

Table 5-23: Call Forward Table

Parameter	Description
Forward Type	Not in use [0] = Don't forward incoming calls (default). On Busy [1] = Forward incoming calls when the gateway port is busy. Immediate [2] = Forward any incoming call to the Phone number specified. No reply [3] = Forward incoming calls that are not answered with the time specified in the 'Time for No Reply Forward' field. On busy or No reply [4] = Forward incoming calls when the port is busy or when calls are not answered after a configurable period of time. Do Not Disturb [5] = Immediately reject incoming calls.
Forward to Phone Number	Enter the telephone number or URL (number@IP address) to which the call is forwarded. Note: If this field only contains telephone number and Proxy isn't used, the 'forward to' phone number must be specified in the 'Tel to IP Routing' table of the forwarding gateway.
Time for No Reply Forward	If you have set the Forward Type for this port to no reply , enter the number of seconds the VoIP gateway waits before forwarding the call to the phone number specified.
Parameter Name in <i>ini</i> File	Parameter Format
FwdInfo_x	FwdInfo_<Gateway Port Number (0 to 23)> = <Forward Type>, <Forwarded SIP User Identification>, <Timeout (in seconds) for No Reply> For example: FwdInfo_0 = 1,1001 FwdInfo_1 = 1,2003@10.5.1.1 FwdInfo_2 = 3,2005,30 Note 1: The numbering of gateway ports starts with 0. Note 2: This parameter can appear up to 24 times for MP-124.

5.8.8.5 Caller ID Permissions

The Caller ID Permission table is used to enable or disable (per port) the Caller ID generation (for FXS gateways) and detection (for FXO gateways). If a port isn't configured, its Caller ID generation / detection are determined according to the global parameter 'EnableCallerID' (described in [Table 5-6](#)).

➤ **To configure the Caller ID Permission Table, take these 5 steps:**

1. Open the 'Caller ID Permission' screen (**Protocol Management** menu > **Endpoint Settings** > **Caller ID Permission** option); the 'Caller ID Permission' screen is displayed.

Figure 5-25: MP-1xx FXS Caller ID Permission Screen

Generate Caller ID to Tel	
Gateway Port	Caller ID
Port 1	Disable
Port 2	Enable
Port 3	Enable
Port 4	
Port 5	
Port 6	
Port 7	
Port 8	

2. In the 'Caller ID' field, select one of the following:
 - Enable – Enables Caller ID generation (FXS) or detection (FXO) for the specific port.
 - Disable – Caller ID generation (FXS) or detection (FXO) for the specific port is disabled.
 - Empty – Caller ID generation (FXS) or detection (FXO) for the specific port is determined according to the parameter 'EnableCallerID' (described in [Table 5-6](#)).
3. Repeat step 2 for each port.
4. Click the **Submit** button to save your changes.
5. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-24: Authentication *ini* File Parameter

Parameter Name in <i>ini</i> File	Parameter Format
EnableCallerID_X	EnableCallerID_<Port> = <Caller ID> Caller ID: 0 = Disabled (default). 1 = Enabled. If not configured, use the global parameter 'EnableCallerID'. Note 1: The numbering of ports starts with 0. Note 2: This parameter can appear up to eight times for MP-108, and up to 24 times for MP-124.

5.8.9 Configuring the FXO Parameters

Use this screen to configure the gateway's specific FXO parameters.

➤ **To configure the FXO parameters, take these 4 steps:**

1. Open the 'FXO Settings' screen (**Protocol Management** menu > **FXO**); the 'FXO Settings' screen is displayed.

Figure 5-26: FXO Settings Screen

FXO Settings	
Dialing Mode	One Stage
Waiting for Dial Tone	No
Time to Wait before Dialing [msec]	
Ring Detection Timeout [sec]	
Reorder Tone Duration [sec]	
Answer Supervision	No
Rings before Detecting Caller ID	0
Send Metering Message to IP	No

2. Configure the FXO parameters according to [Table 5-25](#).
3. Click the **Submit** button to save your changes.
4. To save the changes so they are available after a power fail refer to [Section 5.12](#) on page 139.

Table 5-25: FXO Parameters (continues on pages 99 to 100)

Parameter	Description
Dialing Mode [IsTwoStageDial]	One Stage [0] = One-stage dialing. Two Stage [1] = Two-stage dialing (default). Used for IP→MP-10x/FXO gateways calls. If two-stage dialing is enabled, then the FXO gateway seizes one of the PSTN/PBX lines without performing any dial, the remote User is connected over IP to PSTN/PBX, and all further signaling (dialing and Call Progress Tones) is performed directly with the PBX without the gateway's intervention. If one-stage dialing is enabled, then the FXO gateway seizes one of the available lines (according to Channel Select Mode parameter), and dials the destination phone number received in INVITE message. Use the 'Waiting For Dial Tone' parameter to specify whether the dialing should come after detection of dial tone, or immediately after seizing of the line.

Table 5-25: FXO Parameters (continues on pages 99 to 100)

Parameter	Description
Waiting For Dial Tone [IsWaitForDialTone]	No [0] = Don't wait for dial tone. Yes [1] = Wait for dial tone (default). Used for IP→MP-1xx/FXO gateways, when 'One Stage Dialing' is enabled. If "wait for dial tone" is enabled, the FXO gateway dials the phone number (to the PSTN/PBX line) only after it detects a dial tone. Note 1: The correct dial tone parameters should be configured in the Call Progress Tones file. Note 2: It can take the gateway 1 to 3 seconds to detect a dial tone (according to the dial tone configuration in the Call Progress Tones file). If 'Waiting For Dial Tone' is disabled, the FXO gateway immediately dials the phone number after seizing the PSTN/PBX line, without 'listening' to dial tone.
Time to Wait before Dialing [msec] [FXOWaitForDialTime]	Delay (in milliseconds) between the time the line is seized and dialing is begun. The default is 1000 msec. Note: Applicable only to MP-10x/FXO for single stage dialing, when waiting for dial tone is disabled.
Ring Detection Timeout [sec] [FXOBetweenRingTime]	Note: Applicable only to MP-10x/FXO gateways for Tel→IP calls. The Ring Detection timeout is used differently for normal and for automatic dialing. If automatic dialing is not used, and if Caller ID is enabled, then the FXO gateway seizes the line after detection of the second ring signal (allowing detection of caller ID, sent between the first and the second rings). If the second ring signal doesn't arrive for "Ring Detection Timeout" the gateway doesn't initiate a call to IP. When automatic dialing is used, the FXO gateway initiates a call to IP when ringing signal is detected. The FXO line is seized only if the remote IP party answers the call. If the remote party doesn't answer the call and the ringing signal stops for "Ring Detection Timeout", the FXO gateway Releases the IP call. Usually set to a value between 5 to 8. The default is 8 seconds.
Reorder Tone Duration [sec] [TimeForReorderTone]	Busy or Reorder tone duration (seconds) the FXO gateway plays before releasing the line. The valid range is 0 to 100. The default is 10 seconds. Usually, after playing a Reorder / Busy tone for the specified duration, the FXS gateway, starts playing an Offhook Warning tone. Note 1: Selection of Busy or Reorder tone is performed according to the release cause received from IP. Note 2: Refer also to the parameter 'CutThrough' (described in Table 5-5).
Answer Supervision [EnableVoiceDetection]	Yes [1] = FXO gateway sends 200 OK (to INVITE) message when speech/fax/modem is detected. No [0] = 200 OK is sent immediately after the FXO gateway finishes dialing (default). Note 1: To activate this feature set "DSPVersionTemplateName" parameter to 2 or 3. Usually this feature is used only with early media establish voice path before the call is answered. Note 2: This feature is applicable only to 'One Stage' dialing.
Rings before Detecting Caller ID [RingsBeforeCallerID]	Sets the number of rings before the gateway starts detection of Caller ID (FXO only). 0 [0]= Before first ring. 1 [1]= After first ring (default). 2 [2]= After second ring.
Send Metering 2IP [Send Metering Message to IP]	No [0] = Disabled (default). Yes [1] = FXO gateways send a metering tone Info message to IP on detection of 12/16 kHz metering pulse. FXS gateways generate the 12/16 kHz metering tone on reception of a metering message. Note 1: Suitable (12 kHz or 16 kHz) <i>coeff</i> file must be used for both FXS and FXO gateways. The 'MeteringType' parameter must be defined in both FXS/FXO gateways. Note 2: The proprietary metering tone Info message is shown in Section 8.8 on page 159.

5.8.10 Protocol Management *ini* File Parameters

Table 5-26 describes the SIP Protocol Management parameters that can only be configured via the *ini* file.

Table 5-26: Protocol Management, *ini* File Parameters (continues on pages 101 to 102)

<i>ini</i> File Parameter Name	Valid Range and Description
SubscriptionMode	Determines the method the gateway uses to subscribe to an MWI server. 0 (Per endpoint) = Each endpoint subscribes separately. This method is usually used for FXS gateways (default). 1 (Per gateway) = Single subscription for the entire gateway. This method is usually used for FXO gateways.
EnablePtime	0 = Remove the ptime header from SDP. 1 = Include the ptime header in SDP (default).
EnableRPIheader	Enable Remote-Party-ID Headers for calling and called numbers for Tel→IP calls. 0 = Disable (default). 1 = RPI (Remote-Party-ID) headers are generated in SIP INVITE message for both called and calling numbers.
IsUserPhoneInFrom	0 = Doesn't use ";user=phone" string in From header (default). 1 = ";user=phone" string is part of the From header.
EnableDID	Enables Japan NTT 'Modem' Direct Inward Dialing (DID) support. FXS gateways can be connected to Japan's NTT PBX using 'Modem' DID lines. These DID lines are used to deliver a called number to the PBX (applicable to FXS gateways). The DID signal can be sent alone or combined with an NTT Caller ID signal.
EnableDID_X	Enables generation of Japan NTT Modem DID signal per port. EnableDID_<Port> = <Modem DID> Modem DID: 0 = Disabled (default). 1 = Enabled. If not configured, use the global parameter 'EnableDID'. Note: Applicable only to MP-1xx/FXS gateways.
FarEndDisconnectSilence Threshold	Threshold of the packet count (in percents), below which is considered silence by the media gateway. The valid range is 1 to 100. The default is 8%. Note: Applicable only if silence is detected according to packet count (FarEndDisconnectSilenceMethod = 1).
T38UseRTPPort	Defines that the T.38 packets are sent / received using the same port as RTP packets. 0 = Use the RTP port +2 to send / receive T.38 packets (default). 1 = Use the same port as the RTP port to send / receive T.38 packets.
DisableAutoDTMFmute	Enables / disables the automatic mute of DTMF digits when out-of-band DTMF transmission is used. 0 = Auto mute is used (default). 1 = No automatic mute of in-band DTMF. When 'DisableAutoDTMFmute=1', the DTMF transport type is set according to the parameter 'DTMFTransportType' and the DTMF digits aren't muted if out-of-band DTMF mode is selected ('IsDTMFUsed=1'). This enables the sending of DTMF digits in-band (transparent of RFC 2833) in addition to out-of-band DTMF messages. Note: Usually this mode is not recommended.
DisconnectOnBusyTone	0 = Call isn't released (FXO gateway). 1 = Call is released (on FXO gateways) if busy or reorder (fast busy) tones are detected on the gateway's FXO port (default).

Table 5-26: Protocol Management, *ini* File Parameters (continues on pages 101 to 102)

<i>ini</i> File Parameter Name	Valid Range and Description
MeteringType	Defines the metering tone (12 kHz or 16 kHz) that is detected by FXO gateways and generated by FXS gateways. 0 = 12 kHz metering tone (default). 1 = 16 kHz metering tone. Note: Suitable (12 kHz or 16 KHz) <i>coeff</i> file must be used for both FXS and FXO gateways.
PolarityReversalType	Defines the voltage change slope during polarity reversal or wink. 0 = Soft (default). 1 = Hard. Note 1: Some Caller ID signals use reversal polarity and/or wink signals. In these cases it is recommended to set PolarityReversalType to 1 (Hard). Note 2: Applicable only to FXS gateways.
CurrentDisconnectDuration	Duration of the current disconnect pulse (in msec). The default is 900 msec. The range is 200 to 1500 msec. Applicable for both FXS and FXO gateways. Note: The FXO gateways' detection range is +/-200 msec of the parameter's value + 100. For example if CurrentDisconnectDuration = 200, the detection range is 100 to 500 msec.
CurrentDisconnectDefault Threshold	Determines the line voltage threshold which, when reached, is considered a current disconnect detection. Note: Applicable only to MP-10x/FXO gateways. The valid range is 0 to 20 Volts. The default value is 4 Volts.
TimeToSampleAnalogLine Voltage	Determines the frequency at which the analog line voltage is sampled (after offhook), for detection of the current disconnect threshold. Note: Applicable only to MP-10x/FXO gateways. The valid range is 100 to 2500 msec. The default value is 1000 msec.
AnalogCallerIDTimingMode	0 = Caller ID is generated between the first two rings (default). 1 = The gateway attempts to find an optimized timing to generate the Caller ID according to the selected Caller ID type. Note that when used with distinctive ringing, the Caller ID signal doesn't change the distinctive ringing timing. Note: Applicable only to FXS gateways.
EnableRAI	0 = Disable RAI (Resource Available Indication) service (default). 1 = Enable RAI service. If RAI is enabled, an SNMP 'acBoardCallResourcesAlarm' Alarm Trap is sent if gateway resources fall below a predefined (configurable) threshold.
RAIHighThreshold	High Threshold (in percentage) that defines the gateway's busy endpoints. The range is 0 to 100. The default value is 90%. When the percentage of the gateway's busy endpoints exceeds the value configured in High Threshold, the gateway sends an SNMP 'acBoardCallResourcesAlarm' Alarm Trap with a 'major' Alarm Status. Note: The gateway's available Resources are calculated by dividing the number of busy endpoints by the total number of available gateway endpoints.
RAILowThreshold	Low Threshold (in percentage) that defines the gateway's busy endpoints. The range is 0 to 100. The default value is 90%. When the percentage of the gateway's busy endpoints falls below the value defined in Low Threshold, the gateway sends an SNMP 'acBoardCallResourcesAlarm' Alarm Trap with a 'cleared' Alarm Status.
RAILoopTime	Time interval (in seconds) that the gateway checks for resource availability. The default is 10 seconds.

5.9 Advanced Configuration

Use this subdivided menu to set the gateway's advanced configuration parameters (for advanced users only).

5.9.1 Configuring the Network Settings

From the Network Settings page you can define:

- IP settings.
- NTP settings.
- SNMP settings.
- Syslog settings.
- RTP settings.
- Ethernet Ports Information (read-only).

➤ **To configure the Network Settings parameters, take these 4 steps:**

1. Open the 'Network Settings' screen (**Advanced Configuration** menu > **Network Settings**); the 'Network Settings' screen is displayed.

Figure 5-27: Network Settings Screen

Network Settings	
IP Settings	
IP Address	10.33.4.125
Subnet Mask	255.255.0.0
Default Gateway Address	10.33.0.1
DNS Primary Server IP	10.2.1.2
DNS Secondary Server IP	0.0.0.0
Enable DHCP	Disable
NAT IP Address	0.0.0.0
NTP Settings	
NTP Server IP Address	0.0.0.0
NTP UTC Offset	Hours 0 Minutes 0
NTP Update Interval	Hours 24 Minutes 0
Syslog Settings	
Syslog Server IP Address	10.33.2.11
Enable Syslog	Enable
SNMP Settings	
SNMP Managers Table	-->
Enable SNMP	Enable
RTP Settings	
RTP Base UDP Port	4000
RTP IP Diff Serv	0
RTP IP TOS	0
RTP IP Precedence	0
Ethernet Ports Information	
Port 1 Duplex Mode	Half Duplex
Port 1 Speed	100 mbps

2. Configure the Network Settings according to
3. .
4. Click the **Submit** button to save your changes.
5. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.



Note: Those parameters contained within square brackets are the names used to configure the parameters via the *ini* file.

Table 5-27: Network Setting Parameters (continues on pages 104 to 106)

Parameter	Description
IP Settings	
IP Address	IP address of the gateway. Enter the IP address in dotted format notation, for example 10.8.201.1. Note 1: A warning message is displayed (after pressing the button 'Submit') if the entered value is incorrect. Note 2: After changing the IP address and pressing the button 'Submit', a prompt appears indicating that for the change to take effect, the gateway is to be reset.
Subnet Mask	Subnet mask of the gateway. Enter the subnet mask in dotted format notation, for example 255.255.0.0 Note 1: A warning message is displayed (after pressing the button 'Submit') if the entered value is incorrect. Note 2: After changing the subnet mask and pressing the button 'Submit', a prompt appears indicating that for the change to take effect, the gateway is to be reset.
Default Gateway Address	IP address of the default gateway used by the gateway. Enter the IP address in dotted format notation, for example 10.8.0.1. Note 1: A warning message is displayed (after pressing the button 'Submit') if the entered value is incorrect. Note 2: After changing the default gateway IP address and pressing the button 'Submit', a prompt appears indicating that for the change to take effect, the gateway is to be reset. For detailed information on multiple routers support, refer to Section 5.9.1.2 on page 112.
DNS Primary Server IP [DNSPriServerIP]	IP address of the primary DNS server. Enter the IP address in dotted format notation, for example 10.8.2.255. Note: To use Fully Qualified Domain Names (FQDN) in the Tel to IP Routing table, you must define this parameter.
DNS Secondary Server IP [DNSSecServerIP]	IP address of the second DNS server. Enter the IP address in dotted format notation, for example 10.8.2.255.

Table 5-27: Network Setting Parameters (continues on pages 104 to 106)

Parameter	Description
Enable DHCP [DHCPEnable]	Disable [0] = Disable DHCP support on the gateway (default). Enable [1] = Enable DHCP support on the gateway. After the gateway is powered up, it attempts to communicate with a BootP server. If a BootP server is not responding and if DHCP is enabled, then the gateway attempts to get its IP address and other network parameters from the DHCP server. Note: After you enable the DHCP Server (from the Web browser) follow this procedure: - Click the Submit button. - Save the configuration using the 'Save Configuration' button (before you reset the gateway). For information on how to save the configuration refer to Section 5.12 on page 139. - Reset the gateway <i>directly</i> (Web reset doesn't trigger the BootP/DHCP procedure and the parameter DHCPEnable reverts to '0'). Note that throughout the DHCP procedure the BootP/TFTP application must be deactivated. Otherwise, the MP-1xx receives a response from the BootP server instead of the DHCP server. Note: For additional information on DHCP refer to Section 10.2 on page 175. ini file note: The DHCPEnable is a special "Hidden" parameter. Once defined and saved in flash memory, its assigned value doesn't revert to its default even if the parameter doesn't appear in the <i>ini</i> file.
NAT IP Address [StaticNatIP]	Global gateway IP address. Define if static Network Address Translation (NAT) device is used between the gateway and the Internet.
NTP Settings	
For detailed information on NTP, refer to Section 5.9.1.3 on page 112.	
NTP Server IP Address [NTPServerIP]	IP address (in dotted format notation) of the NTP server. The default IP address is 0.0.0.0 (the internal NTP client is disabled).
NTP UTC Offset [NTPServerUTCOffset]	Defines the UTC (Universal Time Coordinate) offset (in seconds) from the NTP server. The default offset is 0. The offset range is -43200 to 43200 seconds.
NTP Update Interval [NTPUpdateInterval]	Defines the time interval (in seconds) the NTP client requests for a time update. The default interval is 86400 seconds (24 hours). The range is 0 to 214783647 seconds. Note: It isn't recommended to be set beyond one month (2592000 seconds).
SNMP Settings	
Enable SNMP [DisableSNMP]	Enable [0] = SNMP is enabled (default). Disable [1] = SNMP is disabled and no traps are sent.
For detailed information on configuring the SNMP Managers table, refer to Section 5.9.1.1 on page 107. For detailed information on the SNMP parameters that can only be configured via the <i>ini</i> file, refer to Table 5-30 on page 111. For detailed information on developing an SNMP-based program to manage your devices, refer to Section 179 on page 11.	
Syslog Settings	
Syslog Server IP address [SyslogServerIP]	IP address (in dotted format notation) of the computer you are using to run the Syslog Server. The Syslog Server is an application designed to collect the logs and error messages generated by the VoIP gateway. Note: The default UDP Syslog port is 514. For information on the Syslog refer to Section 9.2.2 on page 170.

Table 5-27: Network Setting Parameters (continues on pages 104 to 106)

Parameter	Description
Enable Syslog [EnableSyslog]	Enable [1] = Send the logs and error message generated by the gateway to the Syslog Server. If you select Enable, you must enter an IP address in the Syslog Server IP address field. Disable [0] = Logs and errors are not sent to the Syslog Server (default). Note 1: Syslog messages may increase the network traffic. Note 2: Logs can also be sent to the RS-232 serial port (refer to Section 9.2 on page 170). Note 3: To configure the Syslog logging levels use the parameter 'Debug Level'.
RTP Settings	
RTP Base UDP Port [BaseUDPPort]	Lower boundary of UDP port used for RTP, RTCP (Real-Time Control Protocol) (RTP port + 1) and T.38 (RTP port + 2). The upper boundary is the Base UDP Port + 10 * (number of gateway's channels). The range of possible UDP ports is 4000 to 64000. The default base UDP port is 6000. For example: If the Base UDP Port is set to 6000 (the default) then: The first channel uses the following ports: RTP 6000, RTCP 6001 and T.38 6002, the second channel uses: RTP 6010, RTCP 6011 and T.38 6012, etc. Note: If RTP Base UDP Port is not a factor of 10, the following message is generated: "invalid local RTP port". For detailed information on the default RTP/RTCP/T.38 port allocation refer to the Section C.3 on page 210.
RTP IP Diff Serv [IPDiffServ]	DSCP values can be from 0 to 63 (default = 0) Diff Serv Code Point (DSCP) value that is assigned to the RTP packets. The DSCP value is used by DiffServ compatible routers to prioritize how packets are sent. By prioritizing packets, the DiffServ routers can minimize the transmission delays for time sensitive packets such as VoIP packets. If enter a Diff Serv value, this value is used instead of the RTP IP TOS and RTP IP Precedence values.
RTP IP TOS [IPTOS]	Value that is assigned to IP Type Of Service (TOS) field in the IP header for all RTP packets sent by the VoIP gateway. You can enter a value from 0 to 15. The default value is 0.
RTP IP Precedence [IPPrecedence]	Value that is assigned to the IP Precedence field in the IP header for all RTP packets sent by the VoIP gateway. You can enter a value from 0 to 7. The default value is 0.
Ethernet Ports Information	
Port 1 Duplex Mode	Shows the Duplex mode the Ethernet port is using (Half Duplex or Full Duplex). This is a read-only parameter.
Port 1 Speed	Shows the speed, in Mbps, that the Ethernet port is using (10 Mbps or 100 Mbps). This is a read-only parameter.

5.9.1.1 Configuring the SNMP Managers Table

The SNMP Managers table allows you to configure the attributes of up to five SNMP managers.

➤ **To configure the SNMP Managers Table, take these 6 steps:**

1. Access the 'Network Settings' screen (**Advanced Configuration** menu > **Network Settings**); the 'Network Settings' screen is displayed (Figure 5-27).
2. Open the SNMP Managers Table screen by clicking the arrow sign (→) to the right of the SNMP Managers Table label; the SNMP Managers Table screen is displayed (Figure 5-28).
3. Configure the SNMP managers parameters according to Table 5-28 below.
4. Click the **Submit** button to save your changes.
5. Click the **Close Window** button.
6. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.

Figure 5-28: SNMP Managers Table Screen

SNMP Managers Table*			
	IP Address	Trap Port	Trap Enable
☐ SNMP Manager 1	0.0.0.0	162	Enable
☐ SNMP Manager 2	0.0.0.0	162	Enable
☐ SNMP Manager 3	0.0.0.0	162	Enable
☐ SNMP Manager 4	0.0.0.0	162	Enable
☐ SNMP Manager 5	0.0.0.0	162	Enable



Note: If you clear a checkbox and click **Submit**, all settings in the same row revert to their defaults.

Table 5-28: SNMP Managers Table Parameters

Web Parameter Name	ini File Parameter Name
Checkbox [SNMPManagerIsUsed_x]	Up to five parameters, each determines the validity of the parameters (IP address and port number) of the corresponding SNMP Manager used to receive SNMP traps. Checkbox cleared [0] = Disabled (default) Checkbox selected [1] = Enabled
IP Address [SNMPManagerTableIP_x]	Up to five IP addresses of remote hosts that are used as SNMP Managers. The device sends SNMP traps to these IP addresses. Enter the IP address in dotted format notation, for example 108.10.1.255. Note: The first entry (out of the five) replaces the obsolete parameter SNMPManagerIP.

Trap Port [SNMPManagerTrapPort_x]	Up to five parameters used to define the Port numbers of the remote SNMP Managers. The device sends SNMP traps to these ports. Note: The first entry (out of the five) replaces the obsolete parameter SNMPTrapPort. The default SNMP trap port is 162 The SNMP trap port must be between 100 to 4000.
Trap Enable [SNMPManagerTrapSendingEnable_x]	Up to five parameters, each determines the activation/deactivation of sending traps to the corresponding SNMP Manager. Disable [0] = Sending is disabled Enable [1] = Sending is enabled (default)

Table 5-29 describes the board parameters that can only be configured via the *ini* file.

Table 5-29: Board, *ini* File Parameters (continues on pages 108 to 110)

<i>ini</i> File Parameter Name	Valid Range and Description
LifeLineType	The Lifeline is activated on: 0 = Power down (default) 1 = Power down or when link is down (physical disconnect) 2 = Power down or when link is down or on network failure (logical link disconnect) Note: To enable Lifeline switching on network failure, LAN watch dog must be activated (EnableLANWatchDog=1).
DSPVersionTemplateNumber	0 = Firmware DSP version supports PCM/ADPCM, G723 and G729A Coders (default). 1 = Firmware DSP version supports PCM/ADPCM. 2 = Same as "0" but with voice and energy detectors. 3 = Same as "1" but with voice and energy detectors. Usually DSP templates 2 or 3 should be used. These templates are required for the FXO gateway Answer and Disconnect supervision features.
EnableDiagnostics	0 = No diagnostics (default). 1 = Perform diagnostics.
WatchDogStatus	0 = Disable gateway's watch dog. 1 = Enable gateway's watch dog (default).
DisableRS232	0 = RS-232 serial port is enabled (default) 1 = RS-232 serial port is disabled To enable sending of all log and error messages to the RS-232 serial port, define: "EnableSyslog = 0" and "DisableRS232 = 0"
DisableWebTask	0 = Enable Web management (default) 1 = Disable Web management
ResetWebPassword	Enables resetting to default of Web password to: Username: "Admin" Password: "Admin"
DisableWebConfig	0 = Enable changing parameters from Web (default) 1 = Operate Web server in "read only" mode
HTTPport	HTTP port used for Web management (default = 80)
EthernetPhyConfiguration	0 = 10 Base-T half-duplex. 1 = 10 Base-T full-duplex. 2 = 100 Base-TX half-duplex. 3 = 100 Base-TX full-duplex. 4 = Auto-Negotiate (Default). Note: Auto-Negotiate falls back to half-duplex mode (HD) when the opposite port is not in auto-negotiate, but the speed (10 Base-T, 100 Base -TX) in this mode is always configured correctly.

Table 5-29: Board, *ini* File Parameters (continues on pages 108 to 110)

<i>ini</i> File Parameter Name	Valid Range and Description
DisableNAT	Enables / disables the Network Address Translation (NAT) mechanism. 0 = Enabled. 1 = Disabled (default). Note: The compare operation that is performed on the IP address is enabled by default and is controlled by the parameter 'EnableIPAddrTranslation'. The compare operation that is performed on the UDP port is disabled by default and is controlled by the parameter 'EnableUDPPortTranslation'.
EnableIPAddrTranslation	0 = Disable IP address translation. 1 = Enable IP address translation (default). When enabled, the gateway compares the source IP address of the first incoming packet, to the remote IP address stated in the opening of the channel. If the two IP addresses don't match, the NAT mechanism is activated. Consequently, the remote IP address of the outgoing stream is replaced by the source IP address of the first incoming packet. Note: The NAT mechanism must be enabled for this parameter to take effect (DisableNAT = 0).
EnableUDPPortTranslation	0 = Disable UDP port translation (default). 1 = Enable UDP port translation. When enabled, the gateway compares the source UDP port of the first incoming packet, to the remote UDP port stated in the opening of the channel. If the two UDP ports don't match, the NAT mechanism is activated. Consequently, the remote UDP port of the outgoing stream is replaced by the source UDP port of the first incoming packet. Note: The NAT mechanism and the IP address translation must be enabled for this parameter to take effect (DisableNAT = 0, EnableIPAddrTranslation = 1).
HeartBeatDestIP	Destination IP address (in dotted format notation) to which the gateway sends proprietary UDP 'ping' packets. The default IP address is 0.0.0.0.
HeartBeatDestPort	Destination UDP port to which the heartbeat packets are sent. The range is 0 to 64000. The default is 0.
HeartBeatIntervalmsec	Delay (in msec) between consecutive heartbeat packets. 10 = 100000. -1 = disabled (default).
BootP and TFTP Parameters	
IniFileURL	Specifies the name of the <i>ini</i> file and the location of the TFTP server from which the gateway loads the <i>ini</i> and configuration files. For example: tftp://192.168.0.1/filename tftp://192.10.77.13/config<MAC> Note: The optional string "<MAC>" is replaced with the gateway's MAC (Media Access Control) address. Therefore, the gateway requests an <i>ini</i> file name that contains its MAC address. This option enables loading different configurations for specific gateways.
CmpFileURL	Specifies the name of the <i>cmp</i> file and the location of the TFTP server from which the gateway loads a new <i>cmp</i> file and updates itself. For example: tftp://192.168.0.1/filename Note 1: When this parameter is set in the <i>ini</i> file, the gateway always loads the <i>cmp</i> file after it is reset. Note 2: The version of the loaded <i>cmp</i> file isn't checked.

Table 5-29: Board, *ini* File Parameters (continues on pages 108 to 110)

<i>ini</i> File Parameter Name	Valid Range and Description
The BootP parameters are special "Hidden" parameters. Once defined and saved in the flash memory, they are used even if they don't appear in the <i>ini</i> file.	
BootPRetries	BootP retries. Sets the number of BootP requests the device sends during start-up. The device stops sending BootP requests when either BootP reply is received or Number of Retries is reached. 1 = 1 BootP retry, 1 second. 2 = 2 BootP retries, 3 second. 3 = 3 BootP retries, 6 second (default). 4 = 10 BootP retries, 30 second. 5 = 20 BootP retries, 60 second. 6 = 40 BootP retries, 120 second. 7 = 100 BootP retries, 300 second. 15 = BootP retries indefinitely. Note: This parameter only takes effect from the next reset of the device.
BootPSelectiveEnable	Enables the Selective BootP mechanism. 1 = Enabled. 0 = Disabled (default). The Selective BootP mechanism enables the gateway's integral BootP client to filter unsolicited BootP/DHCP replies (accepts only BootP replies that contain the text "AUDC" in the vendor specific information field). This option is useful in environments where enterprise BootP/DHCP servers provide undesired responses to the gateway's BootP requests. Note: When working with DHCP (EnableDHCP=1) the selective BootP feature must be disabled.
BootPDelay	The interval between the device's startup and the first BootP/DHCP request that is issued by the device. 1 = 1 second (default). 2 = 3 second. 3 = 6 second. 4 = 30 second. 5 = 60 second. Note: This parameter only takes effect from the next reset of the device.
ExtBootPReqEnable	0 = Disable (default). 1 = Enable extended information to be sent in BootP request. If enabled, the device uses the vendor specific information field in the BootP request to provide device-related initial startup information such as board type, current IP address, software version, etc. For a full list of the vendor specific Information fields refer to Section 10.3.2 on page 176. The BootP/TFTP configuration utility displays this information in the 'Client Info' column (refer to Figure B-1). Note: This option is not available on DHCP servers.

Table 5-30 describes the SNMP parameters that can only be configured via the *ini* file.

Table 5-30: SNMP *ini* File Parameters

<i>ini</i> File Parameter Name	Description
SNMPPort	The device's local UDP port used for SNMP Get/Set commands. The range is 100 to 3999. The default port is 161.
SNMPTrustedMGR_x	Up to five IP addresses of remote trusted SNMP managers from which the SNMP agent accepts and processes get and set requests. Note 1: If no values are assigned to these parameters any manager can access the device. Note 2: Trusted managers can work with <i>all</i> community strings.
SNMP Community String Parameters	
SNMPReadOnlyCommunityString_x	Read-only community string (up to 19 chars). The default string is "public".
SNMPReadWriteCommunityString_x	Read-write community string (up to 19 chars). The default string is "private".
SNMPTrapCommunityString_x	Community string used in traps (up to 19 chars). The default string is "trapuser".
SetCommunityString Note: Obsolete parameter, use SNMPReadWriteCommunityString_x instead.	SNMP community string (up to 19 chars). Default community string for read "public", for set & get "private".
SNMPManagerIP Note: Obsolete parameter, use SNMPManagerTableIP_x instead.	IP address (in dotted format notation) for the computer that is used as the <i>first</i> SNMP Manager. The SNMP Manager is a device that is used for receiving SNMP Traps. Note 1: To enable the device to send SNMP Traps, set the <i>ini</i> file parameter SNMPManagerIsUsed to 1. Note 2: If you want to use more than one SNMP manger, ignore this parameter and use the parameters 'SNMPManagerTableIP_x' instead.

5.9.1.2 Multiple Routers Support

Multiple routers support is designed to assist the media gateway when it operates in a multiple routers network. The gateway learns the network topology by responding to ICMP redirections and caches them as routing rules (with expiration time).

When a set of routers operating within the same subnet serve as gateways to that network and intercommunicate using a dynamic routing protocol (such as OSPF, etc.), the routers can determine the shortest path to a certain destination and signal the remote host the existence of the better route. Using multiple router support the media gateway can utilize these router messages to change its next hop and establish the best path.

Note: Multiple Routers support is an integral feature that doesn't require configuration.

5.9.1.3 Simple Network Time Protocol Support

Simple Network Time Protocol (SNTP) client functionality generates requests and reacts to the resulting responses using the NTP version 3 protocol definitions (according to RFC 1305). Through these requests and responses, the NTP client is able to synchronize the system time to a time source within the network, thereby eliminating any potential issues should the local system clock 'drift' during operation. By synchronizing time to a network time source, traffic handling, maintenance, and debugging actions become simplified for the network administrator.

The NTP client follows a simple process in managing system time; the NTP client requests an NTP update, receives an NTP response, and updates the local system clock based on a configured NTP server within the network.

The client requests a time update from a specified NTP server at a specified update interval. In most situations this update interval should be every 24 hours based on when the system was restarted. The NTP server identity (as an IP address) and the update interval are configurable parameters that can be specified either in the *ini* file (NTPServerIP, NTPUpdateInterval respectively) or via an SNMP MIB object.

When the client receives a response to its request from the identified NTP server it must be interpreted based on time zone, or location, offset that the system is to a standard point of reference called the Universal Time Coordinate (UTC). The time offset that the NTP client should use is a configurable parameter that can be specified either in the *ini* file (NTPServerUTCOffset) or via an SNMP MIB object.

If required, the clock update is performed by the client as the final step of the update process. The update is done in such a way as to be transparent to the end users. For instance, the response of the server may indicate that the clock is running too fast on the client. The client slowly robs bits from the clock counter in order to update the clock to the correct time. If the clock is running too slow, then in an effort to catch the clock up, bits are added to the counter, causing the clock to update quicker and catch up to the correct time. The advantage of this method is that it does not introduce any disparity in the system time, that is noticeable to an end user, or that could corrupt call timeouts and timestamps.

5.9.2 Configuring the Channel Settings

The Channels Settings screen enables you to set the VoIP gateway channel parameters, such as Input and Output voice gain, Jitter buffer characteristics, Modem, Fax and DTMF transport modes. These parameters are applied to all MP-1xx channels.

Note that several Channels Settings parameters can be configured per call using profiles (refer to Section 5.8.5 on page 83).

➤ **To configure the Channel Settings parameters, take these 4 steps:**

1. Open the 'Channel Settings' screen (**Advanced Configuration** menu > **Channel Settings**); the 'Channel Settings' screen is displayed.
2. Configure the Channel Settings parameters according to [Table 5-31](#), [Table 5-32](#), [Table 5-33](#) and [Table 5-34](#).
3. Click the **Submit** button to save your changes.
4. To save the changes so they are available after a power fail refer to Section 5.12 on page 139.



Note 1: Those parameters contained within square brackets are the names used to configure the parameters via the *ini* file.

Note 2: Channel parameters are changeable on-the-fly. Changes take effect from next call.

Figure 5-29: Channel Settings, Voice Settings Parameters

Channel Settings	
Voice Settings	
Voice Volume (-32 to 31 dB)	1
Input Gain (-32 to 31 dB)	0
Silence Suppression	Enable
Echo Canceler	On
DTMF Transport Type	RFC2833 Relay DTMF
MF Transport Type	RFC2833 Relay MF
DTMF Volume (-31 to 0 dB)	-11
Enable Answer Detector	Disable
Answer Detector Activity Delay	0
Answer Detector Silence Time	10
Answer Detector Redirection	Disable
Answer Detector Sensitivity	0

Table 5-31: Channel Settings, Voice Settings Parameters

Parameter	Description
Voice Volume [VoiceVolume]	Voice gain control in dB. This parameter sets the level for the transmitted (IP→Tel) signal. You can enter a value from -32 to 31 dB. The default value is 0 dB.
Input Gain [InputGain]	PCM input gain control in dB. This parameter sets the level for the received (Tel→IP) signal. You can enter a value from -32 to 31 dB. The default value is 0 dB. Note: This parameter is intended for advanced users. Changing it affects other gateway functionalities.
Silence Suppression [EnableSilenceCompression] The parameter SCE is used to maintain backward compatibility.	Disable [0] = Silence Suppression disabled (default). Enable [1] = Silence Suppression enabled. Enable without adaptation [2] = A single silence packet is sent during silence period (applicable only to G.729). Silence Suppression is a method conserving bandwidth on VoIP calls by not sending packets when silence is detected. Note: If the selected coder is G.729, the following rules determine the value of the "annexb" parameter of the fmtp attribute in the SDP. EnableSilenceCompression = 0 → "annexb=no". EnableSilenceCompression = 1 → "annexb=yes". EnableSilenceCompression = 2 and IsCiscoSCEMode = 0 → "annexb=yes". EnableSilenceCompression = 2 and IsCiscoSCEMode = 1 → "annexb=no".
Echo Canceler [EnableEchoCanceller] The parameter ECE is used to maintain backward compatibility.	Off [0] = Echo Canceler disabled. On [1] = Echo Canceler enabled (default).
DTMF Transport Type [DTMFTransportType]	0 = Erase digits from voice stream, do not relay to remote. 2 = Digits remain in voice stream. 3 = Erase digits from voice stream, relay to remote according to RFC 2833. Note: This parameter is automatically updated if one of the following parameters is configured: IsDTMFUsed, TxDTMFOption or RxDTMFOption.
MF Transport Type [MFTransportType]	N/A.
DTMF Volume (-31 to 0 dB) [DTMFVolume]	DTMF level for regenerated digits to PSTN side (-31 to 0, corresponding to -31 dBm to 0 dBm in 1 dB steps, default = -11 dBm).
Enable Answer Detector [EnableAnswerDetector]	N/A.
Answer Detector Activity Delay [AnswerDetectorActivityDelay]	N/A.
Answer Detector Silence Time [AnswerDetectorSilenceTime]	N/A.
Answer Detector Redirection [AnswerDetectorRedirection]	N/A.
Answer Detector Sensitivity [AnswerDetectorSensitivity]	Determines the Answer Detector sensitivity. The range is 0 (most sensitive) to 2 (least sensitive). The default is 0.

Figure 5-30: Channel Settings, Fax/Modem/CID Parameters

Fax/Modem/CID Settings	
Fax Transport Mode	Disable
Caller ID Transport Type	DISABLE
Caller ID Type	Bellcore
V.21 Modem Transport Type	Disabled
V.22 Modem Transport Type	Disabled
V.23 Modem Transport Type	Disabled
V.32 Modem Transport Type	Disabled
V.34 Modem Transport Type	Disabled
Fax Relay Redundancy Depth	2
Fax Relay Enhanced Redundancy Depth	2
Fax Relay ECM Enable	Enable
Fax Relay Max Rate (bps)	14400
Fax/Modem Bypass Coder Type	G711Alaw
Fax/Modem Bypass Packing Factor	1
CNG Detector Mode	EVENT_ONLY

Table 5-32: Channel Settings, Fax/Modem/CID Parameters (continues on pages 115 to 116)

Parameter	Description
Fax Transport Mode [FaxTransportMode]	Fax Transport Mode that the gateway uses. You can select: Disable [0]. T.38 Relay [1] (default). Bypass [2]. Events Only [3] = N/A. Note: If parameter IsFaxUsed = 1, then FaxTransportMode is always set to 1 (T.38 relay).
Caller ID Transport Type [CallerIDTransportType]	N/A.
Caller ID Type [CallerIDType]	Defines one of the following standards for detection (FXO) and generation (FXS) of Caller ID signals. Bellcore [0] (default). ETSI [1]. NTT [2]. British [4]. DTMF ETSI [16]. Denmark [17]. India [18]. Brazil [19]. Note: The Caller ID signals are generated/detected between the first and the second rings.
V.21 Modem Transport Type [V21ModemTransportType]	N/A.
V.22 Modem Transport Type [V22ModemTransportType]	V.22 Modem Transport Type that the gateway uses. You can select: Transparent [0]. Relay [1] = N/A. Bypass [2] (default).

Table 5-32: Channel Settings, Fax/Modem/CID Parameters (continues on pages 115 to 116)

Parameter	Description
V.23 Modem Transport Type [V23ModemTransportType]	V.23 Modem Transport Type that the gateway uses. You can select: Transparent [0]. Relay [1] = N/A. Bypass [2] (default).
V.32 Modem Transport Type [V32ModemTransportType]	V.32 Modem Transport Type that the gateway uses. You can select: Transparent [0]. Relay [1] = N/A. Bypass [2] (default). Note: This option applies to V.32 and V.32bis modems.
V.34 Modem Transport Type [V34ModemTransportType]	V.34 Modem Transport Type that the gateway uses. You can select: Transparent [0]. Relay [1] = N/A. Bypass [2] (default). Note: This option applies to V.34 and V.90 modems.
Fax Relay Redundancy Depth [FaxRelayRedundancyDepth]	Number of times that each fax relay payload is retransmitted to the network. You can enter a value from 0 to 2. The default value is 0.
Fax Relay Enhanced Redundancy Depth [FaxRelayEnhancedRedundancyDepth]	Number of times that control packets are retransmitted when using the T.38 standard. You can enter a value from 0 to 4. The default value is 2.
Fax Relay ECM Enable [FaxRelayECMEnable]	Disable [0] = Error Correction Mode (ECM) mode is not used during fax relay. Enable [1] = ECM mode is used during fax relay (default).
Fax Relay Max Rate (bps) [FaxRelayMaxRate]	Maximum rate, in bps, at which fax relay messages are transmitted. You can select: 2400 [0] = 2.4 kbps. 4800 [1] = 4.8 kbps. 7200 [2] = 7.2 kbps. 9600 [3] = 9.6 kbps. 12000 [4] = 12.0 kbps. 14400 [5] = 14.4 kbps (default).
Fax/Modem Bypass Coder Type [FaxModemBypassCoderType]	Coder the gateway uses when performing fax/modem bypass. Usually, high-bit-rate coders such as G.711 should be used. You can select: G711 A-law 64 [0] (default). G711 μ -law [1]. G726 32 [4]. G726 40 [11].
Fax/Modem Bypass Packing Factor [FaxModemBypassM]	Number of (20 msec) coder payloads that are used to generate a fax/modem bypass packet. You can enter a value of 1, 2 or 3 coder payloads. The default value is 1 coder payload.
CNG Detector Mode [CNGDetectorMode]	Disable [0] = Don't detect CNG (default) Relay [1] = N/A. Event Only [2] = Detect CNG on caller side and start fax session (if IsFaxUsed=1) Usually T.38 fax session starts when the "preamble" signal is detected by the answering side. Some SIP gateways doesn't support the detection of this fax signal on the answering side, for these cases it is possible to configure the MP-1xx gateways to start the T.38 fax session when the CNG tone is detected by the originating side. However this mode is not recommended.

Figure 5-31: Channel Settings, RTP Parameters

RTP Settings	
Dynamic Jitter Buffer Minimum Delay	70
Dynamic Jitter Buffer Optimization Factor	7
RTP Redundancy Depth	0
Packing Factor	1
Basic RTP Packet Interval	DEFAULT
RTP Directional Control	Transmit-Receive
RFC 2833 TX Payload Type	96
RFC 2833 RX Payload Type	96
RFC 2198 Payload Type	104
Fax Bypass Payload Type	102
Enable RFC 3389 CN Payload Type	Disable
Analog Signal Transport Type	Ignore analog signals

Table 5-33: Channel Settings, RTP Parameters

Parameter	Description
Dynamic Jitter Buffer Minimum Delay [DJBufMinDelay]	Minimum delay for the Dynamic Jitter Buffer. You can enter a value from 0 to 150 milliseconds. The default delay is 70 milliseconds. Note: For more information on the Jitter Buffer, refer to Section 5.9.2.1 on page 120.
Dynamic Jitter Buffer Optimization Factor [DJBufOptFactor]	Dynamic Jitter Buffer frame error / delay optimization factor. You can enter a value from 0 to 13. The default factor is 7. Note 1: Set to 13 for data (fax & modem) calls. Note 2: For more information on the Jitter Buffer, refer to Section 5.9.2.1 on page 120.
RTP Redundancy Depth [RTPRedundancyDepth]	Enter [0] to disable the generation of redundant packets (default). Enter [1] to enable the generation of RFC 2198 redundancy packets.
Packing Factor [M]	N/A. Controlled internally by the gateway according to the selected coder.
Basic RTP Packet Interval [BasicRTPPacketInterval]	N/A. Controlled internally by the gateway according to the selected coder. Note: This parameter should not be used. Use the 'Coders' screen under 'Protocol Definition' instead.
RTP Directional Control [RTPDirectionControl]	N/A. Controlled internally by the gateway according to the selected coder.
RFC 2833 TX Payload Type [RFC2833TxPayloadType]	N/A. Use the <i>ini</i> file parameter RFC2833PayloadType instead.
RFC 2833 RX Payload Type [RFC2833RxPayloadType]	N/A. Use the <i>ini</i> file parameter RFC2833PayloadType instead.
RFC 2198 Payload Type [RFC2198PayloadType]	RTP redundancy packet payload type, according to RFC 2198. The range is 96-127. The default is 104. Applicable if "RTP Redundancy Depth=1"
Fax Bypass Payload Type [FaxBypassPayloadType]	Determines the fax bypass RTP dynamic payload type. The valid range is 96 to 120. The default value is 102.

Table 5-33: Channel Settings, RTP Parameters

Parameter	Description
Enable RFC 3389 CN Payload Type [EnableStandardSIDPayloadType]	Disable [0] = G.711 SID packets are sent in a proprietary method (default). Enable [1] = SID (comfort noise) packets are sent with the RTP SID payload type according to RFC 3389. Applicable to G.711 and G.726 coders.
Analog Signal Transport Type [AnalogSignalTransportType]	Ignore analog signals [0] = Hook-flash isn't transferred to the remote side (default). RFC 2833 analog signal relay [1] = Hook-flash is transferred via RFC 2833.

Figure 5-32: Channel Settings, Miscellaneous Parameters

Misc. Settings	
Min. Flash-Hook Detection Period [msec]	300
Max. Flash-Hook Detection Period [msec]	700

Table 5-34: Channel Settings, Miscellaneous Parameters

Parameter	Description
Min. Flash-Hook Detection Period [msec] [MinFlashHookTime]	Minimum threshold in msec + 50 msec for detection of hook-flash. Relevant only for MP-1xx/FXS gateways. 25 to 300, (default = 300).
Max. Flash-Hook Detection Period [msec] [FlashHookPeriod]	300 to 1500 (default 400) hook-flash time in msec. The parameter is used for hook-flash detection in MP-1xx/FXS and for hook-flash generation in MP-1xx/FXO gateways. Note: For FXO gateways, a constant of 90 msec must be added to the required hook-flash period. For example, to generate a 450 msec hook-flash, set 'FlashHookPeriod' to 540.

Table 5-35 describes the Channel parameters that can only be configured via the *ini* file.

Table 5-35: Channel Settings, *ini* File Parameters

<i>ini</i> File Parameter Name	Valid Range and Description
ECHybridLoss	0 = 6 dB (default) 1 = 9 dB 2 = 0 dB 3 = 3 dB Sets the four wire to two wire worst case Hybrid loss, the ratio between the signal level sent to the hybrid and the echo level returning from the hybrid.
FaxModemRelayVolume	-18 to -3, corresponding to -18 dBm to -3 dBm in 1 dB steps. (Default = -12 dBm) fax gain control.
T38ProtectionMode	0 = Use redundancy packets for protecting T.38 fax relay stream, (default) 1 = Use Forward Error Correction (FEC) algorithm to protect T.38 fax relay stream (isn't implemented)
MGCPDTMFDetectionPoint	0 = DTMF event is reported on the start of a detected DTMF digit. 1 = DTMF event is reported on the end of a detected DTMF digit (default). The parameter is used for out-of-band dialing (using SIP INFO messages).
DTMFDigitLength	Time in msec for generating DTMF tones to the PSTN side (if received in INFO). The default value is 100 msec.
DTMFInterDigitInterval	Time in msec between generated DTMFs to PSTN side (if received in INFO). The default value is = 100 msec.
TestMode	0 = CoderLoopback, encoder-decoder loopback inside DSP. 1 = PCMLoopback, loopback the incoming PCM to the outgoing PCM. 2 = ToneInjection, generates a 1000 Hz tone to outgoing PCM. 3 = NoLoopback, (default).
ModemBypassPayloadType	Modem Bypass dynamic payload type (range 0-127). The default value is 103.
DetFaxOnAnswerTone	0 = Starts T.38 procedure on detection of V.21 preamble (default). 1 = Starts T.38 Procedure on detection of CED fax answering tone.
FaxModemBypassBasicRtpPacketInterval	0 = set internally (default) 1 = 5 msec 2 = 10 msec 3 = 20 msec
NSEMode	Cisco compatible fax and modem bypass mode 0 = NSE disabled (default) 1 = NSE enabled Note 1: This feature can be used only if VxxModemTransportType=2 (Bypass) Note 2: If NSE mode is enabled the SDP contains the following line: "a=rtpmap:100 X-NSE/8000" Note 3: To use this feature: - The Cisco gateway must include the following definition: "modem passthrough nse payload-type 100 codec g711alaw". - Set the Modem transport type to Bypass mode ('VxxModemTransportType = 2') for all modems. - Configure the gateway parameter NSEPayloadType= 100 In NSE bypass mode the gateway starts using G.711 A-Law (default) or G.711 μ -Law, according to the parameter 'FaxModemBypassCoderType'. The payload type used with these G.711 coders is a standard one (8 for G.711 A-Law and 0 for G.711 μ -Law). The parameters defining payload type for the "old" AudioCodes' Bypass mode. 'FaxBypassPayloadType' and 'ModemBypassPayloadType' are not used with NSE Bypass. The bypass packet interval is selected according to the parameter 'FaxModemBypassBasicRtpPacketInterval'.
NSEPayloadType	NSE payload type for Cisco Bypass compatible mode. The valid range is 96-127. The default value is 105. Note: Cisco gateways usually use NSE payload type of 100.

Table 5-35: Channel Settings, *ini* File Parameters

<i>ini</i> File Parameter Name	Valid Range and Description
IsCiscoSCEMode	0 = There isn't a Cisco gateway at the remote side (default). 1 = There is a Cisco gateway at the remote side. When there is a Cisco gateway at the remote side, the local gateway must set the value of the "annexb" parameter of the fmtp attribute in the SDP to "no". This logic should be used if 'EnableSilenceCompression = 2' (enable without adaptation). In this case, Silence Suppression should be used on the channel but not declared in the SDP.

5.9.2.1 Dynamic Jitter Buffer Operation

Voice frames are transmitted at a fixed rate. If the frames arrive at the other end at the same rate, voice quality is perceived as good. In many cases, however, some frames can arrive slightly faster or slower than the other frames. This is called jitter (delay variation), and degrades the perceived voice quality. To minimize this problem, the gateway uses a jitter buffer. The jitter buffer collects voice packets, stores them and sends them to the voice processor in evenly spaced intervals.

The MP-1xx uses a dynamic jitter buffer that can be configured using two parameters:

- Minimum delay, 'DJBufMinDelay' (0 msec to 150 msec). Defines the starting jitter capacity of the buffer. For example, at 0 msec, there is no buffering at the start. At the default level of 70 msec, the gateway always buffers incoming packets by at least 70 msec worth of voice frames.
- Optimization Factor, 'DJBufOptFactor' (0 to 12, 13). Defines how the jitter buffer tracks to changing network conditions. When set at its maximum value of 12, the dynamic buffer aggressively tracks changes in delay (based on packet loss statistics) to increase the size of the buffer and doesn't decay back down. This results in the best packet error performance, but at the cost of extra delay. At the minimum value of 0, the buffer tracks delays only to compensate for clock drift and quickly decays back to the minimum level. This optimizes the delay performance but at the expense of a higher error rate.

The default settings of 70 msec Minimum delay and 7 Optimization Factor should provide a good compromise between delay and error rate. The jitter buffer "holds" incoming packets for 70 msec before making them available for decoding into voice. The coder polls frames from the buffer at regular intervals in order to produce continuous speech. As long as delays in the network do not change (jitter) by more than 70 msec from one packet to the next, there is always a sample in the buffer for the coder to use. If there is more than 70 msec of delay at any time during the call, the packet arrives too late. The coder tries to access a frame and is not able to find one. The coder must produce a voice sample even if a frame is not available. It therefore compensates for the missing packet by adding a Bad-Frame-Interpolation (BFI) packet. This loss is then flagged as the buffer being too small. The dynamic algorithm then causes the size of the buffer to increase for the next voice session. The size of the buffer may decrease again if the gateway notices that the buffer is not filling up as much as expected. At no time does the buffer decrease to less than the minimum size configured by the Minimum delay parameter.

Special Optimization Factor Value: 13

One of the purposes of the Jitter Buffer mechanism is to compensate for clock drift. If the two sides of the VoIP call are not synchronized to the same clock source, one RTP source generates packets at a lower rate, causing under-runs at the remote Jitter Buffer. In normal operation (optimization factor 0 to 12), the Jitter Buffer mechanism detects and compensates for the clock drift by occasionally dropping a voice packet or by adding a BFI packet.

Fax and modem devices are sensitive to small packet losses or to added BFI packets. Therefore to achieve better performance during modem and fax calls, the Optimization Factor should be set to 13. In this special mode the clock drift correction is performed less frequently - only when the Jitter Buffer is completely empty or completely full. When such condition occurs, the correction is performed by dropping several voice packets simultaneously or by adding several BFI packets simultaneously, so that the Jitter Buffer returns to its normal condition.

5.9.3 Restoring and Backing up the Gateway Configuration

The Configuration File screen enables you to restore (load a new *ini* file to the gateway) or to back up (make a copy of the VoIP gateway *ini* file and store it in a directory on your computer) the current configuration the gateway is using.

Back up your configuration if you want to protect your VoIP gateway programming. The backup *ini* file includes only those parameters that were modified and contain other than default values.

Restore your configuration if the VoIP gateway has been replaced or has lost its programming information, you can restore the VoIP gateway configuration from a previous backup or from a newly created *ini* file. To restore the VoIP gateway configuration from a previous backup you must have a backup of the VoIP gateway information stored on your computer.

➤ **To restore or back up the *ini* file:**

- Open the 'Configuration File' screen (**Advanced Configuration** menu > **Configuration File**); the 'Configuration File' screen is displayed.

Figure 5-33: Configuration File Screen

Configuration File

Get the *ini* file from the device to your computer

Get ini File

Send the *ini* file from your computer to the device

Browse...

Send ini File

The device will perform a 'Reset' after sending the *ini* file

➤ **To back up the *ini* file, take these 4 steps:**

1. Click the **Get ini File** button; the 'File Download' window opens.
2. Click the **Save** button; the 'Save As' window opens.
3. Navigate to the folder where you want to save the *ini* file.
4. Click the **Save** button; the VoIP gateway copies the *ini* file into the folder you selected.

➤ **To restore the *ini* file, take these 4 steps:**

1. Click the **Browse** button.
2. Navigate to the folder that contains the *ini* file you want to load.
3. Click the file and click the **Open** button; the name and path of the file appear in the field beside the Browse button.
4. Click the **Send ini File** button, and click **OK** in the prompt; the gateway is automatically reset (from the *cmp* version stored on the flash memory).


5.9.4 Regional Settings

The 'Regional Settings' screen enables you to set and view the gateway's internal date and time and to load to the gateway the following configuration files: Call Progress Tones, coefficient (different files for MP-1xx/FXS and MP-10x/FXO gateways) and Voice Prompts (currently not applicable to MP-1xx gateways). For detailed information on the configuration files refer to Section 6 on page 141.

➤ To configure the date and time of the MP-1xx, take these 3 steps:

1. Open the 'Regional Settings' screen (**Advanced Configuration** menu > **Regional Settings**); the 'Regional Settings' screen is displayed.

Figure 5-34: Regional Settings Screen

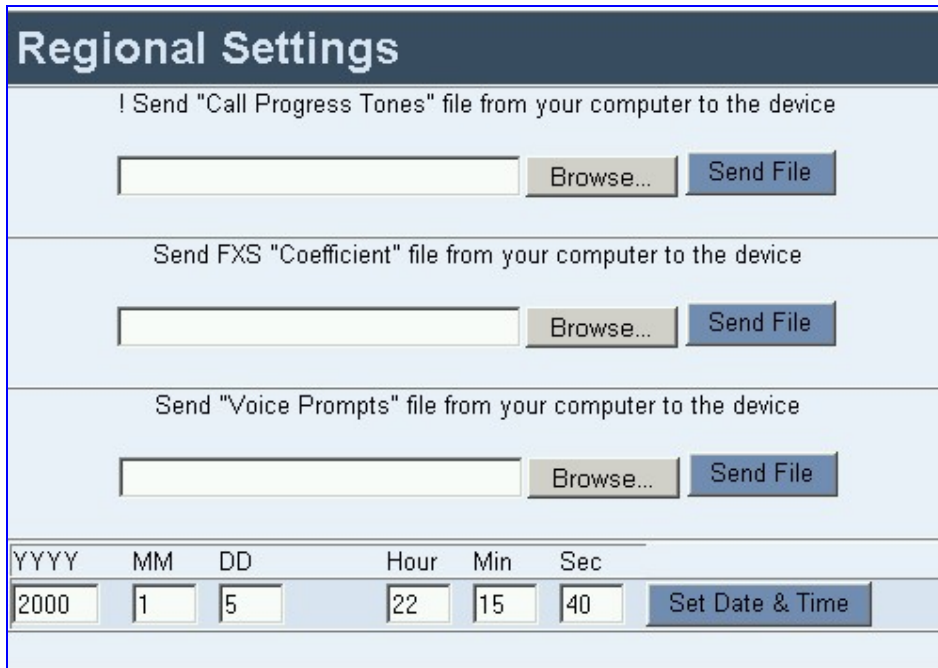

2. Enter the time and date where the gateway is installed.
3. Click the **Set Date & Time** button; the date and time are automatically updated.

Note that after performing a hardware reset, the date and time are returned to their defaults and should be updated.

➤ To load a configuration file to the VoIP gateway, take these 8 steps:

1. Open the 'Regional Settings' screen (**Advanced Configuration** menu > **Regional Settings**); the 'Regional Settings' screen is displayed (shown in Figure 5-34).
2. Click the **Browse** button adjacent to the file you want to load.
3. Navigate to the folder that contains the file you want to load.
4. Click the file and click the **Open** button; the name and path of the file appear in the field beside the **Browse** button.
5. Click the **Send File** button that is next to the field that contains the name of the file you want to load. An exclamation mark in the screen section indicates that the file's loading doesn't take effect on-the-fly (e.g., CPT file).
6. Repeat steps 2 to 5 for each file you want to load.



- Note 1:** Saving a configuration file to flash memory may disrupt traffic on the MP-1xx. To avoid this, disable all traffic on the device before saving to flash memory.
- Note 2:** A device reset is required to activate a loaded CPT file.

7. To save the loaded auxiliary files so they are available after a power fail refer to Section 5.12 on page 139.
8. To reset the MP-1xx refer to Section 5.12 on page 139.

5.9.5 Changing the MP-1xx Username and Password

To prevent unauthorized access to the MP-1xx, it is recommended that you change the username and password (both are case-sensitive) that are used to access the Web Interface.

➤ **To change the username and password, take these 5 steps:**

1. Open the 'Change Password' screen (**Advanced Configuration** menu > **Change Password**); the 'Change Password' screen is displayed.

Figure 5-35: Change Password Screen

Change Password	
User Name	Admin
New Password	
Confirm Password	

2. In the 'User Name' and 'Password' fields, enter the new username and the new password respectively. Note that the username and password can be a maximum of 7 case-sensitive characters.
3. In the 'Confirm Password' field, reenter the new password.
4. Click the **Change Password** button; the new username and password are applied and the 'Enter Network Password' screen appears, shown in Figure 5-1 on page 41.
5. Enter the updated username and password in the 'Enter Network Password' screen.

5.10 Status & Diagnostics

Use this subdivided menu to view and monitor the gateway's channels, Syslog messages, hardware / software product information, and to assess the gateway's statistics and IP connectivity information.

5.10.1 Gateway Statistics

Use the screens under Gateway Statistics to monitor real-time activity such as IP Connectivity information, call details and call statistics, including the number of call attempts, failed calls, fax calls, etc.

Note: The Gateway Statistics screens doesn't refresh automatically. To view updated information re-access the screen you require.

5.10.1.1 IP Connectivity

The IP Connectivity screen provides you with an online read-only network diagnostic connectivity information on all destination IP addresses configured in the Tel to IP Routing table.

Note: This information is available only if the parameter 'AltRoutingTel2IPEnable' (described in [Table 5-10](#)) is set to 1 (Enable) or 2 (Status Only).



Note: The information in columns 'Quality Status' and 'Quality Info.' (per IP address) is reset if two minutes elapse without a call to that destination.

➤ **To view the IP connectivity information, take these 2 steps:**

1. Set 'AltRoutingTel2IPEnable' to 1 or 2.
2. Open the 'IP Connectivity' screen (**Status & Diagnostics** menu > **Gateway Statistics** submenu > **IP Connectivity**); the 'IP Connectivity' screen is displayed ([Figure 5-36](#)).

Figure 5-36: IP Connectivity Screen

IP Connectivity							
	IP Address	Host Name	Connectivity Method	Connectivity Status	Quality Status	Quality Info.	DNS Status
1	10.13.77.7	10.13.77.7	Ping	CON_OK	QOS_UNKNOWN	PL[percent]:0 DELAY [msec]:0	DNS_DISABLE
2	10.13.77.9	10.13.77.9	Ping	CON_OK	QOS_UNKNOWN	PL[percent]:0 DELAY [msec]:0	DNS_DISABLE
3	10.13.77.18	10.13.77.18	Ping	CON_FAIL	QOS_UNKNOWN	PL[percent]:0 DELAY [msec]:0	DNS_DISABLE
4	1.2.3.4	doron_pc	Ping	CON_FAIL	QOS_UNKNOWN	PL[percent]:0 DELAY [msec]:0	DNS_RESOLVED
5	10.13.2.95	xyz	Ping	CON_INIT	QOS_UNKNOWN	PL[percent]:0 DELAY [msec]:0	DNS_UNRESOLVED
6	UNUSED ENTRY	---	---	---	---	---	---
7	UNUSED ENTRY	---	---	---	---	---	---

Table 5-36: IP Connectivity Parameters

Column Name	Description
IP Address	IP address defined in the destination IP address field in the Tel to IP Routing table. or IP address that is resolved from the host name defined in the destination IP address field in the Tel to IP Routing table.
Host Name	Host name (or IP address) defined in the destination IP address field in the Tel to IP Routing table.
Connectivity Method	The method according to which the destination IP address is queried periodically (currently only by ping).
Connectivity Status	Displays the status of the IP address' connectivity according to the method in the 'Connectivity Method' field. Can be one of the following: • OK = Remote side responds to periodic connectivity queries. • Lost = Remote side didn't respond for a short period. • Fail = Remote side doesn't respond. • Init = Connectivity queries not started (e.g., IP address not resolved). • Disable = The connectivity option is disabled ('AltRoutingTel2IPMode' equals 0 or 2).
Quality Status	Determines the QoS (according to packet loss and delay) of the IP address. Can be one of the following: • Unknown = Recent quality information isn't available. • OK • Poor Note 1: This field is applicable only if the parameter 'AltRoutingTel2IPMode' is set to 2 or 3. Note 2: This field is reset if no QoS information is received for 2 minutes.
Quality Info.	Displays QoS information: delay and packet loss, calculated according to previous calls. Note 1: This field is applicable only if the parameter 'AltRoutingTel2IPMode' is set to 2 or 3. Note 2: This field is reset if no QoS information is received for 2 minutes.
DNS Status	Can be one of the following: • DNS Disable • DNS Resolved • DNS Unresolved

5.10.1.2 Call Counters

The Call Counters screens provide you with statistic information on incoming (IP→Tel) and outgoing (Tel→IP) calls. The statistic information is updated according to the release reason that is received after a call is terminated (during the same time as the end-of-call CDR message is sent). The release reason can be viewed in the Termination Reason field in the CDR message. For detailed information on each counter, refer to [Table 5-37](#) on page 126.

You can reset this information by clicking the **Reset Counters** button.

➤ To view the IP→Tel and Tel→IP Call Counters information:

- Open the Call Counters screen you want to view (**Status & Diagnostics** menu > **Gateway Statistics** submenu); the relevant Call Counters screen is displayed. [Figure 5-37](#) shows the 'Tel→IP Call Counters' screen.

Figure 5-37: Tel→IP Call Counters Screen

Tel to IP Calls Count	
Number of Attempted Calls	10
Number of Established Calls	5
Percentage of Successful Calls	50.000000
Number of Failed Calls due to a Busy Line	1
Number of Failed Calls due to No Answer	3
Number of Failed Calls due to No Route	0
Number of Failed Calls due to No Matched Capabilities	0
Number of Failed Calls due to Other Failures	1
Average Call Duration [sec]	15
Attempted Fax Calls Counter	0
Successful Fax Calls Counter	0

Table 5-37: Call Counters Description (continues on pages 126 to 127)

Counter	Description
Number of Attempted Calls	This counter indicates the number of attempted calls. It is composed of established and failed calls. The number of established calls is represented by the 'Number of Established Calls' counter. The number of failed calls is represented by the five failed-call counters. Only one of the established / failed call counters is incremented every time.
Number of Established Calls	This counter indicates the number of established calls. It is incremented as a result of one of the following release reasons, if the duration of the call is bigger then zero: GWAPP_REASON_NOT_RELEVANT (0) GWAPP_NORMAL_CALL_CLEAR (16) GWAPP_NORMAL_UNSPECIFIED (31) And the internal reasons: RELEASE_BECAUSE_UNKNOWN_REASON RELEASE_BECAUSE_REMOTE_CANCEL_CALL RELEASE_BECAUSE_MANUAL_DISC RELEASE_BECAUSE_SILENCE_DISC RELEASE_BECAUSE_DISCONNECT_CODE Note: When the duration of the call is zero, the release reason GWAPP_NORMAL_CALL_CLEAR increments the 'Number of Failed Calls due to No Answer' counter. The rest of the release reasons increment the 'Number of Failed Calls due to Other Failures' counter.
Number of Failed Calls due to a Busy Line	This counter indicates the number of calls that failed as a result of a busy line. It is incremented as a result of the following release reason: GWAPP_USER_BUSY (17)
Number of Failed Calls due to No Answer	This counter indicates the number of calls that weren't answered. It is incremented as a result of one of the following release reasons: GWAPP_NO_USER_RESPONDING (18) GWAPP_NO_ANSWER_FROM_USER_ALERTED (19) And (when the call duration is zero) as a result of the following: GWAPP_NORMAL_CALL_CLEAR (16) RELEASE_BECAUSE_NORMAL_CALL_DROP (internal)
Number of Failed Calls due to No Route	This counter indicates the number of calls whose destinations weren't found. It is incremented as a result of one of the following release reasons: GWAPP_UNASSIGNED_NUMBER (1) GWAPP_NO_ROUTE_TO_DESTINATION (3)

Table 5-37: Call Counters Description (continues on pages 126 to 127)


Counter	Description
Number of Failed Calls due to No Matched Capabilities	This counter indicates the number of calls that failed due to mismatched gateway capabilities. It is incremented as a result of an internal identification of capability mismatch. This mismatch is reflected to CDR via the value of the parameter 'DefaultReleaseReason' (default is GWAPP_NO_ROUTE_TO_DESTINATION (3)), or by the GWAPP_SERVICE_NOT_IMPLEMENTED_UNSPECIFIED(79) reason.
Number of Failed Calls due to Other Failures	This counter is incremented as a result of calls that fail due to reasons not covered by the other counters.
Percentage of Successful Calls	The percentage of established calls from attempted calls.
Average Call Duration [sec]	The average call duration of established calls.
Attempted Fax Calls Counter	This counter indicates the number of attempted fax calls.
Successful Fax Calls Counter	This counter indicates the number of successful fax calls.

5.10.2 Monitoring the MP-1xx Channels

The Channel Status screen provides real time monitoring on the current channels status.

➤ **To monitor the status of the MP-1xx channels take this step:**

- Open the 'Channel Status' screen (**Status & Diagnostics** menu > **Channel Status**); the 'Channel Status' screen is displayed (different screen for FXS and FXO).

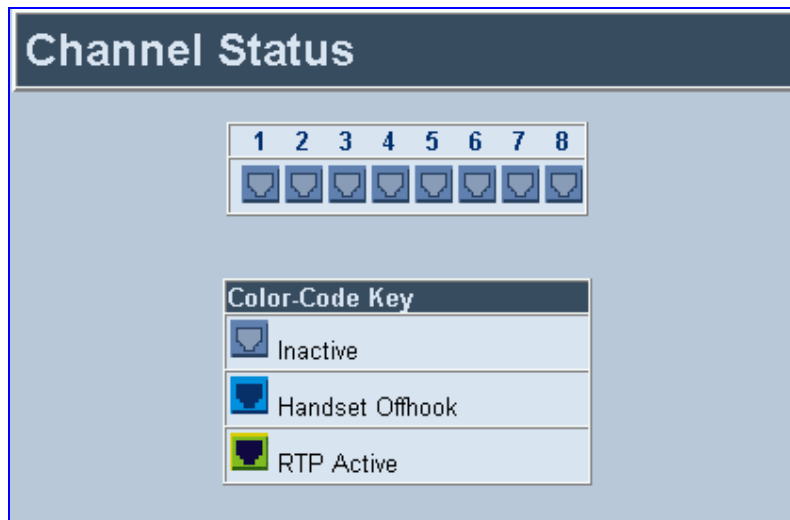Figure 5-38: MP-1xx/FXS Channel Status Screen

The color of each channel shows the call status of that channel.

- Not Connected (FXO only) - indicates that no analog line is connected to this port.
- Inactive - indicates this channel is currently onhook.

- Handset Offhook - indicates this channel is offhook but there is no active RTP session.
- RTP Active - indicates an active RTP stream.

➤ **To monitor the details of a specific channel, take these 2 steps:**

1. Click the numbered icon of the specific channel whose detailed status you need to check/monitor; the channel-specific Channel Status screen appears, shown in [Figure 5-39](#).
2. Click the submenu links to check/view a specific channel's parameter settings.

Figure 5-39: Channel Status Details Screen

SIP Channel Status		
Static Information		
Endpoint Status :	ACTIVE	
Assigned Phone Number :	100	
Hunt Group :	default (0)	
MWI Information :	--	
Associated Calls Information		
Call ID :	265821508dMlu@10.8.58.1	--
Call Originator :	TEL	--
Source Tel Number :	100	--
Destination Tel Number :	200	--
Redirect Calling Number :		--
Remote Signaling IP :	10.8.58.2	--
Remote RTP (IP:Port) :	10.8.58.2: 4000	--
Call Establishment Duration :	2	--
Call Duration :	17	--
Call State :	SESSION	--
Fax State :	n/a	--
Coder + PTime :	g7231:30	--
Call Type :	Voice	--
Call Establishment Method :	Normal	--
DTMF Selected Method for Tx/Rx :	DTMF_NOT_SUPPORTED	--

5.10.3 Activating the Internal Syslog Viewer

The Message Log screen displays Syslog debug messages sent by the gateway.

Note that it is not recommended to keep a 'Message Log' session open for a prolonged period (refer to the Note below). For prolonged debugging use an external Syslog server, refer to Section 9.2.2 on page 170.

Refer to the Debug Level parameter 'GwDebugLevel' (described in Table 5-5) to determine the Syslog logging level.

➤ **To activate the Message Log, take these 4 steps:**

1. In the **General Parameters** screen under **Advanced Parameters** submenu (accessed from the **Protocol Management** menu), set the parameter 'Debug Level' to 5. This parameter determines the Syslog logging level, in the range 0 to 5, where 5 is the highest level.
2. Open the 'Message Log' screen (**Status & Diagnostics** menu > **Message Log**); the 'Message Log' screen is displayed.

Figure 5-40: Message Log Screen

```

Log is Activated

21d:23h:48m:23s (    lgr_flow) (380      )  #0:OFF_HOOK_EV
21d:23h:48m:23s (    lgr_flow) (381      )  |          #0:OFF_HOOK_EV
21d:23h:48m:23s (    lgr_psbrdif) (382      )  DigitMap for channel : 0 Not Activated
21d:23h:48m:23s (    lgr_psbrdif) (383      )  #0:PSOSBoardInterface::PlayTone - Called Tone=DIAL_TONE
21d:23h:48m:23s Short line was detected - going to Active Low [Code:36010] [CID:0]
  
```

3. Select the messages, copy them and paste them into a text editor such as Notepad. Send this txt file to our Technical Support for diagnosis and troubleshooting.
4. To clear the screen of messages, click on the submenu **Message Log**; the screen is cleared and new messages begin appearing.



Tip: Do not keep the 'Message Log' screen minimized for a prolonged period as a prolonged session may cause the MP-1xx to overload. As long as the screen is open (even if minimized), a session is in progress and messages are sent. Closing the screen (and accessing another) stops the messages and terminates the session.

5.10.4 System Information

The System Information screen displays specific hardware and software product information. This information can help you to expedite any troubleshooting process. Capture the screen and email it to 'our' Technical Support personnel to ensure quick diagnosis and effective corrective action. From this screen you can also view and remove any loaded auxiliary files used by the MP-1xx (stored in the RAM).

➤ **To access the System Information screen:**

- Open the 'System Information' screen (**Status & Diagnostics** menu > **System Information**); the 'System Information' screen is displayed.

Figure 5-41: System Information Screen

System Information		
General		
MAC Address:	00908f010237	
Serial Number:	66103	
Board Type:	2	
System Up Time:	0d:0h:20m:9s:42th	
Versions		
Version ID:	4.40.0.173	
DSP Type:	0	
DSP Software Version:	20512	
DSP Software Name:	104IM	
Flash Version:	192	
Loaded Files		
Call Progress Tone File Name:	usa_tones_09.dat	Delete
FXS Coefficient File Name:	12_1_fxs.dat	Delete

➤ **To delete any of the loaded auxiliary files, take these 3 steps:**

1. Press the **Delete** button to the right of the files you want to delete. Deleting a file takes effect only after the MP-1xx is reset.
2. Click the **Reset** button on the main menu bar; the Reset screen is displayed.
3. Select the **Burn** option and click the **Reset** button. The MP-1xx is reset and the auxiliary files you chose to delete are discarded.

5.11 Software Update

The 'Software Update' menu enables users to upgrade the MP-1xx software by loading a new *cmp* file along with the *ini* and a suite of auxiliary files, or to update the existing auxiliary files.

The 'Software Update' menu comprises two submenus:

- Software Update Wizard (refer to Section 5.11.1 below).
- Auxiliary Files (refer to Section 5.11.2 on page 137).



Note: When upgrading the MP-1xx software you *must* load the new *cmp* file with all other related configuration files.

5.11.1 Software Upgrade Wizard

The Software Upgrade Wizard guides users through the process of software upgrade: selecting files and loading them to the gateway. The wizard also enables users to upgrade software while maintaining the existing configuration. Using the wizard obligates users to load a *cmp* file. Users can choose to also use the Wizard to load the *ini* and auxiliary files (e.g., Call Progress Tones) but this option cannot be pursued without loading the *cmp* file. For the *ini* and each auxiliary file type, users can choose to reload an existing file, load a new file or not load a file at all.




Note: The Software Upgrade Wizard requires the MP-1xx to be reset at the end of the process, disrupting any of its traffic. To avoid disruption, disable all traffic on the MP-1xx before initiating the Wizard.

➤ **To use the Software Upgrade Wizard, take these 9 steps:**

1. Stop all traffic on the MP-1xx (refer to the note above).
2. Open the 'Software Upgrade Wizard' (**Software Update** menu > **Software Upgrade Wizard**); the 'Start Software Upgrade' screen appears.

Figure 5-42: Start Software Upgrade Screen

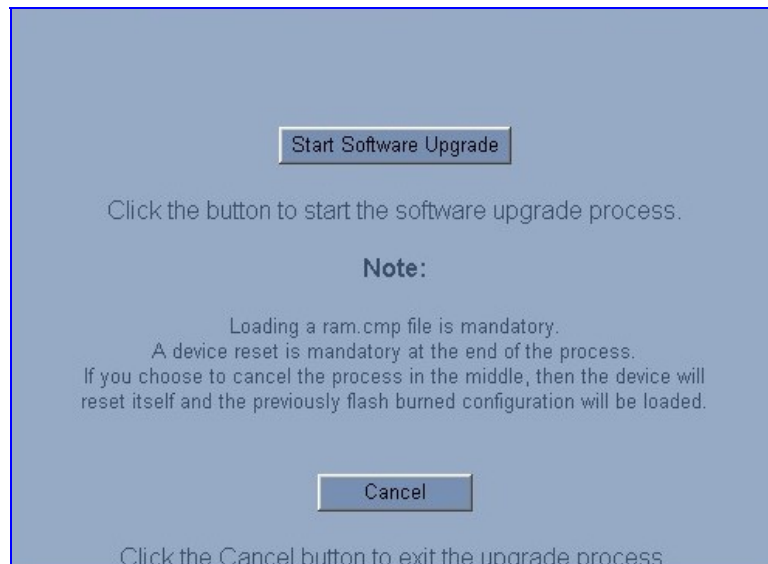




Note: At this point, the process can be canceled with no consequence to the MP-1xx (click the **Cancel** button). If you continue the process (by clicking the **Start Software Upgrade** button, the process must be followed through and completed with a MP-1xx reset at the end. If you click the **Cancel** button in any of the subsequent screens, the MP-1xx is automatically reset with the configuration that was previously burned in flash memory.

3. Click the **Start Software Upgrade** button; the 'Load a cmp file' screen appears (Figure 5-43).




Note: When in the Wizard process, the rest of the Web application is unavailable and the background Web screen is disabled. After the process is completed, access to the full Web application is restored.

Figure 5-43: Load a *cmp* File Screen

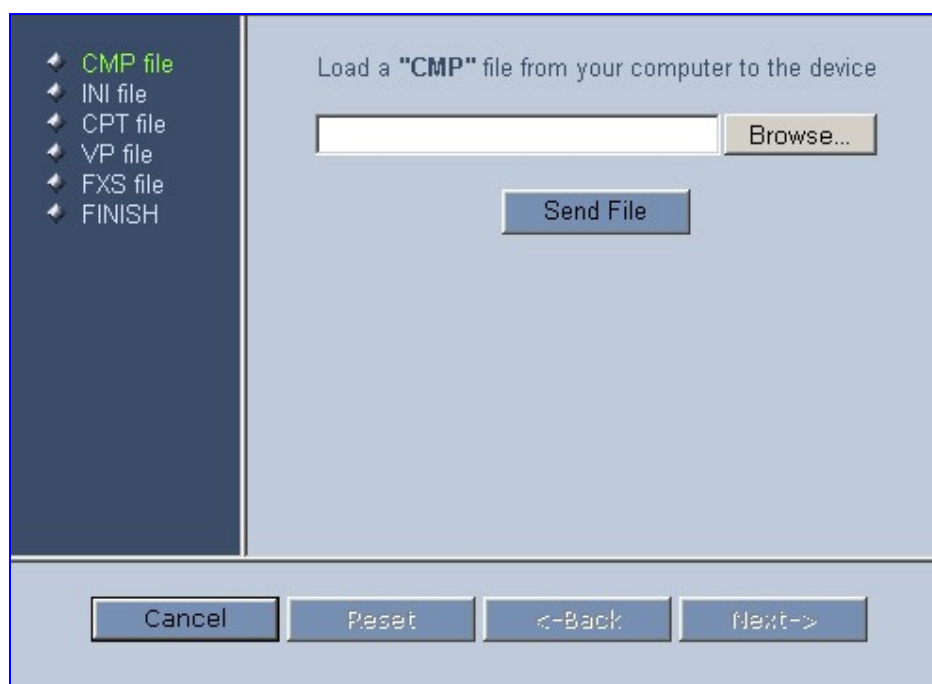

4. Click the **Browse** button, navigate to the *cmp* file and click the button **Send File**; the *cmp* file is loaded to the MP-1xx and you're notified as to a successful loading (refer to Figure 5-44).

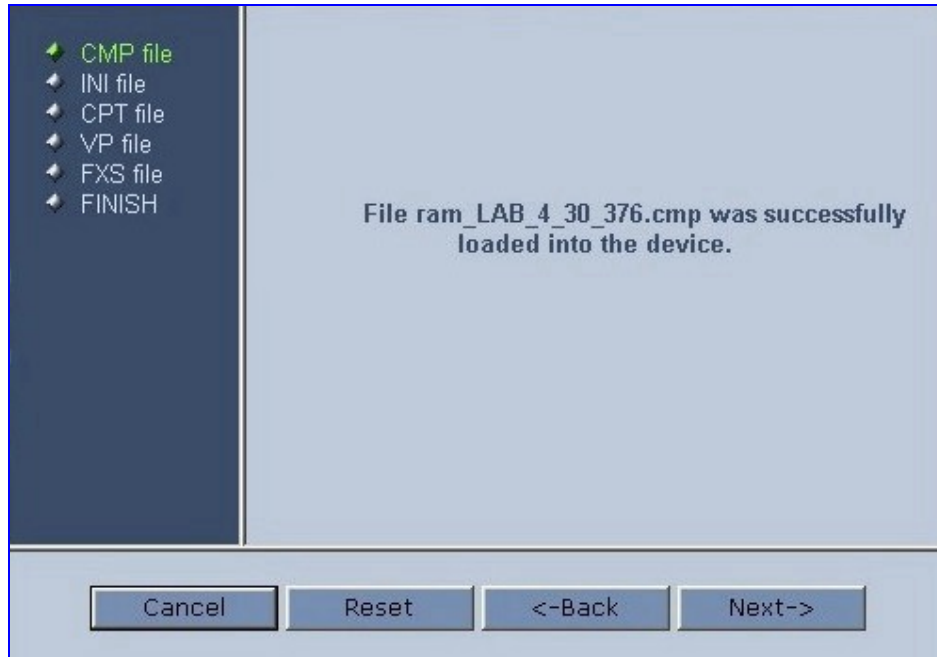Figure 5-44: *cmp* File Successfully Loaded into the MP-1xx Notification


5. Note that the four action buttons (**Cancel**, **Reset**, **Back**, and **Next**) are now activated (following *cmp* file loading).

You can now choose to either:

- Click **Reset**; the MP-1xx resets, utilizing the new *cmp* you loaded and utilizing the current configuration files.
- Click **Cancel**; the MP-1xx resets utilizing the *cmp*, *ini* and all other configuration files that were previously stored in flash memory. Note that these are NOT the files you loaded in the previous Wizard steps.
- Click **Back**; the 'Load a *cmp* File' screen is reverted to; refer to [Figure 5-43](#).
- Click **Next**; the 'Load an *ini* File' screen opens; refer to [Figure 5-45](#). Loading a new *ini* file or any other auxiliary file listed in the Wizard is optional.

Note that as you progress, the file type list on the left indicates which file type loading is in process by illuminating green (until 'FINISH').

Figure 5-45: Load an *ini* File Screen

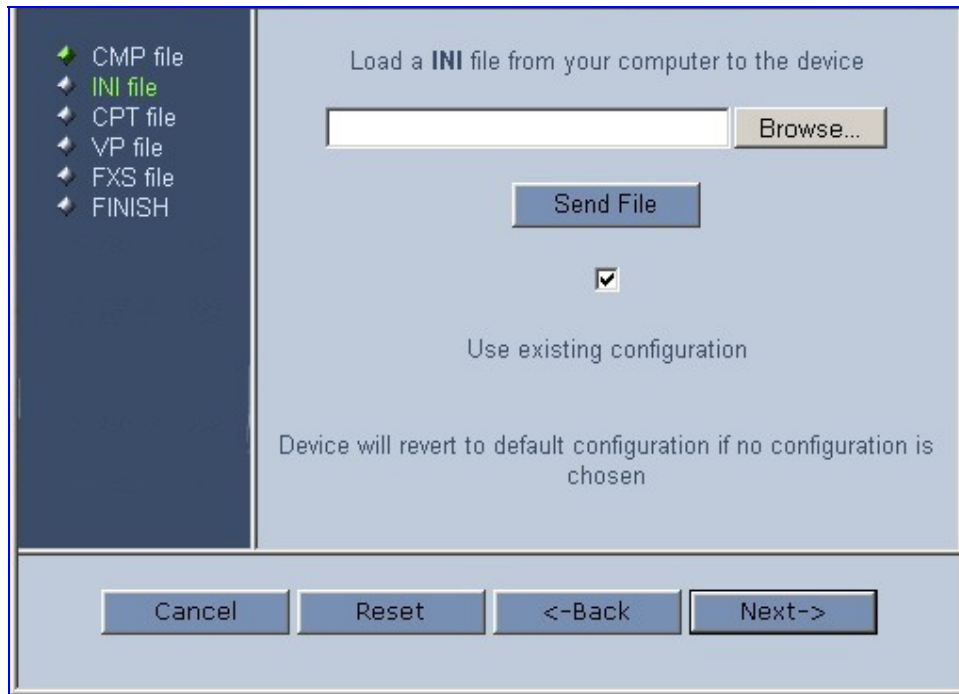


6. In the 'Load an *ini* File' screen, you can now choose to either:
 - Click **Browse** and navigate to the *ini* file; the check box 'Use existing configuration', by default checked, becomes unchecked. Click **Send File**; the *ini* file is loaded to the MP-1xx and you're notified as to a successful loading.
 - Ignore the **Browse** button (its field remains undefined and the check box 'Use existing configuration' remains checked by default).
 - Ignore the **Browse** button and uncheck the 'Use existing configuration' check box; no *ini* file is loaded, the MP-1xx uses its factory-preconfigured values.

You can now choose to either:

- Click **Cancel**; the MP-1xx resets utilizing the *cmp*, *ini* and all other configuration files that were previously stored in flash memory. Note that these are NOT the files you loaded in the previous Wizard steps.
- Click **Reset**; the MP-1xx resets, utilizing the new *cmp* and *ini* file you loaded up to now as well as utilizing the other configuration files.
- Click **Back**; the 'Load a *cmp* file' screen is reverted to; refer to [Figure 5-43](#).
- Click **Next**; the 'Load a CPT File' screen opens, refer to [Figure 5-46](#); Loading a new CPT file or any other auxiliary file listed in the Wizard is optional.

Figure 5-46: Load a CPT File Screen

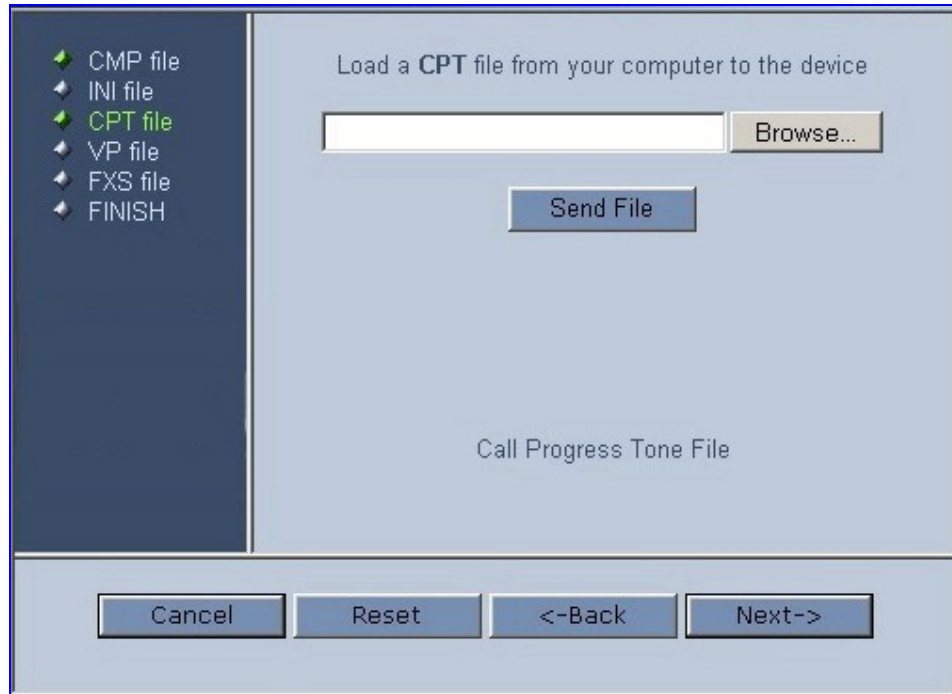

7. Follow the same procedure you followed when loading the *ini* file (refer to Step 6). The same procedure applies to the 'Load a VP file' (not applicable to the MP-1xx gateway) screen and 'Load a coefficient file' screen.
8. In the 'FINISH' screen (refer to [Figure 5-47](#)), the **Next** button is disabled. Complete the upgrade process by clicking **Reset** or **Cancel**.

Button	Result
Reset	The MP-1xx 'burns' the newly loaded files to flash memory. The 'Burning files to flash memory' screen appears. Wait for the 'burn' to finish. When it finishes, the 'End Process' screen appears displaying the burned configuration files (refer to Figure 5-48).
Cancel	The MP-1xx resets, utilizing the files previously stored in flash memory. (Note that these are NOT the files you loaded in the previous Wizard steps).

Figure 5-47: FINISH Screen


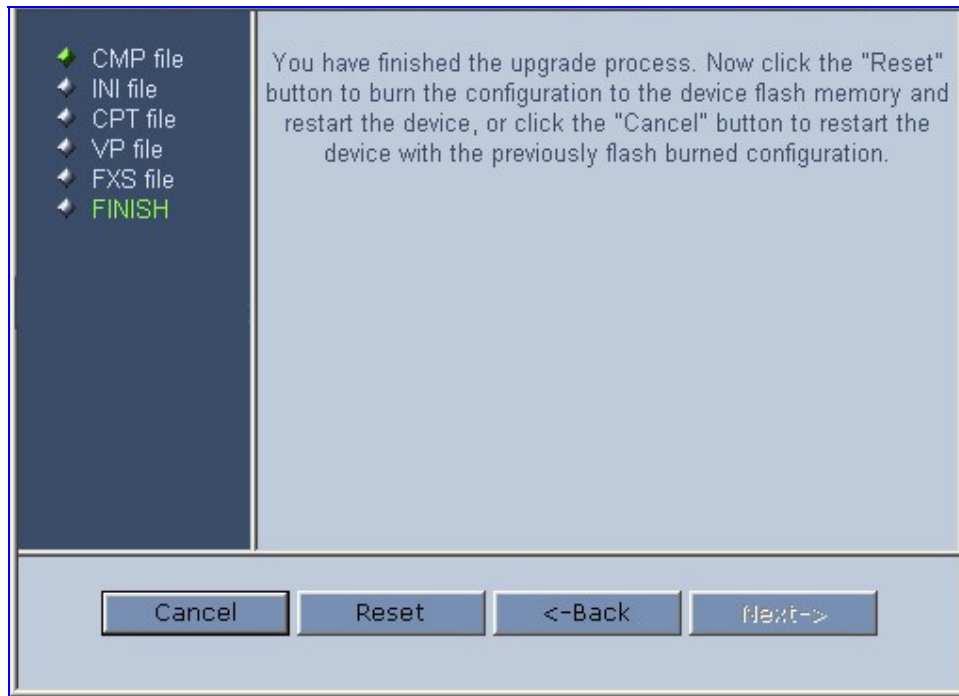


Figure 5-48: 'End Process' Screen

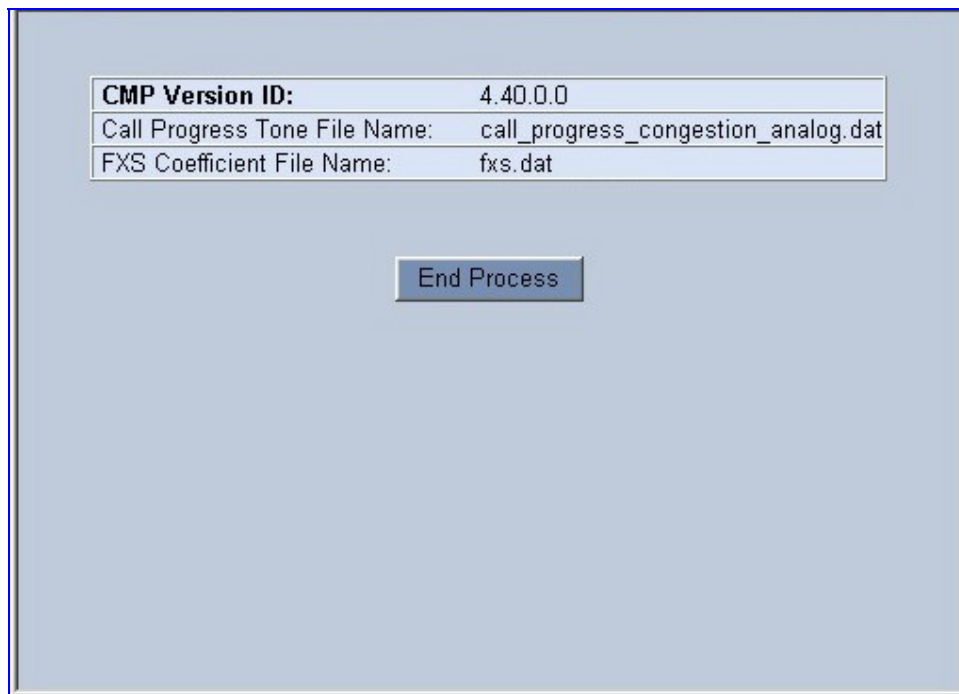

9. Click the **End Process** button; the 'Quick Setup' screen appears and the full Web application is reactivated.

5.11.2 Auxiliary Files

The 'Auxiliary Files' screen enables you to load to the gateway the following files: Call Progress Tones, coefficient and Prerecorded Tones (PRT). The Voice Prompts file is currently not applicable to the MP-1xx. For detailed information on these files refer to Section 6 on page 141. For information on deleting these files from the MP-1xx refer to Section 5.10.4 on page 130.

Table 5-38 presents a brief description of each auxiliary file.

Table 5-38: Auxiliary Files Descriptions

File Type	Description
Coefficient	This file (different file for FXS and FXO gateways) contains the telephony interface configuration information for the VoIP gateway. This information includes telephony interface characteristics, such as DC and AC impedance, feeding current and ringing voltage. This file is specific to the type of telephony interface that the VoIP gateway supports. In most cases you have to load this type of file.
Call Progress Tones	This is a region-specific, telephone exchange-dependent file that contains the Call Progress Tones levels and frequencies that the VoIP gateway uses. The default CPT file is: U.S.A.
Prerecorded Tones	The <i>dat</i> PRT file enhances the gateway's capabilities of playing a wide range of telephone exchange tones that cannot be defined in the Call Progress Tones file.

➤ **To load an auxiliary file to the gateway, take these 8 steps:**

1. Open the 'Auxiliary Files' screen (**Software Upgrade** menu > **Load Auxiliary Files**); the 'Auxiliary Files' screen is displayed.
2. Click the **Browse** button that is in the field for the type of file you want to load.
3. Navigate to the folder that contains the file you want to load.
4. Click the file and click the **Open** button; the name and path of the file appear in the field beside the **Browse** button.
5. Click the **Send File** button that is next to the field that contains the name of the file you want to load. An exclamation mark in the screen section indicates that the file's loading doesn't take effect on-the-fly (e.g., CPT file).
6. Repeat steps 2 to 5 for each file you want to load.



- Note 1:** Saving an auxiliary file to flash memory may disrupt traffic on the MP-1xx. To avoid this, disable all traffic on the device before saving to flash memory.
- Note 2:** A MP-1xx reset is required to activate a loaded CPT file, and may be required for the activation of certain *ini* file parameters.

7. To save the loaded auxiliary files so they are available after a power fail refer to Section 5.12 on page 139.
8. To reset the MP-1xx refer to Section 5.12 on page 139.

Figure 5-49: Auxiliary Files Screen

Auxiliary Files

Send FXS "Coefficient" file from your computer to the device

Send "Voice Prompts" file from your computer to the device

! Send "Call Progress Tones" file from your computer to the device

Send "Prerecorded Tones" file from your computer to the device

5.11.2.1 Loading the Auxiliary Files via the *ini* File

➤ To load the auxiliary files via the *ini* file, take these 3 steps:

1. In the *ini* file, define the auxiliary files to be loaded to the MP-1xx. You can also define in the *ini* file whether the loaded files should be stored in the non-volatile memory so that the TFTP process is not required every time the MP-1xx boots up.
2. Locate the auxiliary files you want to load and the *ini* file in the same directory.
3. Invoke a BootP/TFTP session; the *ini* and auxiliary files are loaded onto the MP-1xx.

Table 5-39 below describes the *ini* file parameters that are associated with the configuration files.

Table 5-39: Configuration Files *ini* File Parameters

<i>ini</i> File Parameter Name	Description
CallProgressTonesFileName	The name (and path) of the file containing the Call Progress Tones definition.
FXSLoopCharacteristicsFileName	The name (and path) of the file providing the FXS line characteristic parameters.
FXOLoopCharacteristicsFileName	The name (and path) of the file providing the FXO line characteristic parameters.
PrerecordedTonesFileName	The name (and path) of the file containing the Prerecorded Tones.
SaveConfiguration	Set to 1 to store the Call Progress Tones, PRT and coefficient files in the non-volatile memory.

5.12 Save Configuration

The Save Configuration screen enables users to save the current parameter configuration and the loaded auxiliary files to the *non-volatile* memory so they are available after a power fail. Parameters that are only saved to the *volatile* memory revert to their previous settings after hardware reset.

Note that when performing a software reset (i.e., via Web or SNMP) you can choose to save the changes to the *non-volatile* memory. Therefore, there is no need to use the Save Configuration screen.




Note: Saving changes to the *non-volatile* memory may disrupt traffic on the gateway. To avoid this, disable all traffic before saving.

➤ To save the changes to the *non-volatile*, take these 2 steps:

1. Click the **Save Configuration** button on the main menu bar; the 'Save Configuration' screen is displayed.

Figure 5-50: Save Configuration Screen

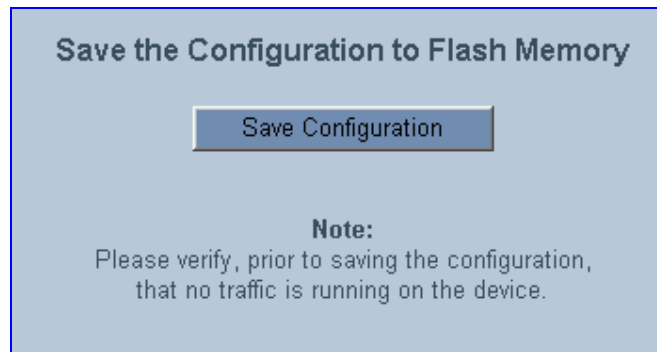

2. Click the **Save Configuration** button in the middle of the screen; a confirmation message appears when the save is complete.


5.13 Resetting the MP-1xx

The Reset screen enables you to remotely reset the gateway. Before reset you can choose to save the gateway configuration to flash memory.

➤ **To reset the MP-1xx, take these 3 steps:**

1. Click the **Reset** button on the main menu bar; the Reset screen is displayed.

Figure 5-51: Reset Screen

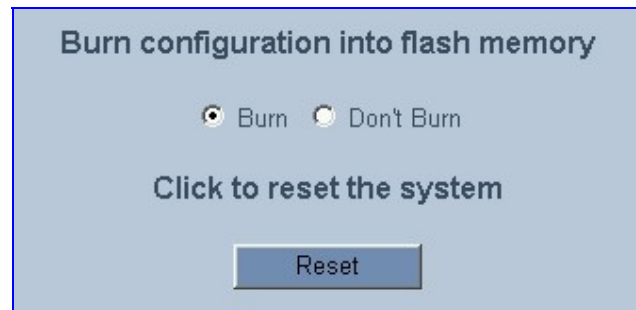

2. Select one of the following options:
 - **Burn** - (default) the current configuration is burned to flash prior to reset.
 - **Don't Burn** - resets the MP-1xx without burning the current configuration to flash (discards all modifications to the configuration).
3. Click the **Reset** button. If the Burn option is selected, all configuration changes are saved to flash memory. If the Don't Burn option is selected, all configuration changes are discarded. The MP-1xx is shut down and re-activated. A message about the waiting period is displayed. The screen is refreshed.

6 *ini* File Configuration of the MP-1xx

As an alternative to configuring the VoIP gateway using the Web Interface (refer to Section 5 on page 39), it can be configured by loading the *ini* file containing Customer-configured parameters.

The *ini* file is loaded via the BootP/TFTP utility (refer to Appendix B on page 197) or via any standard TFTP server. It can also be loaded through the Web Interface (refer to Section 5.9.2.1 on page 120).

The *ini* file configuration parameters are stored in the MP-1xx non-volatile memory after the file is loaded. When a parameter is missing from the *ini* file, a default value is assigned to that parameter (according to the *cmp* file loaded on the MP-1xx) and stored in the non-volatile memory (thereby overriding the value previously defined for that parameter). Therefore, to restore the default configuration parameters, use the *ini* file without any valid parameters or with a semicolon (;) preceding all lines in the file.

Some of the MP-1xx parameters are configurable through the *ini* file only (and not via the Web). These parameters usually determine a low-level functionality and are seldom changed for a specific application.



Note: For detailed explanation of each parameter, refer to Section 5 on page 39.

6.1 Secured *ini* File

The *ini* file contains sensitive information that is required for the functioning of the MP-1xx. It is loaded to, or retrieved from, the device via TFTP or HTTP. These protocols are unsecured and vulnerable to potential hackers. Therefore an encoded *ini* file significantly reduces these threats.

You can choose to load an encoded *ini* file to the MP-1xx. When you load an encoded *ini* file, the retrieved *ini* file is also encoded. Use the 'TrunkPack Downloadable Conversion Utility' to encode or decode the *ini* file before you load it to, or retrieve it from the device. Note that the encoded *ini* file's loading procedure is identical to the regular *ini* file's loading procedure. For information on encoding / decoding an *ini* file refer to Section F.1.2 on page 221.

6.2 Modifying an *ini* File

➤ To modify the *ini* file, take these 3 steps:

1. Get the *ini* file from the gateway using the Embedded Web Server (refer to Section 5.9.2.1 on page 120).
2. Open the file (the file is open in Notepad or a Customer-defined text file editor) and modify the *ini* file parameters according to your requirements; save and close the file.
3. Load the modified *ini* file to the gateway (using either BootP/TFTP utility or the Embedded Web Server).

This method preserves the programming that already exists in the device, including special default values that were preconfigured when the unit was manufactured.



Tip: Before loading the *ini* file to the gateway, verify that the extension of the *ini* file saved on your PC is correct: Verify that the check box 'Hide file extension for known file types' (My computer>Tools>Folder Options>View) is unchecked. Then, confirm that the *ini* file name extension is xxx.ini and NOT erroneously xxx.ini.ini or xxx~.ini.

6.3 The *ini* File Structure

The *ini* file can contain any number of parameters. The parameters are divided into groups by their functionality. The general form of the *ini* file is shown in Figure 6-1 below.

Figure 6-1: *ini* File Structure

```
[Sub Section Name]

Parameter_Name = Parameter_Value
Parameter_Name = Parameter_Value

; REMARK

[Sub Section Name]
```

6.3.1 The *ini* File Structure Rules

- Lines beginning with a semi-colon ';' (as the first character) are ignored.
- A Carriage Return must be the final character of each line.
- The number of spaces before and after "=" is not relevant.
- If there is a syntax error in the parameter name, the value is ignored.
- Syntax errors in the parameter value field can cause unexpected errors (because parameters may be set to the wrong values).
- Sub-section names are optional.
- String parameters, representing file names, for example CallProgressTonesFileName, must be placed between two inverted commas ('...').
- The parameter name is NOT case-sensitive; the parameter value is not case-sensitive *except for coder names*.
- The *ini* file should be ended with one or more carriage returns.

6.3.2 The *ini* File Example

Figure 6-2 shows an example of an *ini* file for the VoIP gateway.

Figure 6-2: SIP *ini* File Example

```
[Channel Params]
DJBufferMinDelay = 75
RTPRedundancyDepth = 1
DefaultNumber = 101
MaxDigits = 3
CoderName = g7231,90
; Phone of each endpoint
Channel2Phone = 0, 101
Channel2Phone = 1, 102
Channel2Phone = 2, 103
Channel2Phone = 3, 104
EnableSyslog = 0
[Files]
CallProgressTonesFilename = 'CPUSA.dat'
FXSLoopCharacteristicsFileName = 'coeff.dat'
SaveConfiguration = 1
```

7 Configuration Files

This section describes the configuration *dat* files that are loaded (in addition to the *ini* file) to the gateway. The configuration files are:

- Call Progress Tones file (refer to Section 7.1 on page 143).
- Prerecorded Tones file (refer to Section 7.2 on page 147).
- FXS/FXO Coefficient files (refer to Section 7.3 on page 148).

To load either of the configuration files to the MP-1xx use the Embedded Web Server (refer to Section 5.11.2 on page 137) or alternatively specify the name of the relevant configuration file in the gateway's *ini* file and load it (the *ini* file) to the gateway (refer to Section 5.11.2.1 on page 138).

7.1 Configuring the Call Progress Tones and Distinctive Ringing File

The Call Progress Tones and Distinctive Ringing, configuration file used by the MP-1xx is a binary file (with the extension *dat*) that is comprised of two sections. The first section contains the definitions of the Call Progress Tones (levels and frequencies) that are detected / generated by the MP-1xx. The second section contains the characteristics of the distinctive ringing signals that are generated by the MP-1xx.

Users can either use, one of the supplied MP-1xx configuration (*dat*) files, or construct their own file. To construct their own configuration file, users are recommended, to modify the supplied *usa_tone.ini* file (in any standard text editor) to suit their specific requirements, and to convert it (the modified *ini* file) into binary format using the "TrunkPack Downloadable Conversion Utility" supplied with the software package. For the description of the procedure on how to convert CPT *ini* file to a binary *dat* file, refer to Section F.1.1 on page 220.

Note that only the *dat* file can be loaded to the MP-1xx gateway.

To load the Call Progress Tones (*dat*) file to the MP-1xx, use the Embedded Web Server (refer to Section 5.9.4 on page 122) or the *ini* file (refer to Section 5.11.2.1 on page 138).

7.1.1 Format of the Call Progress Tones Section in the *ini* File

Using the CPT section of this configuration file, the User can create up to 16 different Call Progress Tones using up to 15 different frequencies (in the range of 300 Hz to 1980 Hz). Each of these Call Progress Tones is specified by its tone frequency (either single or dual frequencies are supported) and its tone cadence. The tone cadence is specified by 2 sets of on/off periods (you can discard the use of the first on/off cycle by setting the relevant parameters to zero). When a tone is composed of a single frequency, the second frequency field must be set to zero.

For a continuous tone (such as dial tone), only the "First Signal On time" should be specified. In this case, the parameter specifies the detection period. For example, if it equals 300, the tone is detected after 3 seconds (300 x 10 msec). The minimum detection time is 100 msec.

Users can specify several tones of the same type. These additional tones are used only for tone detection. Generation of a specific tone conforms to the first definition of the specific tone. For example, Users can define an additional dial tone by appending the second dial tone's definition lines to the first tone definition in the *ini* file. The MP-1xx reports dial tone detection if either of the two tones is detected.

The Call Progress Tones section of the *ini* file comprises the following segments:

- **[NUMBER OF CALL PROGRESS TONES]** – Contains the following key:

- “Number of Call Progress Tones” defining the number of Call Progress Tones that are defined in the file.
- **[CALL PROGRESS TONE #X]** – containing the Xth tone definition (starting from 1 and not exceeding the number of Call Progress Tones defined in the first section) using the following keys:
 - **Tone Type** – Call Progress Tone type

Figure 7-1: Call Progress Tone Types

1 - Dial Tone
 2 - Ringback Tone
 3 - Busy Tone
 7 - Reorder Tone
 8 - Confirmation Tone
 9 - Call Waiting Tone
 15 - Stutter Dial Tone
 16 - Off Hook Warning Tone
 17 - Call Waiting Ringback Tone
 23 - Hold Tone

- **Low Freq [Hz]** – Frequency in hertz of the lower tone component in case of dual frequency tone, or the frequency of the tone in case of single tone.
- **High Freq [Hz]** – Frequency in hertz of the higher tone component in case of dual frequency tone, or zero (0) in case of single tone.
- **Low Freq Level [-dBm]** – Generation level 0 dBm to –31 dBm in [dBm].
- **High Freq Level** – Generation level. 0 to –31 dBm. The value should be set to ‘32’ in the case of a single tone.
- **First Signal On Time [10 msec]** – “Signal On” period (in 10 msec units) for the first cadence on-off cycle.
- **First Signal Off Time [10 msec]** – “Signal Off” period (in 10 msec units) for the first cadence on-off cycle.
- **Second Signal On Time [10 msec]** – “Signal On” period (in 10 msec units) for the second cadence on-off cycle.
- **Second Signal Off Time [10 msec]** – “Signal Off” period (in 10 msec units) for the second cadence on-off cycle.
- **Default Duration [msec]** - The default duration (in 1 msec units) of the generated tone.



- Note 1:** When the same frequency is used for a continuous tone and a cadence tone, the ‘Signal On Time’ parameter of the continues tone must have a value that is greater than the ‘Signal On Time’ parameter of the cadence tone. Otherwise the continues tone is detected instead of the cadence tone.
- Note 2:** The tones frequency should differ by at least 40 Hz from one tone to other defined tones.

For example: to configure the dial tone to 440 Hz only, define the following text:

Figure 7-2: Defining a Dial Tone Example

```
#Dial tone
[CALL PROGRESS TONE #1]
Tone Type=1
Low Freq [Hz]=440
High Freq [Hz]=0
Low Freq Level [-dBm]=10 (-10 dBm)
High Freq Level [-dBm]=32 (use 32 only if a single tone is required)
First Signal On Time [10msec]=300; the dial tone is detected after 3 sec
First Signal Off Time [10msec]=0
Second Signal On Time [10msec]=0
Second Signal Off Time [10msec]=0
```

7.1.2 Format of the Distinctive Ringing Section in the *ini* File

Distinctive Ringing is only applicable to MP-1xx/FXS gateways. Using the distinctive ringing section of this configuration file, the User can create up to 16 distinctive ringing patterns.

To instruct the gateway to play a different Ringing tone, append the string '-dr#' (# can be 0 to 15) to the Alert-Info header in the Invite message.

In the following examples, the MP-1xx plays the Ringing tone with 'Ringing Pattern' equals 2. If the number of the 'Ringing Pattern' isn't found, the default Ringing tone (0) is played.

```
Alert-Info: <Bellcore-dr2>
Alert-Info: http://127.0.0.1/Bellcore-dr2
```

Each ringing pattern configures the ringing tone frequency and up to 4 ringing cadences. The same ringing frequency is used for all the ringing pattern cadences. The ringing frequency can be configured in the range of 10 Hz to 200 Hz with a 5 Hz resolution. Each of the ringing pattern cadences is specified by the following parameters:

- Burst Ring On Time – Configures the cadence to be a burst cadence in the entire ringing pattern. The burst relates to On time and the Off time of the same cadence. It must appear between "First/Second/Third/Fourth" string and the "Ring On/Off Time" This cadence rings once during the ringing pattern. Otherwise, the cadence is interpreted as cyclic: it repeats for every ringing cycle.
- Ring On Time - specifies the duration of the ringing signal.
- Ring Off Time - specifies the silence period of the cadence.

The distinctive ringing section of the *ini* file format contains the following strings:

- **[NUMBER OF DISTINCTIVE RINGING PATTERNS]** – Contains the following key:
 - "Number of Distinctive Ringing Patterns" defining the number of Distinctive Ringing signals that are defined in the file.
- **[Ringing Pattern #X]** – Contains the Xth ringing pattern definition (starting from 0 and not exceeding the number of Distinctive Ringing patterns defined in the first section minus 1) using the following keys:
 - **Ring Type** – Must be equal to the Ringing Pattern number.
 - **Freq [Hz]** – Frequency in hertz of the ringing tone.
 - **First (Burst) Ring On Time [10 msec]** – "Ring On" period (in 10 msec units) for the first cadence on-off cycle.
 - **First (Burst) Ring Off Time [10 msec]** – "Ring Off" period (in 10 msec units) for the first cadence on-off cycle.
 - **Second (Burst) Ring On Time [10 msec]** – "Ring On" period (in 10 msec units) for the second cadence on-off cycle.
 - **Second (Burst) Ring Off Time [10 msec]** – "Ring Off" period (in 10 msec units) for the second cadence on-off cycle.

- **Third (Burst) Ring On Time [10 msec]** – “Ring On” period (in 10 msec units) for the third cadence on-off cycle.
- **Third (Burst) Ring Off Time [10 msec]** – “Ring Off” period (in 10 msec units) for the third cadence on-off cycle.
- **Fourth (Burst) Ring On Time [10 msec]** – “Ring Off” period (in 10 msec units) for the forth cadence on-off cycle.
- **Fourth (Burst) Ring Off Time [10 msec]** – “Ring Off” period (in 10 msec units) for the forth cadence on-off cycle.



Note: In SIP the distinctive ringing pattern is selected according to Alert-Info header that is included in Invite message. For example: Alert-Info <Bellcore-dr2>, or Alert-Info<http://.../Bellcore-dr2>. ‘dr2’ defines ringing pattern # 2. If the Alert-Info header is missing, ringing pattern #1 is played.

7.1.2.1 Examples of Various Ringing Signals

Figure 7-3: Examples of Various Ringing Signals

```
[NUMBER OF DISTINCTIVE RINGING PATTERNS]
Number of Ringing Patterns=3

#Regular North American Ringing Pattern
[Ringing Pattern #0]
Ring Type=0
Freq [Hz]=20
First Ring On Time [10msec]=200
First Ring Off Time [10msec]=400

#GR-506-CORE Ringing Pattern 1
[Ringing Pattern #1]
Ring Type=1
Freq [Hz]=20
First Ring On Time [10msec]=200
First Ring Off Time [10msec]=400

#GR-506-CORE Ringing Pattern 2
[Ringing Pattern #2]
Ring Type=2
Freq [Hz]=20
First Ring On Time [10msec]=80
First Ring Off Time [10msec]=40
Second Ring On Time [10msec]=80
Second Ring Off Time [10msec]=400
```

7.2 Prerecorded Tones (PRT) File

The Call Progress Tones mechanism has several limitations, such as a limited number of predefined tones and a limited number of frequency integrations in one tone. To work around these limitations and provide tone generation capability that is more flexible, the PRT file can be used. If a specific prerecorded tone exists in the PRT file, it takes precedence over the same tone that exists in the CPT file and is played instead of it.

Note that the prerecorded tones are used only for generation of tones. Detection of tones is performed according to the CPT file.

7.2.1 PRT File Format

The PRT *dat* file contains a set of prerecorded tones to be played by the MP-1xx during operation. Up to 40 tones (totaling approximately one minute) can be stored in a single file in flash memory. The prerecorded tones (raw data PCM or L8 files) are prepared offline using standard recording utilities (such as CoolEdit™) and combined into a single file using the TrunkPack Downloadable Conversion utility (refer to Section [F.1.3](#) on page [222](#)).

The raw data files must be recorded with the following characteristics:

- Coders: G.711 A-law, G.711 μ -law or Linear PCM
- Rate: 8 kHz
- Resolution: 8-bit
- Channels: mono

The generated PRT file can then be loaded to the MP-1xx using the BootP/TFTP utility (refer to Section [5.11.2.1](#) on page [138](#)) or via the Embedded Web Server (Section [5.11.2](#) on page [137](#)).

The prerecorded tones are played repeatedly. This enables you to record only part of the tone and play it for the full duration. For example, if a tone has a cadence of 2 seconds on and 4 seconds off, the recorded file should contain only these 6 seconds. The PRT module repeatedly plays this cadence for the configured duration. Similarly, a continuous tone can be played by repeating only part of it.

7.3 The Coefficient Configuration File

The `Coeff_FXS.dat` and `Coeff_FXO.dat` files are used to provide best termination and transmission quality adaptation for different line types for MP-1xx/FXS and MP-10x/FXO gateways respectively. This adaptation is performed by modifying the telephony interface characteristics (such as DC and AC impedance, feeding current and ringing voltage).

The `coeff.dat` configuration file is produced specifically for each market after comprehensive performance analysis and testing, and can be modified on request. The current file supports US line type of 600 ohm AC impedance and (for FXS) 40 V RMS ringing voltage for REN = 2.

To load the `coeff.dat` file to the MP-1xx use the Embedded Web Server (refer to Section 5.9.4 on page 122) or alternatively specify the FXS/FXO `coeff.dat` file name in the gateway's `ini` file (refer to Section 5.11.2.1 on page 138).

The `Coeff.dat` file consists of a set of parameters for the signal processor of the loop interface devices. This parameter set provides control of the following AC and DC interface parameters:

- DC (battery) feed characteristics
- AC impedance matching
- Transmit gain
- Receive gain
- Hybrid balance
- Frequency response in transmit and receive direction
- Hook thresholds
- Ringing generation and detection parameters

This means, for example, that changing impedance matching or hybrid balance doesn't require hardware modifications, so that a single device is able to meet requirements for different markets. The digital design of the filters and gain stages also ensures high reliability, no drifts (over temperature or time) and simple variations between different line types.

In future software releases, it is to be expanded to consist of different sets of line parameters, which can be selected in the `ini` file, for each port.

8 Gateway Capabilities Description

8.1 Proxy or Registrar Registration Example

The REGISTER message is sent to the Registrar's IP address (if configured) or to the Proxy's IP address. The message is sent per Gateway or per Gateway endpoint according to the "AuthenticationMode" parameter. Usually the FXS Gateways are registered per Gateway port, while FXO Gateways send a single registration message, where Username is used instead of phone number in From/To headers. The registration request is resent according to the parameter 'RegistrartionTimeDivider'. For example, if 'RegistrationTimeDivider = 70' (%) and Registration Expires time = 3600, the gateway resends its registration request after $3600 \times 70\% = 2520$ sec. The default value of 'RegistrartionTimeDivider' is 50%.

```
REGISTER sip:servername SIP/2.0
VIA: SIP/2.0/UDP 212.179.22.229;branch=z9hG4bRaC7AU234
From: <sip:101@sipgatewayname>;tag=1c29347
To: <sip:101@sipgatewayname>
Call-ID: 10453@212.179.22.229
Seq: 1 REGISTER
Expires: 3600
Contact: sip:101@212.179.22.229
Content-Length: 0
```

The "**servername**" string is defined according to the following rules:

- The "**servername**" is equal to "RegistrarName" if configured. The "RegistrarName" can be any string.
- Otherwise, the "**servername**" is equal to "RegistrarIP" (either FQDN or numerical IP address), if configured.
- Otherwise the "**servername**" is equal to "ProxyName" if configured. The "ProxyName" can be any string.
- Otherwise the "**servername**" is equal to "ProxyIP" (either FQDN or numerical IP address).

The "**sipgatewayname**" parameter (defined in the *ini* file or set from the Web browser), can be any string. Some Proxy servers require that the "**sipgatewayname**" (in REGISTER messages) is set equal to the Registrar/Proxy IP address or to the Registrar/Proxy domain name.

8.2 Configuring the DTMF Transport Types

You can control the way DTMF digits are transported over the IP network to the remote endpoint. The following five modes are supported:

1. Using INFO message according to the Nortel IETF draft:
In this mode DTMF digits are carried to the remote side within INFO messages.
To enable this mode set:
 - 'Enable DTMF = Yes' (IsDTMFUsed = 1)
 - 'OutOfBandDTMFFormat = 1'
 - 'RxDTMFOption = 0'Note that in this mode DTMF digits are erased from the audio stream (DTMFTransportType is automatically set to 0).
2. Using INFO message according to Cisco's style:
In this mode DTMF digits are carried to the remote side within INFO messages.
To enable this mode set:
 - 'Enable DTMF = Yes' (IsDTMFUsed = 1)
 - 'OutOfBandDTMFFormat = 2'
 - 'RxDTMFOption = 0'Note that in this mode DTMF digits are erased from the audio stream (DTMFTransportType is automatically set to 0).
3. Using NOTIFY messages according to <draft-mahy-sipping-signaled-digits-01.txt>:
In this mode DTMF digits are carried to the remote side using NOTIFY messages.
To enable this mode set:
 - 'Enable DTMF = Yes' (IsDTMFUsed = 1)
 - 'OutOfBandDTMFFormat = 3'
 - 'RxDTMFOption = 0'Note that in this mode DTMF digits are erased from the audio stream (DTMFTransportType is automatically set to 0).
4. Using RFC 2833 relay with Payload type negotiation:
In this mode, DTMF digits are carried to the remote side as part of the RTP stream in accordance with RFC 2833 standard.
To enable this mode set:
 - 'Enable DTMF = No' (IsDTMFUsed = 0)
 - 'DTMF RFC 2833 Negotiation = Yes' (TxDTMFOption=4)
 - 'RxDTMFOption = 3'
 - 'DTMFTransportType = 3'Note that to set the RFC 2833 payload type with a different value (other than its default, 96) configure the 'RFC2833PayloadType' parameter. The gateway negotiates the RFC 2833 payload type using local and remote SDP and sends packets using the PT from the received SDP. The gateway expects to receive RFC 2833 packets with the same PT as configured by the 'RFC2833PayloadType' parameter. The RFC 2833 packets are sent even if the remote side didn't include the send "telephone-event" parameter in its SDP, in which case the gateway uses the same PT for send and for receive.
5. Sending DTMF digits (in RTP packets) as part of the audio stream (DTMF Relay is disabled):
Note that this method is normally used with G.711 coders; with other LBR coders the quality of the DTMF digits is reduced.
To set this mode:
 - 'Enable DTMF = No' (IsDTMFUsed = 0)

- 'DTMF RFC 2833 Negotiation = No' (TxDTMFOption=0)
- 'RxDTMFOption = 0'
- 'DTMFTransportType = 2'



Note 1: The gateway is always ready to receive DTMF packets over IP, in all possible transport modes: INFO messages, Notify and RFC 2833 (in proper payload type) or as part of the audio stream.

Note 2: To exclude RFC 2833 Telephony event parameter from the gateway's SDP, set 'RxDTMFOption = 0' in the *ini* file.

The following parameters affect the way the MP-1xx SIP handles the DTMF digits:

Table 8-1: Summary of DTMF configuration Parameters (continues on pages 151 to 152)

<i>ini</i> File Field Name [Web Name]	Valid Range and Description
IsDTMFUsed [Use Out-of-Band DTMF]	Use out-of-band signaling to relay DTMF digits. No [0] = DTMF digits are sent inband (default). Yes [1] = DTMF digits are sent out-of-band according to the parameter 'Out-of-band DTMF format'. Note: When out-of-band DTMF transfer is used (Enable DTMF = Yes), the parameter 'DTMF Transport Type' is automatically set to 0 (erase the DTMF digits from the RTP stream).
OutOfBandDTMFFormat [Out-of-Band DTMF Format]	The exact method to send out-of-band DTMF digits. Info (Nortel) [1] = Sends DTMF digits according with "IETF draft-choudhuri-sip-info-digit-00". Info (Cisco) [2] = Sends DTMF digits according with Cisco format (default). Notify (3Com) [3] = NOTIFY format <draft-mahy-sipping-signaled-digits-01.txt>. Note 1: To use out-of-band DTMF, set 'Enable DTMF = yes' ('IsDTMFUsed=1'). Note 2: When using out-of-band DTMF, the "DTMFTransportType" parameter is automatically set to 0, to erase the DTMF digits from the RTP stream.
TxDTMFOption [DTMF RFC 2833 Negotiation]	No [0] = No negotiation, DTMF digit is sent according to the parameters 'DTMF Transport Type' and 'RFC2833PayloadType'. Yes [4] = Enable RFC 2833 payload type (PT) negotiation Note 1: This parameter is applicable only if "IsDTMFUsed=0" (out-of-band DTMF is not used). Note 2: If enabled, the gateway: • Negotiates RFC 2833 payload type using local and remote SDPs. • Sends DTMF packets using RFC 2833 PT according to the PT in the received SDP. • Expects to receive RFC 2833 packets with the same PT as configured by the "RFC2833PayloadType" parameter. Note 3: If the remote party doesn't include the RFC 2833 DTMF relay payload type in the SDP, the gateway uses the same PT for send and for receive. Note 4: If TxDTMFOption is set to 0, the RFC 2833 payload type is set according to the parameter 'RFC2833PayloadType' for both transmit and receive.
RxDTMFOption	Defines the supported Receive DTMF negotiation method. No [0] = Don't declare RFC 2833 Telephony-event parameter in SDP Yes [3] = Declare RFC 2833 Telephony-event parameter in SDP (default) The MP-1xx is designed to always be receptive to RFC 2833 DTMF relay packets. Therefore, it is always correct to include the "Telephony-event" parameter as a default in the SDP. However some gateways use the absence of the "telephony-event" from the SDP to decide to send DTMF digits inband using G.711 coder, if this is the case you can set "RxDTMFOption=0".

Table 8-1: Summary of DTMF configuration Parameters (continues on pages 151 to 152)

ini File Field Name [Web Name]	Valid Range and Description
RFC 2833 Payload Type [RFC2833PayloadType]	The RFC 2833 DTMF relay dynamic payload type. Range: 96 to 99, 106 to 127; Default = 96 The 100, 102 to 105 range is allocated for proprietary usage. Note 1: Cisco is using payload type 101 for RFC 2833. Note 2: When RFC 2833 payload type (PT) negotiation is used (TxDTMFOption=4), this payload type is used for the received DTMF packets. If negotiation isn't used, this payload type is used for receive and for transmit.
MGCPDTMFDetectionPoint	0 = Send out-of-band DTMF message on starting point of DTMF digit 1 = Send DTMF message on ending point of DTMF digit (default)
DTMFDigitLength	Time in msec for generating DTMF tones to the PSTN side (if received in INFO). The default value is 100 msec.
DTMFInterDigitInterval	Time in msec between generated DTMFs to PSTN side (if received in INFO). The default value is = 100 msec.
DTMFVolume [DTMF Volume]	DTMF level for regenerated digits to PSTN side (-31 to 0, corresponding to -31 dBm to 0 dBm in 1 dB steps, default = -11 dBm).
DTMFTransportType [DTMF Transport Type]	0 = Erase digits from voice stream, do not relay to remote. 2 = Digits remain in voice stream. 3 = Erase digits from voice stream, relay to remote according to RFC 2833. Note: This parameter is automatically updated if one of the following parameters is configured: IsDTMFUsed, TxDTMFOption or RxDTMFOption.

8.3 Configuring the Gateway's Alternative Routing (based on Connectivity and QoS)

The Alternative Routing feature enables reliable routing of Tel to IP calls when a Proxy isn't used. The MP-1xx gateway periodically checks the availability of connectivity and suitable Quality of Service (QoS) before routing. If the expected quality cannot be achieved, an alternative IP route for the prefix (phone number) is selected.

8.3.1 Alternative Routing Mechanism

When a Tel→IP call is routed through the MP-1xx gateway, the call's destination number is compared to the list of prefixes defined in the Tel to IP Routing table (described in Section 5.8.4.2 on page 75). The Tel to IP Routing table is scanned for the destination number's prefix starting at the top of the table. When an appropriate entry (destination number matches one of the prefixes) is found; the prefix's corresponding destination IP address is checked. If the destination IP address is disallowed, an alternative route is searched for in the following table entries.

Destination IP address is disallowed if no ping to the destination is available (ping is continuously initiated every 7 seconds), when an inappropriate level of QoS was detected, or when DNS host name is not resolved. The QoS level is calculated according to delay or packet loss of previously ended calls. If no call statistics are received for two minutes, the QoS information is reset.

The MP-1xx gateway matches the rules starting at the top of the table. For this reason, enter the main IP route above any alternative route.

8.3.2 Determining the Availability of Destination IP Addresses

To determine the availability of each destination IP address (or host name) in the routing table, one (or all) of the following (configurable) methods are applied:

- Connectivity - The destination IP address is queried periodically (currently only by ping).

- QoS - The QoS of an IP connection is determined according to RTCP statistics of previous calls. Network delay (in msec) and network packet loss (in percentage) are separately quantified and compared to a certain (configurable) threshold. If the calculated amounts (of delay or packet loss) exceed these thresholds the IP connection is disallowed.
- DNS resolution – When host name is used (instead of IP address) for the destination route, it is resolved to an IP address by a DNS server. Connectivity and QoS are then applied to the resolved IP address.

8.3.3 Relevant Parameters

The following parameters (described in [Table 5-10](#)) are used to configure the Alternative Routing mechanism:

- AltRoutingTel2IPEnable
- AltRoutingTel2IPMode
- IPConnQoSMaxAllowedPL
- IPConnQoSMaxAllowedDelay

8.4 Working with Supplementary Services

The MP-1xx SIP FXS and FXO gateways support the following supplementary services:

- Hold / Retrieve; refer to [Section 8.4.1](#).
- Consultation / Alternate; refer to [Section 8.4.2](#).
- Transfer (Refer + Replaces); refer to [Section 8.4.3](#).
- Call Forward (3xx Redirect Responses); refer to [Section 8.4.4](#).
- Call Waiting (182 Queued Response); refer to [Section 8.4.5](#).
- Message Waiting Indication (MWI); refer to [Section 8.4.6](#).

To activate these supplementary services (Hold, Transfer, Forward, Waiting and MWI) on the MP-1xx gateway, enable each service's corresponding parameter either from the Web Interface or via the *ini* file. Note that all call participants must support the specific used method.



Note: When working with application servers (such as BroadSoft's BroadWorks) in client server mode (the application server controls all supplementary services and keypad features by itself), the gateway's supplementary services must be disabled.

8.4.1 Call Hold and Retrieve

8.4.1.1 Initiating Hold/Retrieve

- Active calls can be put on-hold by pressing the phone's hook-flash button.
- The party that initiates the hold is called the holding party; the other party is called the held party.
- After a successful Hold, the holding party hears a Dial Tone.
- Call retrieve can be performed only by the holding party while the call is held and active.
- The holding party performs the retrieve by pressing the hook-flash.
- After a successful retrieve, voice is connected again.
- Hold is performed by sending a REINVITE with the IP address 0.0.0.0 or "a=sendonly" in the SDP according to the parameter 'HoldFormat'.

8.4.1.2 Receiving Hold / Retrieve

- When an active call receives REINVITE message with either the IP address 0.0.0.0 or the “inactive” string in SDP, the gateway stops sending RTP and plays a local Held Tone.
- When an active call receives REINVITE message with “sendonly” string in SDP, the gateway stops sending RTP and listens to the remote party. In this mode, it is expected that on-hold music (or any other hold tone) is to be played (over IP) by the remote party.

8.4.2 Consultation / Alternate

- The consultation feature is relevant only for the holding party (applicable only to the MP-1xx/FXS gateway).
- After holding a call (by pressing hook-flash), the holding party hears dial tone and can now initiate a new call that is called a consultation call.
- While hearing dial tone, or when dialing to the new destination (before dialing is complete) the user can retrieve the held call by pressing hook-flash.
- The held call can't be retrieved while Ringback tone is heard.
- After the consultation call is connected, the user can switch between the held and active call by pressing hook-flash.

8.4.3 Call Transfer

There are two types of call transfers:

- Consultation Transfer (Refer + Replaces)
- Blind Transfer (Refer)

The common way to perform a consultation transfer is as follows:

In the transfer scenario there are three parties:

Party A = transferring, Party B = transferred, Party C = transferred to.

- A Calls B.
- B answers.
- A presses the hook-flash and puts B on-hold (party B hears a hold tone)
- A dials C.
- After A completed dialing C, he can perform the transfer by onhook the A phone.
- After the transfer is completed B and C parties are engaged in a call.

The transfer can be initiated at any of the following stages of the call between A to C:

- a. Just after completing dialing C phone number- Transfer from setup.
- b. While hearing Ringback – Transfer from alert.
- c. While speaking to C – Transfer from active.

Blind transfer is performed after we have a call between A and B, and party A decides to transfer the call to C immediately without speaking with C.

The result of the transfer is a call between B and C (just like consultation transfer only skipping the consultation stage).

Note the following SIP issues:

- Transfer is initiated by sending Refer with Replaces.

- The gateway can receive and act upon receiving Refer with or without Replaces.
- The gateway can receive and act upon receiving INVITE with Replaces, in which case the old call is replaced by the new one.
- The INVITE with Replaces can be used to implement Directed Call Pickup.

8.4.4 Call Forward

Five forms of call forward are supported:

1. Immediate - Any incoming call is forwarded immediately and unconditionally.
2. Busy - Incoming call is forwarded if the endpoint is busy.
3. No reply - The incoming call is forwarded if it isn't answered for a specified time.
4. On busy or No reply - Forward incoming calls when the port is busy or when calls are not answered after a configurable period of time.
5. Do Not Disturb - Immediately reject incoming calls.

Three forms of forwarding parties are available:

1. Served party – the party that is configured to forward the call – MP-1xx/FXS.
2. Originating party – the party that initiated the first call – MP-1xx/FXS or FXO.
3. Diverted party – the new destination of the forwarded call – MP-1xx/FXS or FXO.

The served party (MP-1xx/FXS) can be configured through the Web browser (refer to Section 5.8.8.4 on page 96) or via *ini* file to activate one of the call forward modes. These modes are configurable per gateway's endpoint.

Note the following SIP issues:

- Initiating forward – When forward is initiated, the gateway sends a 302 response with a contact that contains the phone number from the forward table and its corresponding IP address from the routing table (or, when Proxy is used, the proxy's IP address).
- Receiving forward – The gateway handles 3xx responses for redirecting calls with a new contact.

8.4.5 Call Waiting

The Call Waiting feature enables FXS gateways to accept an additional (second) call on busy endpoints. If an incoming IP call is designated to a busy port, the called party hears call waiting tone (several configurable short beeps) and (for Bellcore and ETSI Caller IDs) can view the Caller ID string of the incoming call. The calling party hears a Call Waiting Ringback Tone. Called party can accept the new call, using hook-flash, and can toggle between the two calls.

To enable Call Waiting:

- Set "EnableCallWaiting = 1".
- Set "EnableHold = 1".
- Define the Call Waiting indication and Call Waiting Ringback tones in the Call Progress Tones file.
- To configure the Call Waiting indication tone cadence, modify the following parameters: 'NumberOfWaitingIndications', 'WaitingBeepDuration' and 'TimeBetweenWaitingIndications'.
- To configure a delay interval before a Call Waiting Indication is played to the currently busy port use the parameter 'TimeBeforeWaitingIndication'. This enables the caller to hang up before disturbing the called party with Call Waiting Indications. Applicable only to FXS gateways.

Both the calling and the called sides are supported by FXS gateways; the FXO gateways support

only the calling side.

To indicate Call Waiting, the gateway sends a 182 - call queued response.

The gateway identifies a Waiting Call when a 182 (call queued response) is received.

8.4.6 Message Waiting Indication

Support for Message Waiting Indication (MWI) according to IETF draft-ietf-sipping-mwi-04.txt, including SUBSCRIBE (to MWI server). MP-1xx/FXS gateways can accept an MWI Notify message that indicates waiting messages or that the MWI is cleared. Users are informed of these messages by a stutter dial tone. The stutter and confirmation tones are defined in the CPT file (refer to Section 7.1 on page 143). If the MWI display is configured, the number of waiting messages is also displayed. If the MWI lamp is configured, the phone's lamp (on a phone that is equipped with an MWI lamp) is lit. The gateway can subscribe to the MWI server per port (usually used on FXS) or per gateway (used on FXO).

To configure MWI set the following parameters:

- EnableMWI
- MWIServerIP
- MWIAnalogLamp
- MWIDisplay
- StutterToneDuration
- EnableMWISubscription
- MWIExpirationTime
- SubscribeRetryTime
- SubscriptionMode

8.5 Call Termination on MP-1xx/FXO

The following five methods for call termination are supported by the MP-1xx/FXO. Note that the disconnection methods used by the MP-1xx must be supported by the CO or PBX.

- Detection of polarity reversal / current disconnect -
This is the recommended method. The call is immediately disconnected after polarity reversal or current disconnect is detected on the Tel side (assuming the PBX / CO produces this signal).
Relevant *ini* file parameters: EnableReversalPolarity, EnableCurrentDisconnect, CurrentDisconnectDuration, CurrentDisconnectDefaultThreshold and TimeToSampleAnalogLineVoltage.
- Detection of Reorder / Busy tones -
The call is immediately disconnected after Reorder / Busy tone is detected on the Tel side (assuming the PBX / CO produces this tone). This method requires the correct tone frequencies and cadence to be defined in the Call Progress Tones file. If these frequencies are not known, define them in the CPT file (the tone produced by the PBX / CO must be recorded and its frequencies analyzed). This method is slightly less reliable than the previous one. You can use the CPTWizaed (described in Section F.1.3 on page 222) to analyze Call Progress Tones generated by any PBX or telephone network.
Relevant *ini* file parameters: TimeForReorderTone.

- Detection of silence -
The call is disconnected after silence is detected on both call directions for a specific (configurable) amount of time. The call isn't disconnected immediately; therefore, this method should only be used as a backup.
Relevant *ini* file parameters: EnableSilenceDisconnect and FarEndDisconnectSilencePeriod (with DSP templates number 2 or 3).
- Interruption of RTP stream -
Relevant *ini* file parameters: BrokenConnectionEventTimeout and DisconnectOnBrokenConnection. Note that this method operates correctly only if silence suppression is not used.
- Protocol-based termination of the call from the IP side.

8.6 Mapping PSTN Release Cause to SIP Response

The MP-1xx FXO gateway is used to interoperate between the SIP network and the PSTN/PBX. This interoperability includes the mapping of PSTN/PBX Call Progress Tones to SIP 4xx or 5xx responses for IP→Tel calls. The converse is also true: For Tel→IP calls, the SIP 4xx or 5xx responses are mapped to tones played to the PSTN/PBX.

When establishing an IP→Tel call the following rules are applied:

If the remote party (PSTN/PBX) is busy and the FXO gateway detects a Busy tone, it sends 486 busy to IP. If it detects a Reorder tone, it sends 404 not found (no route to destination) to IP. In both cases the call is released. Note that if 'DisconnectOnBusyTone = 0' the FXO gateway ignores the detection of Busy/Reorder tones and doesn't release the call.

For all other MP-1xx FXS/FXO releases (caused when there are no free channels in the specific hunt group, or when an appropriate rule for routing the call to a hunt group doesn't exist, or if the phone number isn't found), the MP-1xx sends SIP response (to IP) according to the parameter 'DefaultReleaseCause'. This parameter defines Q.931 release causes. Its default value is '3', that is mapped to SIP 404 response. By changing its value to '34' SIP 503 response is sent. Other causes can be used as well.

8.7 Call Detail Report

The Call Detail Report (CDR) contains vital statistic information on calls made by the gateway. CDRs are generated at the end and (optionally) at the beginning of each call (determined by the parameter 'CDRReportLevel'). The destination IP address for CDR logs is determined by the parameter 'CDRSyslogServerIP'.

The following CDR fields are supported:


Table 8-2: Supported CDR Fields

Field Name	Description
Cid	Port Number
CallId	H.323/SIP Call Identifier
Trunk	N/A
BChan	N/A
ConId	H.323/SIP Conference ID
TG	Trunk Group Number
EPTyp	Endpoint Type
Orig	Call Originator (IP, Tel)
Sourcelp	Source IP Address
DestIp	Destination IP Address
TON	Source Phone Number Type
NPI	Source Phone Number Plan
SrcPhoneNum	Source Phone Number
TON	Destination Phone Number Type
NPI	Destination Phone Number Plan
DstPhoneNum	Destination Phone Number
DstNumBeforeMap	Destination Number Before Manipulation
Durat	Call Duration
Coder	Selected Coder
Intrv	Packet Interval
Rtplp	RTP IP Address
Port	Remote RTP Port
TrmSd	Initiator of Call Release (IP, Tel, Unknown)
TrmReason	Termination Reason
Fax	Fax Transaction during the Call
InPackets	Number of Incoming Packets
OutPackets	Number of Outgoing Packets
PackLoss	Number of Outgoing Lost Packets
Uniqueld	unique RTP ID
SetupTime	Call Setup Time
ConnectTime	Call Connect Time
ReleaseTime	Call Release Time
RTPdelay	RTP Delay
RTPjitter	RTP Jitter
RTPssrc	Local RTP SSRC
RemoteRTPssrc	Remote RTP SSRC
RedirectReason	Redirect Reason
TON	Redirection Phone Number Type
NPI	Redirection Phone Number Plan
RedirectPhonNum	Redirection Phone Number

8.8 Metering Tones Relay

The MP-1xx FXS and FXO gateways can be used to relay standard 12 or 16 kHz metering tones over the IP network as illustrated in [Figure 8-1](#) below.

Figure 8-1: Metering Tone Relay Architecture

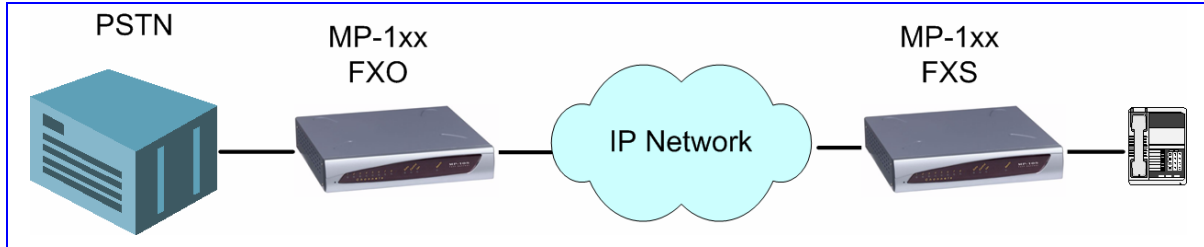

After a call is established between the FXS and FXO gateways, the PSTN generates 12 or 16 kHz metering tones towards the FXO gateway. The FXO gateway detects these pulses and relays them, over IP, to the FXS gateway using a proprietary Info messages (shown in [Figure 8-2](#)). The FXS gateway generates the same pulses to the connected phone.

The parameter 'MeteringType' (described in [Table 5-26](#)) is used to determine the frequency of the metering tone (12 kHz (default) or 16 kHz). In addition, the correct (12 or 16 kHz) coefficient file must be used for both FXS and FXO gateways.

To enable this feature configure 'SendMetering2IP = 1'.

The proprietary Info message used to relay the metering tone pulse contains a "Content-Type: message/Metering".

Figure 8-2: Proprietary Info Message for Relaying Metering Tones

```

INFO sip:108@10.13.83.1 SIP/2.0
Via: SIP/2.0/UDP 10.13.83.2;branch=z9hG4bKacEizRjAa
Max-Forwards: 70
From: "aviad" <sip:201@10.13.83.2>;tag=1c1638621413
To: <sip:108@10.13.83.1;user=phone>;tag=1c1412617336
Call-ID: 2031013892fcCd@10.13.83.2
CSeq: 3 INFO
Contact: <sip:201@10.13.83.2>
Supported: em,timer,replaces,path
Allow: REGISTER,OPTIONS,INVITE,ACK,CANCEL,BYE,NOTIFY,PRACK,REFER,INFO,SUBSCRIBE,UPDATE
User-Agent: Audiocodes-Sip-Gateway-MP-104 FXS/v.4.40.0.18700
Content-Type: message/Metering
Content-Length: 0
  
```

8.9 Configuration Examples

8.9.1 Establishing a Call between Two Gateways

After you've installed and set up the MP-1xx, you can ensure that it functions as expected by establishing a call between it and another gateway. This section exemplifies how to configure two MP-108/FXS SIP gateways in order to establish a call. After configuration, you can make calls between telephones connected to a single MP-108 gateway or between the two MP-108 gateways.

In the following example, the IP address of the first gateway is 10.2.37.10 and its endpoint numbers are 101 to 108. The IP address of the second gateway is 10.2.37.20 and its endpoint numbers are 201 to 208.

In this example, a SIP Proxy is not used. Call routing is performed using the internal 'Tel to IP Routing' table.

➤ To configure the two gateways, take these 4 steps:

1. Configure the following settings on the *first* MP-108 gateway (10.2.37.10):
 - In the 'Endpoint Phone Numbers' screen, assign the phone numbers 101 to 108 for the gateway's endpoints.

Channel(s)	Phone Number	Hunt Group ID
1	1-8	101

2. Configure the following settings on the *second* MP-108 gateway (10.2.37.20):
 - In the 'Endpoint Phone Numbers' screen, assign the phone numbers 201 to 208 for the gateway's endpoints.

Channel(s)	Phone Number	Hunt Group ID
1	1-8	201

3. Configure the following settings for *both* gateways:
 - In the 'Tel To IP Routing' screen, in the first row, enter 10 in the 'Destination Phone Prefix' field and enter the IP address of the first gateway (10.2.37.10) in the field 'IP Address'. In the second row, enter 20 and the IP address of the second gateway (10.2.37.20) respectively. These settings enable the routing (from both gateways) of outgoing Tel→IP calls that start with 10 to the first gateway and calls that start with 20 to the second gateway.

	Dest. Phone Prefix	Source Phone Prefix	Dest. IP Address
1	10	*	10.2.37.10
2	20	*	10.2.37.20


4. Make a call! Pick up the phone connected to port #1 of the first MP-108 and dial 102 (to the phone connected to port #2 of the same gateway). Listen out for progress tones at the calling endpoint and for ringing tone at the called endpoint. Answer the called endpoint, talk into the calling endpoint, and check the voice quality. Dial 201 from the phone connected to port #1 of the first MP-108 gateway; the phone connected to port #1 of the second MP-108 rings. Answer the call and check the voice quality.

8.9.2 SIP Call Flow

The following Call Flow describes SIP messages exchanged between two MP-108 gateways during simple call.

Phone "6000" dials "2000", sending INVITE message to Gateway 10.8.201.161

Figure 8-3: SIP Call Flow

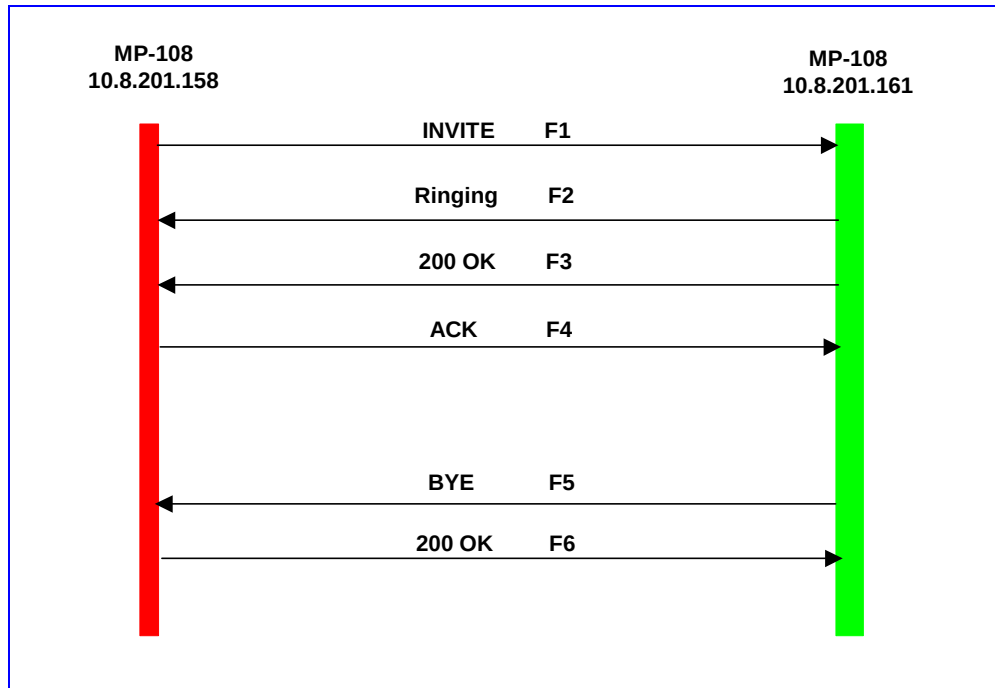

F1 10.8.201.158 ==> 10.8.201.161 INVITE

```

INVITE sip:6000@10.8.201.161;user=phone SIP/2.0
Via: SIP/2.0/UDP 10.8.201.158;branch=z9hG4bKacolwbzYF
From: <sip:2000@10.8.201.158>;tag=1c3535
To: <sip:6000@10.8.201.161>
Call-ID: 2123353775377Nrpl-2000--6000@10.8.201.158
CSeq: 20214 INVITE
Contact: <sip:2000@10.8.201.158;user=phone>
User-Agent: Audiocodes-Sip-Gateway/MP-108 FXS/v.4.20.299.410
Supported: 100rel,em
Accept-Language: en
Allow: REGISTER,OPTIONS,INVITE,ACK,CANCEL,BYE,NOTIFY,PRACK,REFER,INFO
Content-Type: application/sdp
Content-Length: 208

v=0
s=Phone-Call
t=0 0
o=AudiocodesGW 87943 43401 IN IP4 10.8.201.158
c=IN IP4 10.8.201.158
m=audio 6000 RTP/AVP 8 96
a=rtpmap:8 pcma/8000
a=rtpmap:96 telephone-event/8000
a=fmtp:96 0-15
a=ptime:20
  
```

F2 10.8.201.161 ==> 10.8.201.158 180 RINGING

```
SIP/2.0 180 Ringing
Via: SIP/2.0/UDP 10.8.201.158;branch=z9hG4bKacolwbzYF
From: <sip:2000@10.8.201.158>;tag=1c3535
To: <sip:6000@10.8.201.161>;tag=1c29715
Call-ID: 2123353775377NrPL-2000--6000@10.8.201.158
Server: Audiocodes-Sip-Gateway/MP-108 FXS/v.4.20.299.410
CSeq: 20214 INVITE
Supported: 100rel,em
Content-Length: 0
```



Note: Phone "2000" answers the call, and sends "200 OK" message to gateway 10.8.201.158.

F3 10.8.201.161 ==> 10.8.201.158 200 OK

```
SIP/2.0 200 OK
Via: SIP/2.0/UDP 10.8.201.158;branch=z9hG4bKacolwbzYF
From: <sip:2000@10.8.201.158>;tag=1c3535
To: <sip:6000@10.8.201.161>;tag=1c29715
Call-ID: 2123353775377NrPL-2000--6000@10.8.201.158
CSeq: 20214 INVITE
Contact: <sip:6000@10.8.201.161;user=phone>
Server: Audiocodes-Sip-Gateway/MP-108 FXS/v.4.20.299.410
Supported: 100rel,em
Allow: REGISTER,OPTIONS,INVITE,ACK,CANCEL,BYE,NOTIFY,PRACK,REFER,INFO
Content-Type: application/sdp
Content-Length: 208

v=0
s=Phone-Call
t=0 0
o=AudiocodesGW 30762 37542 IN IP4 10.8.201.161
c=IN IP4 10.8.201.161
m=audio 4040 RTP/AVP 8 96
a=rtpmap:8 pcma/8000
a=ptime:20
a=rtpmap:96 telephone-event/8000
a=fmtp:96 0-15
```

F4 10.8.201.158 ==> 10.8.201.161 ACK

```
ACK sip:6000@10.8.201.161;user=phone;user=phone SIP/2.0
Via: SIP/2.0/UDP 10.8.201.158;branch=z9hG4bKachowSQxD
From: <sip:2000@10.8.201.158>;tag=1c3535
To: <sip:6000@10.8.201.161>;tag=1c29715
Call-ID: 2123353775377NrPL-2000--6000@10.8.201.158
User-Agent: Audiocodes-Sip-Gateway/MP-108 FXS/v.4.20.299.410
CSeq: 20214 ACK
Supported: 100rel,em
Content-Length: 0
```



Note: Phone "6000" goes onhook, gateway 10.8.201.161 sends "BYE" to gateway 10.8.201.158. Voice path is established.

F5 10.8.201.161 ==> 10.8.201.158 BYE

```

BYE sip:2000@10.8.201.158;user=phone;user=phone SIP/2.0
Via: SIP/2.0/UDP 10.8.201.161;branch=z9hG4bKacLBzZgma
From: <sip:6000@10.8.201.161>;tag=1c29715
To: <sip:2000@10.8.201.158>;tag=1c3535
Call-ID: 2123353775377NrPL-2000--6000@10.8.201.158
User-Agent: Audiocodes-Sip-Gateway/MP-108 FXS/v.4.20.299.410
CSeq: 34541 BYE
Supported: 100rel,em
Content-Length: 0

```

F6 10.8.201.158 ==> 10.8.201.161 200 OK

```

SIP/2.0 200 OK
Via: SIP/2.0/UDP 10.8.201.161;branch=z9hG4bKacLBzZgma
From: <sip:6000@10.8.201.161>;tag=1c29715
To: <sip:2000@10.8.201.158>;tag=1c3535
Call-ID: 2123353775377NrPL-2000--6000@10.8.201.158
Server: Audiocodes-Sip-Gateway/MP-108 FXS/v.4.20.299.410
CSeq: 34541 BYE
Supported: 100rel,em
Content-Length: 0

```

8.9.3 SIP Authentication Example

MP-108 gateway supports basic and digest (MD5) authentication types, according to SIP RFC 3261 standard. A proxy server might require authentication before forwarding an INVITE message. A Registrar/Proxy server may also require authentication for client registration. A proxy replies to an unauthenticated INVITE with a 407 Proxy Authorization Required response, containing a Proxy-Authenticate header with the form of the challenge. After sending an ACK for the 407, the User Agent can then resend the INVITE with a Proxy-Authorization header containing the credentials.

User Agent, redirect or registrar servers typically use 401 Unauthorized response to challenge authentication containing a WWW-Authenticate header, and expect the re-INVITE to contain an Authorization header.

The following example describes the Digest Authentication procedure including computation of User Agent credentials.

The REGISTER request is sent to Registrar/Proxy server for registration, as follows:

```

REGISTER sip:10.2.2.222 SIP/2.0
Via: SIP/2.0/UDP 10.1.1.200
From: <sip: 122@10.1.1.200>;tag=1c17940
To: <sip: 122@10.1.1.200>
Call-ID: 634293194@10.1.1.200
User-Agent: Audiocodes-Sip-Gateway/MP-108 FXS/v.4.20.299.410
CSeq: 1 REGISTER
Contact: sip:122@10.1.1.200:
Expires:3600

```

On receiving this request the Registrar/Proxy returns 401 Unauthorized response.

```

SIP/2.0 401 Unauthorized
Via: SIP/2.0/UDP 10.2.1.200
From: <sip:122@10.2.2.222 >;tag=1c17940
To: <sip:122@10.2.2.222 >
Call-ID: 634293194@10.1.1.200
Cseq: 1 REGISTER
Date: Mon, 30 Jul 2001 15:33:54 GMT
Server: Columbia-SIP-Server/1.17
Content-Length: 0

```

```
WWW-Authenticate: Digest realm="audiocodes.com",
nonce="11432d6bce58ddf02e3b5e1c77c010d2",
stale=FALSE,
algorithm=MD5
```

According to the sub-header present in the WWW-Authenticate header the correct REGISTER request is formed.

Since the algorithm used is MD5, take:

The username is equal to the endpoint phone number: 122

The realm return by the proxy: audiocodes.com

The password from the *ini* file: AudioCodes.

The equation to be evaluated: (according to RFC this part is called A1).

"122:audiocodes.com:AudioCodes".

The MD5 algorithm is run on this equation and stored for future usage.

The result is: "a8f17d4b41ab8dab6c95d3c14e34a9e1"

Next we need to evaluate the par called A2. We take:

The method type "REGISTER"

Using SIP protocol "sip"

Proxy IP from *ini* file "10.2.2.222"

The equation to be evaluated:

"REGISTER:sip:10.2.2.222".

The MD5 algorithm is run on this equation and stored for future usage.

The result is:"a9a031cfddcb10d91c8e7b4926086f7e"

The final stage:

The A1 result

The nonce from the proxy response: "11432d6bce58ddf02e3b5e1c77c010d2"

The A2 result

The equation to be evaluated:

"A1:11432d6bce58ddf02e3b5e1c77c010d2:A2".

The MD5 algorithm is run on this equation. The outcome of the calculation is the response needed by the GW to be able top register with the Proxy.

The response is: "b9c45d0234a5abf5ddf5c704029b38cf"

At this time a new REGISTER request is issued with the response:

```
REGISTER sip:10.2.2.222 SIP/2.0
Via: SIP/2.0/UDP 10.1.1.200
From: <sip: 122@10.1.1.200>;tag=1c23940
To: <sip: 122@10.1.1.200>
Call-ID: 654982194@10.1.1.200
```

```
Server: Audiocodes-Sip-Gateway/MP-108 FXS/v.4.20.299.410
CSeq: 1 REGISTER
Contact: sip:122@10.1.1.200:
Expires:3600
Authorization: Digest, username: 122,
realm="audiocodes.com",
nonce="11432d6bce58ddf02e3b5e1c77c010d2",
uri="10.2.2.222",
response="b9c45d0234a5abf5ddf5c704029b38cf"
```

On receiving this request, if accepted by the Proxy, the proxy returns a 200 OK response closing the REGISTER transaction.

```
SIP/2.0 200 OK
Via: SIP/2.0/UDP 10.1.1.200
From: <sip: 122@10.1.1.200>;tag=1c23940
To: <sip: 122@10.1.1.200>
Call-ID: 654982194@10.1.1.200
Cseq: 1 REGISTER
Date: Thu, 26 Jul 2001 09:34:42 GMT
Server: Columbia-SIP-Server/1.17
Content-Length: 0
Contact: <sip:122@10.1.1.200>; expires="Thu, 26 Jul 2001 10:34:42 GMT"; action=proxy;
q=1.00
Contact: <122@10.1.1.200>; expires="Tue, 19 Jan 2038 03:14:07 GMT"; action=proxy;
q=0.00
Expires: Thu, 26 Jul 2001 10:34:42 GMT
```

8.9.4 Remote IP Extension between FXO and FXS


This application explains how to implement remote extension via IP, using MP-108/FXO and MP-108/FXS gateways. In this configuration, PBX incoming calls are routed to the "Remote Extension" via the MP-108/FXO and MP-108/FXS gateways.

Requirements:

- One MP-108/FXO gateway
- One MP-108/FXS gateway
- Analog phones (POTS)
- PBX – one or more PBX loop start lines
- LAN.

Connect the MP-108/FXO ports directly to the PBX lines as shown in the diagram below:

Figure 8-4: MP-108 FXS & FXO Remote IP Extension

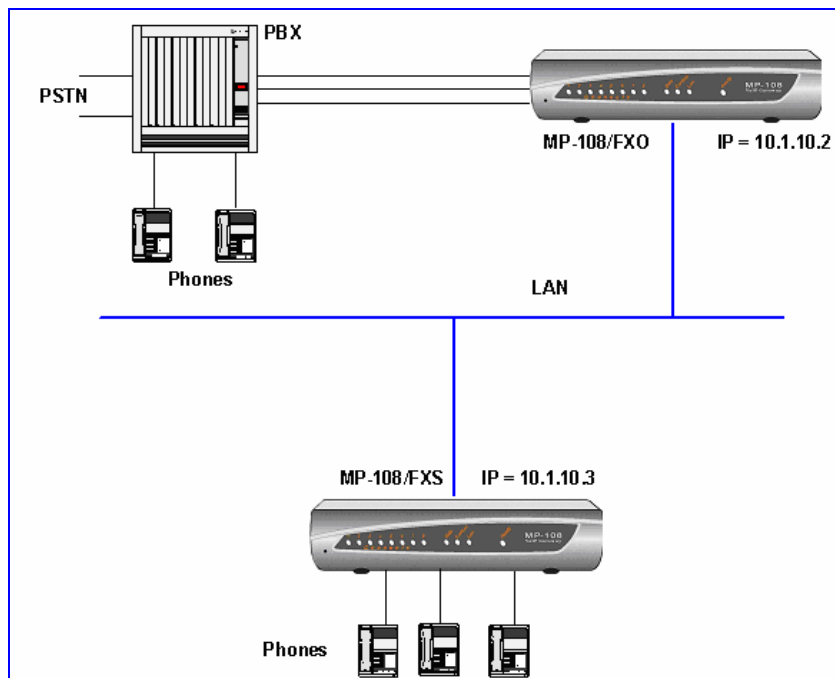

8.9.4.1 Dialing from Remote Extension

(Phone connected to MP-108/FXS)

➤ To configure the call, take these 6 steps:

1. Lift the handset to hear the dial tone coming from PBX, as if the phone was connected directly to PBX.
2. MP-108/FXS and MP-108/FXO establish a voice path connection from the phone to the PBX immediately the phone handset is raised.
3. Dial the destination number (the DTMF digits are sent, over IP, directly to the PBX).
4. All tones heard are generated from the PBX (such as Ringback, busy or fast busy tones).
5. There is one-to-one mapping between MP-108/FXS ports and PBX lines.
6. The call is disconnected when the phone connected to the MP-108/FXS goes onhook.

8.9.4.2 Dialing from other PBX line, or from PSTN

➤ To configure the call, take these 5 steps:

1. Dial the PBX subscriber number the same way as if the user's phone was connected directly to PBX.
2. Immediately as PBX rings into MP-108/FXO, the ring signal is "send" to phone connected to MP-108/FXS.
3. Once the phone's handset, connected to MP-108/FXS, is raised, the MP-108/FXO seizes the PBX line and the voice path is established between the phone and the PBX line.
4. There is a one to one mapping between PBX lines and MP-108/FXS ports. Each PBX line is routed to the same phone (connected to MP-108/FXS).
5. The call is disconnected when phone connected to MP-108/FXS goes onhook.

8.9.4.3 MP-108/FXS Configuration (using the Embedded Web Server)

➤ **To configure the MP-108/FXS, take these 3 steps:**

1. In the 'Endpoint Phone Numbers' screen, assign the phone numbers 100 to 107 for the gateway's endpoints.

Channel(s)	Phone Number	Hunt Group ID
1	1-8	100

2. In the 'Automatic Dialing' screen, enter the phone numbers of the MP-108/FXO gateway in the 'Destination Phone Number' fields. When a phone connected to port #1 goes offhook, the FXS gateway automatically dials the number '200'.

Automatic Dialing			
Gateway Port	Destination Phone Number		Auto Dial Status
Port 1	200		Enable
Port 2	201		Enable
Port 3	202		Enable
Port 4	203		Enable
Port 5	204		Enable
Port 6	205		Enable
Port 7	206		Enable
Port 8	207		Enable

3. In the 'Tel To IP Routing' screen, enter 20 in the 'Destination Phone Prefix' field, and the IP address of the MP-108/FXO gateway (10.1.10.2) in the field 'IP Address'.

	Dest. Phone Prefix	Source Phone Prefix	Dest. IP Address
1	20	*	10.1.10.2

8.9.4.4 MP-108/FXO Configuration (using the Embedded Web Server)

➤ To configure the MP-108/FXO, take these 4 steps:

1. In the 'Endpoint Phone Numbers' screen, assign the phone numbers 200 to 207 for the gateway's endpoints.

Channel(s)	Phone Number	Hunt Group ID
1	1-8	200

2. In the 'Automatic Dialing' screen, enter the phone numbers of the MP-108/FXS gateway in the 'Destination Phone Number' fields. When a ringing signal is detected at port #1, the FXO gateway automatically dials the number '100'.

Gateway Port	Destination Phone Number	Auto Dial Status
Port 1	100	Enable
Port 2	101	Enable
Port 3	102	Enable
Port 4	103	Enable
Port 5	104	Enable
Port 6	105	Enable
Port 7	106	Enable
Port 8	107	Enable

3. In the 'Tel To IP Routing' screen, enter 10 in the 'Destination Phone Prefix' field, and the IP address of the MP-108/FXS gateway (10.1.10.3) in the field 'IP Address'.

Dest. Phone Prefix	Source Phone Prefix	Dest. IP Address
1	10	*
		10.1.10.3

4. In the 'Protocol Management' screen, set the parameter 'Dialing Mode' to 'Two Stage' (IsTwoStageDial=1).

9 Diagnostics

Several diagnostic tools are provided, enabling you to identify correct functioning of the MP-1xx, or an error condition with a probable cause and a solution or workaround.

- Front and rear panel indicator LEDs on the MP-1xx. The location and functionality of the front panel LEDs is shown in Section 2.1.2 on page 22. The location and functionality of the rear panel LEDs is shown in Sections 2.2 and 22.
- Self-Testing on hardware initialization, refer to Section 9.1 below.
- RS-232 terminal Notification Messages, refer to Section 9.2 on page 170.
- Syslog Event Notification Messages. The Log Message can be viewed using an external Syslog server, refer to Section 9.2.2 on page 170, or on the 'Message Log' screen in the Embedded Web Server, refer to Section 5.10.3 on page 129. Note that the 'Message Log' screen is not recommended for prolong debugging.

9.1 MP-1xx Self-Testing

The MP-1xx features two self-testing modes: rapid and detailed.

9.1.1 Rapid Self-Test Mode

Rapid self-test mode is run each time the media gateway completes the initialization process. This is a short test phase in which the only errors detected and reported are failure in initializing hardware components. All Status and Error reports in this self-test phase are reported through Network Interface ports, as well as indicated by the LED Status Indicators.

9.1.2 Detailed Self-Test Mode

Detailed self-test mode is run when initialization of the media gateway is completed and if the configuration parameter EnableDiagnostics is set to 1. In this mode, the media gateway tests all hardware components (memory, DSP, etc.), outputs the status of the test results, and ends the test.

➤ **To enable the detailed self-test mode, take these 4 steps:**

1. Retrieve the *ini* file from the VoIP gateway.
2. Change the EnableDiagnostics parameter to 1.
3. Load the *ini* file onto the VoIP gateway.
4. Restart the VoIP gateway.

The VoIP gateway does not process calls while in Detailed self-test mode. When you are finished running the detailed test, you must disable the Detailed self-test mode.

➤ **To disable the detailed self-test mode, take these 4 steps:**

1. Retrieve the *ini* file from the VoIP gateway.
2. Change the EnableDiagnostics parameter to 0.
3. Load the *ini* file onto the VoIP gateway.
4. Restart the VoIP gateway.

9.2 Troubleshooting the MP-1xx via the RS-232 Port


To troubleshoot initialization problems and view the status and error messages of the MP-1xx, use serial communication software (e.g., HyperTerminal™) connected to the MP-1xx via the RS-232 port. You can also use this connection to change the network settings (IP address, subnet mask and default gateway IP address) of the MP-1xx.

For detailed information on connecting the RS-232 port to your PC, refer to Section 3.4.1 on page 32.

9.2.1 Viewing the Gateway's Information

After applying power to or resetting the gateway, the information, shown in Figure 9-1 below, appears on the terminal screen. This information is used to determine possible MP-1xx initialization problems, such as incorrectly defined (or undefined) Local IP address, subnet mask, default router IP address, TFTP server IP address, BootFile name, *ini* file name and full-duplex or half-duplex network state.

Figure 9-1: Status and Error Messages

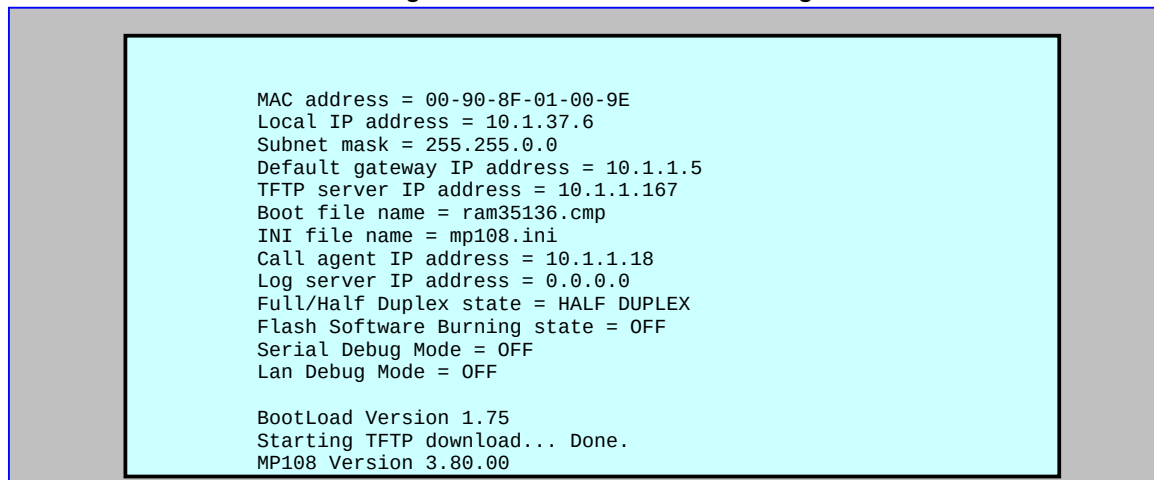

9.2.2 Changing the Networking Parameters

You can use the serial connection to change the network settings (IP address, subnet mask and default gateway IP address) of the MP-1xx.

➤ To change the network settings via RS-232, take these 4 steps:

1. At the prompt type "conf" and press enter; the configuration command shell is activated.
2. To check the current network parameters, at the prompt, type "GCP IP" and press enter; the current network settings are displayed.
3. Change the network settings by typing: "SCP IP [ip_address] [subnet_mask] [default_gateway]" (e.g., "SCP IP 10.13.77.7 255.255.0.0 10.13.0.1"); the new settings take effect on-the-fly. Connectivity is active at the new IP address.
Note: This command requires you to enter all three network parameters (separated by spaces).
4. To save the configuration, at the prompt, type "SAR" and press enter; the MP-1xx restarts with the new network settings.

9.3 Syslog Support

Syslog protocol is an event notification protocol that enables a machine to send event notification messages across IP networks to event message collectors -also known as Syslog servers. Syslog protocol is defined in the IETF RFC 3164 standard.

Since each process, application and operating system was written independently, there is little uniformity to Syslog messages. For this reason, no assumption is made on the contents of the messages other than the minimum requirements of its priority.

Syslog uses UDP as its underlying transport layer mechanism. The UDP port that was assigned to Syslog is 514.

The Syslog message is transmitted as an ASCII (American Standard Code for Information Interchange) message. The message starts with a leading "<" ('less-than' character), followed by a number, which is followed by a ">" ('greater-than' character). This is optionally followed by a single ASCII space.

The number described above is known as the Priority and represents both the Facility and Severity as described below. The Priority number consists of one, two, or three decimal integers.

For example:

```
<37>Oct 11 16:00:15 mymachine su: 'su root' failed for lonvick on /dev/pts/8
```

9.3.1 Syslog Servers

Users can use the provided Syslog server (ACSyslog08.exe) or other third-party Syslog servers.

Examples of Syslog servers available as shareware on the Internet:

- Kiwi Enterprises: <http://www.kiwisyslog.com/>
- The US CMS Server: http://uscms.fnal.gov/hanlon/uscms_server/
- TriAction Software: <http://www.triaction.nl/Products/SyslogDaemon.asp>
- Netal SL4NT 2.1 Syslog Daemon: <http://www.netal.com>

A typical Syslog server application enables filtering of the messages according to priority, IP sender address, time, date, etc.

9.3.2 Operation

9.3.2.1 Sending the Syslog Messages

The Syslog client, embedded in the firmware of the MP-1xx, sends error reports/events generated by the MP-1xx unit application to a Syslog server, using IP/UDP protocol.

9.3.2.2 Setting the Syslog Server

➤ **To set the Syslog server:**

- Use the MP-1xx Embedded Web Server (Advanced Configuration>Network Settings>screen section Syslog Settings) to enable the Syslog Server (Enable Syslog) and to enter its IP address (Syslog Server IP address); refer to Section 5.9 on page 103 and to Figure 9-2 below.

Figure 9-2: Setting the Syslog Server IP Address

Syslog Settings	
Syslog Server IP Address	10.13.2.95
Enable Syslog	Enable

- Alternately, use the Embedded Web Server or the BootP/TFTP utility to load the *ini* configuration file containing both the IP address and the enabling parameters: SyslogServerIP and EnableSyslog respectively. For detailed information on the BootP/TFTP utility, refer to [Appendix B](#) on page 197. For an *ini* file example showing these parameters, refer to Section 9.3.2.3 and to [Figure 9-2](#) under it.

9.3.2.3 The *ini* File Example for Syslog

[Figure 9-2](#) shows an *ini* file section with an example configuration for the address parameter SyslogServerIP and an example configuration for the client activation parameter EnableSyslog.

Figure 9-3: The *ini* File Example for Syslog

```
[Syslog]
SysLogServerIP = 10.2.0.136
EnableSyslog = 1
GWDebugLevel = 5
```

9.4 Solutions to Possible Problems

9.4.1 General

If there is a problem, check the following resources:

- The 'Channel Status' pages on the Web Interface. Refer to Section 5.10 on page 124.
- The Log Message on the Web Interface, refer to Section 5.10.3 on page 129.
- Log messages sent to the RS-232 Port. Refer to Section 9.2 on page 170.
- BootP & TFTP log messages (for startup problems). Refer to Section B.9 on page 200.
- Log messages in Syslog server. Refer to Section 9.2.2 on page 170.

10 BootP/DHCP Support

10.1 Startup Process

The startup process (illustrated in [Figure 10-1](#) on page 174) begins when the gateway is reset (physically or from the Web / SNMP) and ends when the operational software is running. In the startup process, the network parameters, software and configuration files are obtained.

After the gateway powers up or after it is physically reset, it broadcasts a BootRequest message to the network. If it receives a reply (from a BootP server), it changes its network parameters (IP address, subnet mask and default gateway address) to the values provided. If there is no reply from a BootP server and if DHCP is enabled (DHCPEnable = 1), the gateway initiates a standard DHCP procedure to configure its network parameters.

After changing the network parameters, the gateway attempts to load the *cmp* and various configuration files from the TFTP server's IP address, received from the BootP/DHCP servers. If a TFTP server's IP address isn't received, the gateway attempts to load the software (*cmp*) file and / or configuration files from a preconfigured TFTP server (refer to the parameters 'IniFileURL' and 'CmpFileURL' described in [Table 5-29](#) on page 108). Thus, the gateway can obtain its network parameters from BootP or DHCP servers and its software and configuration files from a different TFTP server (preconfigured in *ini* file).

If BootP/DHCP servers are not found or when the gateway is reset from the Web / SNMP, it retains its network parameters and attempts to load the software (*cmp*) file and / or configuration files from a preconfigured TFTP server.


If a preconfigured TFTP server doesn't exist, the gateway operates using the existing software and configuration files loaded on its non-volatile memory.

Note that after the operational software runs, if DHCP is configured, the gateway attempts to renew its lease with the DHCP server.



Note 1: Though DHCP and BootP servers are very similar in operation, the DHCP server includes some differences that could prevent its operation with BootP clients. However, many DHCP servers, such as Windows™ NT DHCP server, are backward-compatible with BootP protocol and can be used for gateway configuration.

Note 2: The time duration between BootP/DHCP requests is set to 1 second by default. This can be changed by the BootPDelay *ini* file parameter. Also, the number of requests is 3 by default and can be changed by BootPRetries *ini* file parameter (both parameters can also be set using the BootP command line switches).

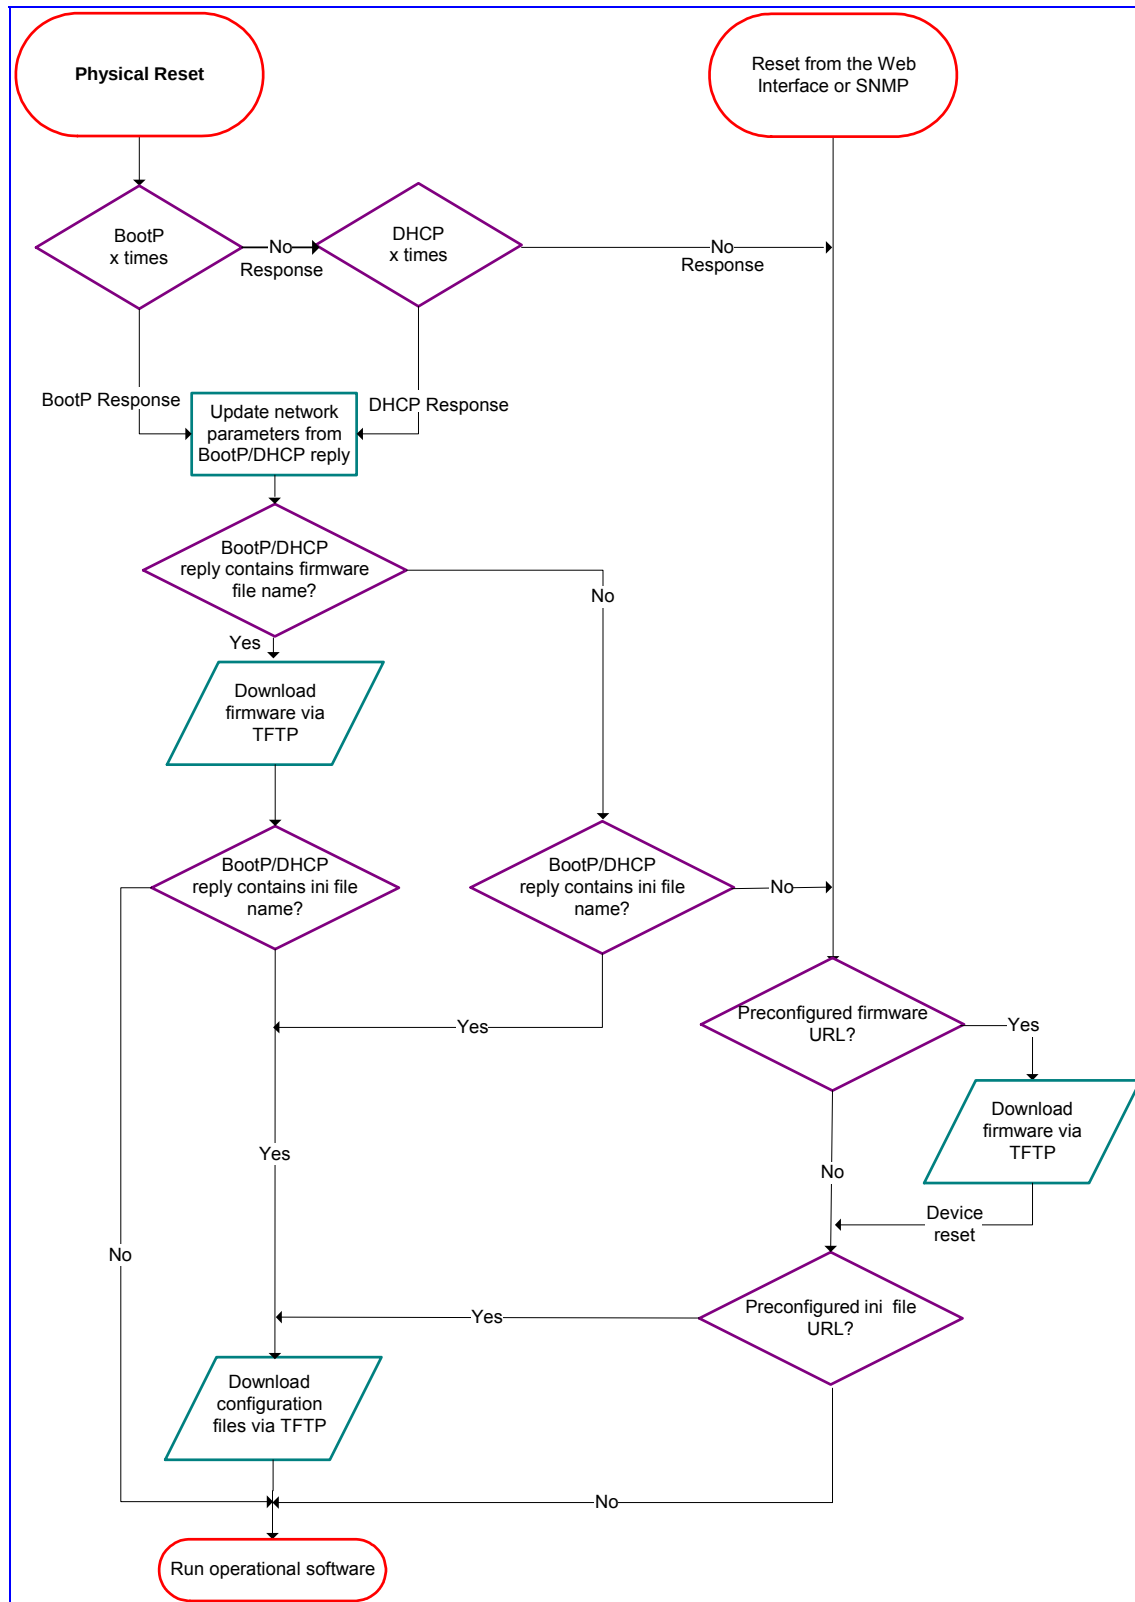Figure 10-1: MP-1xx Startup Process


10.2 DHCP Support

When the gateway is configured to use DHCP (DHCPEnable = 1), it attempts to contact the enterprise's DHCP server to obtain the networking parameters (IP address, subnet mask, default gateway, primary/secondary DNS server and SIP server address). These network parameters have a "time limit". After the time limit expires, the gateway must "renew" its lease from the DHCP server.

Note that if the DHCP server denies the use of the gateway's current IP address and specifies a different IP address (according to RFC 1541), the gateway must change its networking parameters. If this happens while calls are in progress, they are not automatically rerouted to the new network address (since this function is beyond the scope of a VoIP gateway). Therefore, administrators are advised to configure DHCP servers to allow renewal of IP addresses.

Note: If the gateway's network cable is disconnected and reconnected, a DHCP renewal is performed (to verify that the gateway is still connected to the same network).

When DHCP is enabled, the gateway also includes its product name (e.g., 'MP-108 FXS' or 'MP-104 FXO') in the DHCP 'option 60' Vendor Class Identifier. The DHCP server can use this product name to assign an IP address accordingly.

Note: After power-up, the gateway issues two DHCP requests. Only in the second request, the DHCP 'option 60' is contained. If the gateway is reset from the Web/SNMP, only a single DHCP request containing 'option 60' is sent.

If DHCP procedure is used, the new gateway IP address, allocated by the DHCP server, must be detected.



Note: If, during operation, the IP address of the gateway is changed as a result of a DHCP renewal, the gateway is automatically reset.

➤ **To detect the gateway's IP address, follow one of the procedures below:**

- Starting with Bootload software version 1.92, the gateway can use host name in the DHCP request. The host name is set to `acl_nnnnn`, where `nnnnn` stands for the gateway's serial number (the serial number is equal to the last 6 digits of the MAC address converted from Hex to decimal). If the DHCP Server registers this host name to a DNS server, the user can access the gateway (through a Web browser) using a URL of `http://acl_<serial number>` (instead of using the gateway's IP address). For example, if the gateway's MAC address is 00908f010280, the DNS name is `acl_66176`.
- After physically resetting the gateway its IP address is displayed in the 'Client Info' column in the BootP/TFTP configuration utility (refer to [Figure B-1](#) on page 199).
- Use the RS-232 connector (for detailed information on using the RS-232, refer to [Section 9.2](#) on page 170).
- Contact your System Administrator.

10.3 BootP Support

10.3.1 Upgrading the MP-1xx

When upgrading the MP-1xx (loading new software onto the gateway) using the BootP/TFTP configuration utility:

- From version 4.2 to version 4.4, the device loses its configuration. Therefore, to retain the previous gateway configuration you must save the *ini* file before you replace the *cmp* file, and reload it to the device. For information on backing up and restoring the gateway's configuration refer to Section 5.9.2.1 on page 120.
- From version 4.4 to version 4.4 or to any higher version, the device retains its configuration (*ini* file), however, the auxiliary files (CPT, logo, etc.) may be erased.

When using the Software Upgrade wizard, available through the Web Interface (refer to Section 5.11.1 on page 131), the auxiliary files are saved as well.

Note: To save the *cmp* file to non-volatile memory, use the -fb command line switches. If the file is not saved, the gateway reverts to the old version of software after the next reset. For information on using command line switches, refer to Section B.11.6 on page 206.

10.3.2 Vendor Specific Information Field

The MP-1xx uses the vendor specific information field in the BootP request to provide device-related initial startup information. The BootP/TFTP configuration utility displays this information in the 'Client Info' column (refer to Figure B-1).

Note: This option is not available on DHCP servers.

The Vendor Specific Information field is disabled by default. To enable / disable this feature: set the *ini* file parameter 'ExtBootPReqEnable' (Table 5-29 on page 108) or use the '-be' command line switch (refer to Table B-1 on page 206).

Table 10-1 details the vendor specific information field according to device types:

Table 10-1: Vendor Specific Information Field

Tag #	Description	Value	Length
220	Board Type	#10 = MP-102 #11 = MP-104 #12 = MP-108 #13 = MP-124	1
221	Current IP Address	XXX.XXX.XXX.XXX	4
222	Burned Boot Software Version	X.XX	4
223	Burned <i>cmp</i> Software Version	XXXXXXXXXXXX	12
224	Geographical Address	0 – 31	1
225	Chassis Geographical Address	0 – 31	1
228	Indoor / Outdoor (Indoor is valid only for FXS. FXO is always Outdoor.)	#0 = Indoor #1 = Outdoor	1
229	E&M	N/A	1
230	Analog Channels	2 / 4 / 8 / 24	1

Table 10-2 exemplifies the structure of the vendor specific information field for a **TP-1610** slave module with IP Address 10.2.70.1.

Table 10-2: Structure of the Vendor Specific Information Field

Vendor-Specific Information Code	Length Total	Tag Num	Length	Value	Tab Num	Length	Value	Tag Num	Length	Value (1)	Value (2)	Value (3)	Value (4)	Tag End
42	12	220	1	2	225	1	1	221	4	10	2	70	1	255

Reader's Notes

11 SNMP-Based Management

Simple Network Management Protocol (SNMP) is a standard-based network control protocol used to manage elements in a network. The SNMP Manager (usually implemented by a Network Manager (NM) or an Element Manager (EM)) connects to an SNMP Agent (embedded on a remote Network Element (NE)) to perform network element Operation, Administration and Maintenance (OAM).

Both the SNMP Manager and the NE refer to the same database to retrieve information or configure parameters. This database is referred to as the Management Information Base (MIB), and is a set of statistical and control values. Apart from the standard MIBs documented in IETF RFCs, SNMP additionally enables the use of private MIBs, containing a non-standard information set (specific functionality provided by the NE).

Directives, issued by the SNMP Manager to an SNMP Agent, consist of the identifiers of SNMP variables (referred to as MIB object identifiers or MIB variables) along with instructions to either get the value for that identifier, or set the identifier to a new value (configuration). The SNMP Agent can also send unsolicited events towards the EM, called SNMP traps.

The definitions of MIB variables supported by a particular agent are incorporated in descriptor files, written in Abstract Syntax Notation (ASN.1) format, made available to EM client programs so that they can become aware of MIB variables and their use.

The device contains an embedded SNMP Agent supporting both general network MIBs (such as the IP MIB), VoP-specific MIBs (such as RTP) and our proprietary MIBs (acBoard, acGateway, acAlarm and other MIBs), enabling a deeper probe into the inter-working of the device. All supported MIB files are supplied to customers as part of the release.

11.1 About SNMP

11.1.1 SNMP Message Standard

Four types of SNMP messages are defined:

- Get - A request that returns the value of a named object.
- Get-Next - A request that returns the next name (and value) of the 'next' object supported by a network device given a valid SNMP name.
- Set - A request that sets a named object to a specific value.
- Trap - A message generated asynchronously by network devices. It is an unsolicited message from an agent to the manager.

Each of these message types fulfills a particular requirement of Network Managers:

- Get Request - Specific values can be fetched via the 'get' request to determine the performance and state of the device. Typically, many different values and parameters can be determined via SNMP without the overhead associated with logging into the device, or establishing a TCP (Transmission Control Protocol) connection with the device.
- Get Next Request - Enables the SNMP standard network managers to 'walk' through all SNMP values of a device (via the 'get-next' request) to determine all names and values that an operant device supports. This is accomplished by beginning with the first SNMP object to be fetched, fetching the next name with a 'get-next', and repeating this operation.
- Set Request - The SNMP standard provides a method of effecting an action associated with a device (via the 'set' request) to accomplish activities such as disabling interfaces, disconnecting users, clearing registers, etc. This provides a way of configuring and controlling network devices via SNMP.

- Trap Message - The SNMP standard furnishes a mechanism by which devices can 'reach out' to a Network Manager on their own (via a 'trap' message) to notify or alert the manager of a problem with the device. This typically requires each device on the network to be configured to issue SNMP traps to one or more network devices that are awaiting these traps.

The above message types are all encoded into messages referred to as Protocol Data Units (PDUs) that are interchanged between SNMP devices.

11.1.2 SNMP MIB Objects

The SNMP MIB is arranged in a tree-structured fashion, similar in many ways to a disk directory structure of files. The top level SNMP branch begins with the ISO 'internet' directory, which contains four main branches:

- The 'mgmt' SNMP branch - Contains the standard SNMP objects usually supported (at least in part) by all network devices.
- The 'private' SNMP branch - Contains those 'extended' SNMP objects defined by network equipment vendors.
- The 'experimental' and 'directory' SNMP branches - Also defined within the 'internet' root directory, these branches are usually devoid of any meaningful data or objects.

The 'tree' structure described above is an integral part of the SNMP standard, though the most pertinent parts of the tree are the 'leaf' objects of the tree that provide actual management data regarding the device. Generally, SNMP leaf objects can be partitioned into two similar but slightly different types that reflect the organization of the tree structure:

- Discrete MIB Objects - Contain one precise piece of management data. These objects are often distinguished from 'Table' items (below) by adding a '.0' (dot-zero) extension to their names. The operator must merely know the name of the object and no other information.
- Table MIB Objects - Contain multiple sections of management data. These objects are distinguished from 'Discrete' items (above) by requiring a '.' (dot) extension to their names that uniquely distinguishes the particular value being referenced. The '.' (dot) extension is the 'instance' number of an SNMP object. For 'Discrete' objects, this instance number is zero. For 'Table' objects, this instance number is the index into the SNMP table. SNMP tables are special types of SNMP objects which allow parallel arrays of information to be supported. Tables are distinguished from scalar objects, so that tables can grow without bounds. For example, SNMP defines the 'ifDescr' object (as a standard SNMP object) that indicates the text description of each interface supported by a particular device. Since network devices can be configured with more than one interface, this object can only be represented as an array.

By convention, SNMP objects are always grouped in an 'Entry' directory, within an object with a 'Table' suffix. (The 'ifDescr' object described above resides in the 'ifEntry' directory contained in the 'ifTable' directory).

11.1.3 SNMP Extensibility Feature

One of the principal components of an SNMP manager is a MIB Compiler which allows new MIB objects to be added to the management system. When a MIB is compiled into an SNMP manager, the manager is made 'aware' of new objects that are supported by agents on the network. The concept is similar to adding a new schema to a database.

Typically, when a MIB is compiled into the system, the manager creates new folders or directories that correspond to the objects. These folders or directories can typically be viewed with a MIB Browser, which is a traditional SNMP management tool incorporated into virtually all Network Management Systems.

The act of compiling the MIB allows the manager to know about the special objects supported by the agent and access these objects as part of the standard object set.

11.2 Carrier Grade Alarm System

The basic alarm system has been extended to a carrier-grade alarm system. A carrier-grade alarm system provides a reliable alarm reporting mechanism that takes into account EMS outages, network outages, and transport mechanism such as SNMP over UDP.

A carrier-grade alarm system is characterized by the following:

- The device has a mechanism that allows a manager to determine which alarms are currently active in the device. That is, the device maintains an active alarm table.
- The device has a mechanism to allow a manager to detect lost alarm raise and clear notifications [sequence number in trap, current sequence number MIB object].
- The device has a mechanism to allow a manager to recover lost alarm raise and clear notifications [maintains a log history].
- The device sends a cold start trap to indicate that it is starting. This allows the EMS to synchronize its view of the device's active alarms.

The SNMP alarm traps are sent as in previous releases. This system provides the mechanism for viewing of history and current active alarm information.

11.2.1 Active Alarm Table

The device maintains an active alarm table to allow a manager to determine which alarms are currently active in the device. Two views of the active alarm table are supported by the agent:

- `acActiveAlarmTable` in the enterprise `acAlarm`
- `alarmActiveTable` and `alarmActiveVariableTable` in the IETF standard `ALARM-MIB` (rooted in the AC tree)

The `acActiveAlarmTable` is a simple, one-row per alarm table that is easy to view with a MIB browser.

The `ALARM-MIB` is currently a draft standard and therefore has no OID assigned to it. In the current software release, the MIB is rooted in the experimental MIB subtree. In a future release, after the MIB has been ratified and an OID assigned, it is to move to the official OID.

11.2.2 Alarm History

The device maintains a history of alarms that have been raised and traps that have been cleared to allow a manager to recover any lost, raised or cleared traps. Two views of the alarm history table are supported by the agent:

- `acAlarmHistoryTable` in the enterprise `acAlarm`
- `nlmLogTable` and `nlmLogVariableTable` in the standard `NOTIFICATION-LOG-MIB`

As with the `acActiveAlarmTable`, the `acAlarmHistoryTable` is a simple, one-row-per-alarm table that is easy to view with a MIB browser.

11.3 Cold Start Trap

MP-1xx technology supports a cold start trap to indicate that the device is starting. This allows the manager to synchronize its view of the device's active alarms. Two different traps are sent at start-up:

- The standard `coldStart` trap - `iso(1).org(3).dod(6).internet(1).snmpV2(6).snmpModules(3).snmpMIB(1).snmpMIBObjects(1).snmpTraps(5).coldStart(1)` - sent at system initialization.

- The enterprise `acBoardEvBoardStarted` which is generated at the end of system initialization. This is more of an 'application-level' cold start sent after the entire initializing process is complete and all the modules are ready.

11.4 Third-Party Performance Monitoring Measurements

Performance measurements are available for a third-party performance monitoring system through an SNMP interface. These measurements can be polled at scheduled intervals by an external poller or utility in a media server or other off-device system.

The device provides two types of performance measurements:

1. **Gauges:** Gauges represent the current state of activities on the device. Gauges, unlike counters, can decrease in value, and like counters, can increase. The value of a gauge is the current value or a snapshot of the current activity on the device.
2. **Counters:** Counters always increase in value and are cumulative. Counters, unlike gauges, never decrease in value unless the off-device system is reset, the counters are then zeroed.

Performance measurements are provided by three proprietary MIBs (`acPerfMediaGateway`, `acPerfMediaServices` and `acPerfH323SIPGateway`). The first MIB is a generic-type of performance measurements MIB available on all MP-1xx and related devices. The second is specific to the media server, and the third is for H.323/SIP media gateways.

The generic performance measurements MIB covers:

- Control protocol
- RTP stream
- System packets statistics

Performance measurement enterprise MIB supports statistics which apply to the Proxy/Gatekeeper routing tables.

11.5 Supported MIBs

The MP-1xx contains an embedded SNMP Agent supporting the following MIBs:

- Standard MIB (MIB-II) - The various SNMP values in the standard MIB are defined in RFC 1213. The standard MIB includes various objects to measure and monitor IP activity, TCP activity, UDP activity, IP routes, TCP connections, interfaces and general system indicators.
- RTP MIB - The RTP MIB is supported in conformance with the IETF RFC 2959. It contains objects relevant to the RTP streams generated and terminated by the device and to RTCP information related to these streams.
- NOTIFICATION-LOG-MIB - This standard MIB (RFC 3014 - iso.org.dod.internet.mgmt.mib-2) is supported as part of our implementation of carrier grade alarms.
- ALARM-MIB - This is an IETF proposed MIB also supported as part of our implementation of carrier grade alarms. This MIB is still not standard and is therefore under the `audioCodes.acExperimental` branch.
- SNMP-TARGET-MIB - This MIB is partially supported (RFC 2273). It allows for the configuration of trap destinations and trusted managers only.
- SNMP Research International Enterprise MIBs – MP-1xx supports two SNMP Research International MIBs: `SR-COMMUNITY-MIB` and `TGT-ADDRESS-MASK-MIB`. These MIBs are used in the configuration of SNMPv2c community strings and trusted managers.

In addition to the standard MIBs, the complete series contains several proprietary MIBs:

- acBoard MIB - This proprietary MIB contains objects related to configuration of the device and channels, as well as to run-time information. Through this MIB, users can set up the device configuration parameters, reset the device, monitor the device's operational robustness and Quality of Service during run-time, and receive traps.



Note: The acBoard MIB is still supported but is being replaced by five newer proprietary MIBs.

The acBoard MIB has the following groups:

- boardConfiguration
- boardInformation
- channelConfiguration
- channelStatus
- reset
- acTrap

As noted above, five new MIBs cover the device's general parameters. Each contains a Configuration subtree for configuring related parameters. In some, there also are Status and Action subtrees.

The 5 MIBs are:

1. AC-ANALOG-MIB
2. AC-CONTROL-MIB
3. AC-MEDIA-MIB
4. AC-PSTN-MIB
5. AC-SYSTEM-MIB

Other proprietary MIBs are:

- acGateway MIB - This proprietary MIB contains objects related to configuration of the device when applied as a SIP or H.323 media gateway only. This MIB complements the other proprietary MIBs.

The acGateway MIB has the following groups:

- **Common** - for parameters common to both SIP and H.323
- **SIP** - for SIP parameters only
- **H.323** - for H.323 parameters only
- acAlarm - This is a proprietary carrier-grade alarm MIB. It is a simpler implementation of the notificationLogMIB and the IETF suggested alarmMIB (both also supported in all MP-1xx and related devices).

The acAlarm MIB has the following groups:

- ActiveAlarm - straightforward (single-indexed) table, listing all currently active alarms, together with their bindings (the alarm bindings are defined in acAlarm. acAlarmVarbinds and also in acBoard.acTrap. acBoardTrapDefinitions. oid_1_3_6_1_4_1_5003_9_10_1_21_2_0).
- acAlarmHistory - straightforward (single-indexed) table, listing all recently raised alarms together with their bindings (the alarm bindings are defined in acAlarm. acAlarmVarbinds and also in acBoard.acTrap. acBoardTrapDefinitions. oid_1_3_6_1_4_1_5003_9_10_1_21_2_0).

The table size can be altered via notificationLogMIB.notificationLogMIBObjects.nlmConfig.nlmConfigGlobalEntryLimit or notificationLogMIB.notificationLogMIBObjects.nlmConfig.nlmConfigLogTable.nlmConfigLogEntry.nlmConfigLogEntryLimit.

The table size can be any value between 10 to 100 and is 100 by default.

- Traps

Full proprietary trap definitions and trap Varbinds are found in the acBoard MIB and acAlarm MIB.

The following proprietary traps are supported in the device:

- acBoardEvResettingBoard - Sent after the device is reset.
- acBoardEvBoardStarted - Sent after the device is successfully restored and initialized following reset.
- acBoardConfigurationError - Sent when a device's settings are illegal - the trap contains a message stating/detailing/explaining the illegality of the setting.
- acBoardFatalError - Sent whenever a fatal device error occurs.
- acBoardCallResourcesAlarm - Indicates that no free channels are available.
- acBoardControllerFailureAlarm - The Gatekeeper/Proxy is not found or registration failed. Internal routing table can be used for routing.
- acBoardEthernetLinkAlarm - Ethernet link or links are down.
- acBoardOverloadAlarm - Overload in one or some of the system's components.
- acActiveAlarmTableOverflow - An active alarm could not be placed in the active alarm table because the table is full.

In addition to the listed traps, the device also supports the following standard traps:

- coldStart
- authenticationFailure



Note 1: The following are special notes pertaining to MIBs:

- A detailed explanation of each parameter can be viewed in an SNMP browser in the 'MIB Description' field.
- Not all groups in the MIB are functional. Refer to version release notes.
- Certain parameters are non-functional. Their MIB status is marked 'obsolete'.
- When a parameter is set to a new value via SNMP, the change may affect device functionality immediately or may require that the device be soft reset for the change to take effect. This depends on the parameter type.

Note 2: The current (updated) device configuration parameters are programmed into the device provided that the user does not load an *ini* file to the device after reset. Loading an *ini* file after reset overrides the updated parameters.

Additional MIBs are to be supported in future releases.

11.6 SNMP Interface Details

This section describes details of the SNMP interface that is required when developing an Element Manager (EM) for any of the media gateways, or to manage a device with a MIB browser.

Currently, both SNMP and *ini* file commands and downloads are not encrypted. For *ini* file encoding, refer to Section F.1.2 on page 221.

11.6.1 SNMP Community Names

By default, the device uses a single, read-only community string of 'public' and a single read-write community string of 'private'.

Users can configure up to 5 read-only community strings and up to 5 read-write community strings, and a single trap community string is supported:

11.6.1.1 Configuration of Community Strings via the *ini* File

```
SNMPREADONLYCOMMUNITYSTRING_<x> = '#####'
```

```
SNMPREADWRITECOMMUNITYSTRING_<x> = '#####'
```

where <x> is a number between 0 and 4, inclusive. Note that the '#' character represents any alphanumeric character. The maximum length of the string is 20 characters.

11.6.1.2 Configuration of Community Strings via SNMP

To configure read-only and read-write community strings, the EM must use the srCommunityMIB. To configure the trap community string, the EM must also use the snmpVacmMIB and the snmpTargetMIB.

➤ **To add a read-only community string (v2user):**

- Add a new row to the srCommunityTable with CommunityName v2user and GroupName ReadGroup.

➤ **To delete the read-only community string (v2user), take these 2 steps:**

1. If v2user is being used as the trap community string, follow the procedure for changing the trap community string (see below).
2. Delete the srCommunityTable row with CommunityName v2user.

➤ **To add a read-write community string (v2admin):**

- Add a new row to the srCommunityTable with CommunityName of v2admin and GroupName ReadWriteGroup.

➤ **To delete the read-write community string (v2admin), take these 2 steps:**

1. If v2admin is being used as the trap community string, follow the procedure for changing the trap community string. (See below.)
2. Delete the srCommunityTable row with a CommunityName of v2admin and GroupName of ReadWriteGroup.

➤ **To change the only read-write community string from v2admin to v2mgr, take these 4 steps:**

1. Follow the procedure above to add a read-write community string to a row for v2mgr.
2. Set up the EM so that subsequent 'set' requests use the new community string, v2mgr.
3. If v2admin is being used as the trap community string, follow the procedure to change the trap community string (see below).
4. Follow the procedure above to delete a read-write community name in the row for v2admin.

➤ **To change the trap community string, take these 2 steps:**

(The following procedure assumes that a row already exists in the srCommunityTable for the new trap community string. The trap community string can be part of the TrapGroup, ReadGroup or ReadWriteGroup. If the trap community string is used solely for sending traps (recommended), it should be made part of the TrapGroup).

1. Add a row to the vacmSecurityToGroupTable with these values: SecurityModel=2, SecurityName=the new trap community string, GroupName=TrapGroup, ReadGroup or ReadWriteGroup. The SecurityModel and SecurityName objects are row indices.



Note: You must add GroupName and RowStatus on the same set.

2. Modify the SecurityName field in the sole row of the snmpTargetParamsTable.

11.6.2 Trusted Managers

By default, the agent accepts 'get' and 'set' requests from any IP address, as long as the correct community string is used in the request. Security can be enhanced via the use of Trusted Managers. A Trusted Manager is an IP address from which the SNMP Agent accepts and processes 'get' and 'set' requests. An EM can be used to configure up to 5 Trusted Managers.



Note: If Trusted Managers are defined, all community strings work from all Trusted Managers. That is, there is no way to associate a community string with particular trusted managers.

11.6.2.1 Configuration of Trusted Managers via *ini* File

To set the Trusted Managers table from start-up, write the following in the *ini* file:

SNMPTRUSTEDMGR_X = D.D.D.D

where X is any integer between 0 and 4 (0 sets the first table entry, 1 sets the second, and so on), and D is an integer between 0 and 255.

11.6.2.2 Configuration of Trusted Managers via SNMP

To configure Trusted Managers, the EM must use the srCommunityMIB, the snmpTargetMIB and the TGT-ADDRESS-MASK-MIB.

➤ **To add the first Trusted Manager, take these 3 steps:**

(The following procedure assumes that there is at least one configured read-write community. There are currently no Trusted Managers. The taglist for columns for all srCommunityTable rows

are currently empty).

1. Add a row to the `snmpTargetAddrTable` with these values: Name=mgr0, TagList=MGR, Params=v2cparams.
2. Add a row to the `tgtAddressMaskTable` table with these values: Name=mgr0, `tgtAddressMask=255.255.255.255:0`. The agent doesn't allow creation of a row in this table unless a corresponding row exists in the `snmpTargetAddrTable`.
3. Set the value of the `TransportLabel` field on each non-TrapGroup row in the `srCommunityTable` to MGR.

➤ **To add a subsequent Trusted Manager, take these 2 steps:**

(The following procedure assumes that there is at least one configured read-write community. There are currently one or more Trusted Managers. The taglist for columns for all rows in the `srCommunityTable` are currently set to MGR. This procedure must be performed from one of the existing Trusted Managers).

1. Add a row to the `snmpTargetAddrTable` with these values: Name=mgrN, TagList=MGR, Params=v2cparams, where N is an unused number between 0 and 4.
2. Add a row to the `tgtAddressMaskTable` table with these values: Name=mgrN, `tgtAddressMask=255.255.255.255:0`.

An alternative to the above procedure is to set the `tgtAddressMask` column while you are creating other rows in the table.

➤ **To delete a Trusted Manager (not the final one), take this step:**

(The following procedure assumes that there is at least one configured read-write community. There are currently two or more Trusted Managers. The taglist for columns for all rows in the `srCommunityTable` are currently set to MGR. This procedure must be performed from one of the existing trusted managers, but not the one that is being deleted.

- Remove the appropriate row from the `snmpTargetAddrTable`.

The change takes effect immediately. The deleted trusted manager cannot access the device. The agent automatically removes the row in the `tgtAddressMaskTable`.

➤ **To delete the final Trusted Manager, take these 2 steps:**

(The following procedure assumes that there is at least one configured read-write community. There is currently only one Trusted Manager. The taglist for columns for all rows in the `srCommunityTable` are currently set to MGR. This procedure must be performed from the final Trusted Manager.

1. Set the value of the `TransportLabel` field on each row in the `srCommunityTable` to the empty string.
2. Remove the appropriate row from the `snmpTargetAddrTable`

The change takes effect immediately. All managers can now access the device.

11.6.3 SNMP Ports

The SNMP Request Port is 161 and the Trap Port is 162. These ports can be changed by setting parameters in the device *ini* file. The parameter name is:

SNMPPort = <port_number>
Valid UDP port number; default = 161

This parameter specifies the port number for SNMP requests and responses. Usually, it should not be specified. Use the default.

11.6.4 Multiple SNMP Trap Destinations

An agent can now send traps to up to five managers. For each manager, set the following parameters defined in the `snmpManagersTable` in the `acBoardMIB`:

- `snmpTrapManagerSending`
- `snmpManagerIsUsed`
- `snmpManagerTrapPort`
- `snmpManagerIP`

When `snmpManagerIsUsed` is set to zero (not used), the other three parameters are set to zero.

- `snmpManagerIsUsed` (Default = Disable(0))
The allowed values are 0 (disable or no) and 1 (enable or yes).
- `snmpManagerIp` (Default = 0.0.0.0)
This is known as `SNMPMANAGERTABLEIP` in the `ini` file and is the IP address of the manager.
- `SnmpManagerTrapPort` (Default = 162)
The valid port range for this is 100-4000.
- `snmpManagerTrapSendingEnable` (Default = Enable(1))
The allowed values are 0 (disable) and 1 (enable).



- Note 1:** Each of these MIB objects is independent and can be set regardless of the state of `snmpManagerIsUsed`.
- Note 2:** If the parameter `IsUsed` is set to 1, the IP address for that row should be supplied in the same SNMP PDU.

11.6.4.1 Configuration via the *ini* File

In the MP-1xx *ini* file, the parameters below can be set to enable or disable the sending of SNMP traps. Multiple trap destinations can be supported on the device by setting multiple trap destinations in the *ini* file.

`SNMPMANAGERTRAPSENDINGENABLE_<x>` = 0 or 1 indicates if traps are to be sent to the specified SNMP trap manager. A value of '1' means that it is enabled, while a value of '0' means disabled.

`<x>` = a number 0, 1, 2 which is the array element index. Currently, up to 5 SNMP trap managers can be supported.

Figure 11-1 presents an example of entries in a device *ini* file regarding SNMP. The device can be configured to send to multiple trap destinations. The lines in the file below are commented out with the ';' at the beginning of the line. All of the lines below are commented out since the first line character is a semi-colon.

Figure 11-1: Example of Entries in a Device *ini* file Regarding SNMP

```

; SNMP trap destinations
; The board maintains a table of trap destinations containing 5 ;rows. The rows are
; numbered 0..4. Each block of 4 items below ;apply to a row in the table.

; To configure one of the rows, uncomment all 4 lines in that ;block. Supply an IP
; address and if necessary, change the port ;number.
; To delete a trap destination, set ISUSED to 0.
; -change these entries as needed
;SNMPManagerTableIP_0=
;SNMPManagerTrapPort_0=162
;SNMPManagerIsUsed_0=1
;SNMPManagerTrapSendingEnable_0=1
;
;SNMPManagerTableIP_1=
;SNMPManagerTrapPort_1=162
;SNMPManagerIsUsed_1=1
;SNMPManagerTrapSendingEnable_1=1
;
;SNMPManagerTableIP_2=
;SNMPManagerTrapPort_2=162
;SNMPManagerIsUsed_2=1
;SNMPManagerTrapSendingEnable_2=1
;
;SNMPManagerTableIP_3=
;SNMPManagerTrapPort_3=162
;SNMPManagerIsUsed_3=1
;SNMPManagerTrapSendingEnable_3=1
;
;SNMPManagerTableIP_4=
;SNMPManagerTrapPort_4=162
;SNMPManagerIsUsed_4=1
;SNMPManagerTrapSendingEnable_4=1

```



Note: The same information configurable in the *ini* file can also be configured via the acBoardMIB.

11.6.4.2 Configuration via SNMP

To configure trap destinations, the EM must use the snmpTargetMIB. Up to 5 trap destinations can be configured.

➤ To add a trap destination:

- Add a row to the snmpTargetAddrTable with these values:
Name=trapN, TagList=AC_TRAP, Params=v2cparams, where N is an unused number between 0 and 4.

All changes to the trap destination configuration take effect immediately.

➤ To delete a trap destination:

- Remove the appropriate row from the snmpTargetAddrTable.

➤ To modify a trap destination:

(You can change the IP address and/or port number for an existing trap destination. The same effect can be achieved by removing a row and adding a new row).

- Modify the IP address and/or port number for the appropriate row in the snmpTargetAddrTable.
- **To disable a trap destination:**
 - Change TagList on the appropriate row in the snmpTargetAddrTable to the empty string.
- **To enable a trap destination:**
 - Change TagList on the appropriate row in the snmpTargetAddrTable to 'AC_TRAP'.

11.7 SNMP Manager Backward Compatibility

With support for the Multi Manager Trapping feature, the older acSNMPManagerIP MIB object, synchronized with the first index in the snmpManagers MIB table, is also supported. This is translated in two features:

- SET/GET to either of the two MIB objects is identical.
i.e., as far as the SET/GET are concerned OID 1.3.6.1.4.1.5003.9.10.1.1.2.7 is identical to OID 1.3.6.1.4.1.5003.9.10.1.1.2.21.1.1.3.
- When setting ANY IP to the acSNMPManagerIP (this is the older parameter, not the table parameter), two more parameters are SET to ENABLE. snmpManagerIsUsed.0 and snmpManagerTrapSendingEnable.0 are both set to 1.

11.8 AudioCodes' Element Management System

Using AudioCodes' Element Management System (EMS) is recommended to Customers requiring large deployments (multiple media gateways in globally distributed enterprise offices, for example), that need to be managed by central personnel.

The EMS is not included in the device's supplied package. Contact AudioCodes for detailed information on AudioCodes' EMS and on AudioCodes' EVN - Enterprise VoIP Network – solution for large VoIP deployments.

12 Selected Technical Specifications

Table 12-1: MP-1xx Selected Technical Specifications (continues on pages 191 to 193)

MP-1xx/FXS Functionality	
FXS Capabilities	Short or Long Haul: MP-10x/FXS: up to 15k feet (4,600 m) using 24 AWG line cord. up to 24k feet (7,300 m) using 26 AWG line cord. MP-124/FXS: up to 10k feet (3,000 m) using 24 AWG line cord.
	Note: The lines were tested under the following conditions: ring voltage greater than 30 Vrms, offhook loop current greater than 20 mA.
	MP-104 and MP-108 (<i>special order option</i> , using different assembly), includes lightning and high voltage protection for outdoor operation.
	Caller ID generation: Bellcore GR-30-CORE Type 1 using Bell 202 FSK modulation, ETSI Type 1, NTT, Denmark, India, Sweden, Brazil, British and DTMF ETSI CID (ETS 300-659-1).
	Programmable Line Characteristics: Battery feed, line current, hook thresholds, AC impedance matching, hybrid balance, Tx & Rx frequency response, Tx & Rx Gains.
	Programmable ringing signal. Up to three cadences and frequency 10 to 200 Hz.
	Drive up to 4 phones per port (total 32 phones) simultaneously in offhook and Ring states. MP-124 REN = 2 MP-10x REN = 5
	Over-temperature protection for abnormal situations as shorted lines.
	Loop-backs for testing and maintenance.
MP-10x/FXO Functionality	
FXO Capabilities (does not apply to MP-102 and MP-124)	Short or Long Haul up to 24k feet (7,300 m) using 24 AWG line cord.
	Includes lightning and high voltage protection for outdoor operation.
	Programmable Line Characteristics: AC impedance matching, hybrid balance, Tx & Rx frequency response, Tx & Rx Gains, ring detection threshold, DC characteristics.
	Caller ID detection: Bellcore GR-30-CORE Type 1 using Bell 202 FSK modulation, ETSI Type 1, NTT, Denmark, India, Sweden, Brazil, British and DTMF ETSI CID (ETS 300-659-1).
Voice & Tone Characteristics	
Voice Compression	G.711 PCM at 64 kbps μ -law/A-law (10, 20, 30, 40, 50, 60, 80, 100, 120 msec) G.723.1 MP-MLQ at 5.3 or 6.3 kbps (30, 60, 90, 120, 150 msec) G.726 at 32 kbps ADPCM (10, 20, 30, 40, 50, 60, 80, 100, 120 msec) G.729 CS-ACELP 8 Kbps Annex A / B (10, 20, 30, 40, 50, 60, 80, 100, 120 msec)
Silence Suppression	G.723.1 Annex A G.729 Annex B PCM and ADPCM - Standard Silence Descriptor (SID) with Proprietary Voice Activity Detection (VAD) and Comfort Noise Generation (CNG).
Packet Loss Concealment	G.711 appendix 1 G.723.1 G.729 a/b
Echo Canceler	G.165 and G.168 2000, 25 msec with extension to 40 msec
DTMF Transport (in-band)	Mute, transfer in RTP payload or relay in compliance with RFC 2833
DTMF Detection and Generation	Dynamic range 0 to -25 dBm, compliant with TIA 464B and Bellcore TR-NWT-000506.
Call Progress Tone Detection and Generation	16 tones: single tone or dual tones, programmable frequency & amplitude; 15 frequencies in the range 300 to 1980 Hz, 1 or 2 cadences per tone, up to 2 sets of ON/OFF periods.
Output Gain Control	-32 dB to +31 dB in steps of 1 dB
Input Gain Control	-32 dB to +31 dB in steps of 1 dB

Table 12-1: MP-1xx Selected Technical Specifications (continues on pages 191 to 193)

Fax and Modem Transport Modes	
Real time Fax Relay	Group 3 real-time fax relay up to 14400 bps with auto fallback Tolerant network delay (up to 9 seconds round trip delay) T.30 (PSTN) and T.38 (IP) compliant (real-time fax) CNG tone detection & Relay per T.38 Answer tone (CED or AnsAm) detection & Relay per T.38
Fax Transparency	Automatic fax bypass (pass-through) to G.711, ADPCM or NSE bypass mode
Modem Transparency	Automatic switching (pass-through) to PCM, ADPCM or NSE bypass mode for modem signals (V.34 or V.90 modem detection)
Protocols	
VoIP Signaling Protocol	SIP RFC 3261
Communication Protocols	RTP/RTCP packetization. IP stack (UDP, TCP, RTP). Remote Software load (TFTP & BootP, DHCP support).
Line Signaling Protocols	Loop start, FXS and FXO
Interfaces	
FXS Telephony Interface	2, 4, 8 or 24 Analog FXS phone or fax ports, loop start
FXO Telephony Interface	4 or 8 Analog FXO PSTN/PBX loop start ports
Network Interface	RJ-45 shielded connector, 10/100 Base-TX.
RS-232 Interface	RS-232 Terminal Interface for maintenance, diagnostic reports and code tracing. DB-9 connector on rear panel
Lifeline (MP-10x/FXS)	Lifeline provides a wired analog POTS phone connection to any PSTN or PBX FXS port when there is no power, or the network fails (refer to Section 3.4.1 on page 32 for details). Does NOT function with MP-124 and MP-10x/FXO gateways.
Connectors & Switches	
Rear Panel	
24 Analog Lines (MP-124)	50-pin Telco shielded connector
8 Analog Lines (MP-108)	8 RJ-11 connectors
4 Analog Lines (MP-104)	4 RJ-11 connectors
2 Analog Lines (MP-102)	2 RJ-11 connectors
Ethernet	10/100 Base-TX, RJ-45 shielded connector
RS-232	Console port - DB-9
Front Panel	
Reset	Resets the MP-1xx
Physical	
MP-10x Enclosure Dimensions	Width: 221 mm 8.7 in Height: 44.5 mm 1.75 in Depth: 240 mm 9.5 in Weight: 1.24 kg 2.5 lb
MP-124 Enclosure Dimensions	1U, 19-inch Rack Width: 445 mm 17.5 in Height: 44.5 mm 1.75 in Depth: 269 mm 10.6 in Weight: 2.24 kg 4.9 lb
Environmental	Operational: -5° to 55° C 23° to 131° F Storage: -40° to 70° C -40° to 158° F Humidity: 10 to 90% non-condensing
Installation	Desk-top, shelf, or 19-inch rack mount with side brackets.
Electrical	Universal 90-264 VAC, 1A, 47-63 Hz 2A for MP-124

Table 12-1: MP-1xx Selected Technical Specifications (continues on pages 191 to 193)

	MP-124 only, DC power supply 40-60 VDC, 2A
Type Approvals	
Telecommunication	FCC part 68 & CE CTR21, ASIF S003 (FXS)
Safety and EMC	UL 60950-1, FCC part 15 Class B CE Mark (EN 60950-1, EN 55022, EN 55024)
Management	
Configuration	Gateway configuration using Web browser, <i>ini</i> files or local RS-232 console
Management and Maintenance	SNMP v2c
	Syslog, per RFC 3164
	Local RS-232 terminal
	Web Management (via HTTP)

All specifications in this document are subject to change without prior notice.

Reader's Notes

Appendix A MP-1xx SIP Software Kit

Table A-1 describes the standard supplied software kit for MP-1xx FXS/FXO SIP gateways. The supplied documentation includes this User's Manual, the MP-1xx Fast Track and the MP-1xx SIP Release Notes.

Table A-1: MP-1xx SIP Supplied Software Kit

File Name	Description
Ram.cmp files	
MP124_SIP_xxx.cmp	Image file containing the software for the MP-124/FXS gateway.
MP108_SIP_xxx.cmp	Common Image file Image file containing the software for both MP-10x/FXS and MP-10x/FXO gateways.
ini files and utilities	
SIPgw_MP124.ini	Sample <i>ini</i> file for MP-124/FXS gateway.
SIPgw_fxs_MP108.ini	Sample <i>ini</i> file for MP-108/FXS gateways.
SIPgw_fxo_MP108.ini	Sample <i>ini</i> file for MP-108/FXO gateways.
SIPgw_fxs_MP104.ini	Sample <i>ini</i> file for MP-104/FXS gateways.
SIPgw_fxo_MP104.ini	Sample <i>ini</i> file for MP-104/FXO gateways.
SIPgw_fxs_MP102.ini	Sample <i>ini</i> file for MP-102/FXS gateways.
Usa_tones_xx.dat	Default loadable Call Progress Tones <i>dat</i> file.
Usa_tones_xx.ini	Call progress Tones <i>ini</i> file (used to create <i>dat</i> file).
MP1xx_Coeff_FXS.dat	Telephony interface configuration file for MP-1xx/FXS gateways.
MP10x_Coeff_FXO.dat	Telephony interface configuration file for MP-10x/FXO gateways.
DConvert240.exe	TrunkPack Downloadable Conversion Utility
ACSyslog08.exe	Syslog server.
bootp.exe	BootP/TFTP configuration utility
CPTWizard.exe	Call Progress Tones Wizard
MIBs Files	MIB library for SNMP browser

Reader's Notes

Appendix B The BootP/TFTP Configuration Utility

The BootP/TFTP utility enables you to easily configure and provision our boards and media gateways. Similar to third-party BootP/TFTP utilities (which are also supported) but with added functionality; our BootP/TFTP utility can be installed on Windows™ 98 or Windows™ NT/2000/XP. The BootP/TFTP utility enables remote reset of the device to trigger the initialization procedure (BootP and TFTP). It contains BootP and TFTP utilities with specific adaptations to our requirements.

B.1 When to Use the BootP/TFTP

The BootP/TFTP utility can be used with the device as an alternative means of initializing the gateways. Initialization provides a gateway with an IP address, subnet mask, and the default gateway IP address. The tool also loads default software, *ini* and other configuration files. BootP Tool can also be used to restore a gateway to its initial configuration, such as in the following instances:

- The IP address of the gateway is not known.
- The Web browser has been inadvertently turned off.
- The Web browser password has been forgotten.
- The gateway has encountered a fault that cannot be recovered using the Web browser.

**Tip:**

The BootP is normally used to configure the device's initial parameters. Once this information has been provided, the BootP is no longer needed. All parameters are stored in non-volatile memory and used when the BootP is not accessible.

B.2 An Overview of BootP

BootP is a protocol defined in RFC 951 and RFC 1542 that enables an internet device to discover its own IP address and the IP address of a BootP on the network, and to obtain the files from that utility that need to be loaded into the device to function.

A device that uses BootP when it powers up broadcasts a BootRequest message on the network. A BootP on the network receives this message and generates a BootReply. The BootReply indicates the IP address that should be used by the device and specifies an IP address from which the unit may load configuration files using Trivial File Transfer Protocol (TFTP) described in RFC 906 and RFC 1350.

B.3 Key Features

- Internal BootP supporting hundreds of entities.
- Internal TFTP.
- Contains all required data for our products in predefined format.
- Provides a TFTP address, enabling network separation of TFTP and BootP utilities.
- Tools to backup and restore the local database.
- Templates.
- User-defined names for each entity.
- Option for changing MAC address.

- Protection against entering faulty information.
- Remote reset.
- Unicast BootP response.
- User-initiated BootP respond, for remote provisioning over WAN.
- Filtered display of BootP requests.
- Location of other BootP utilities that contain the same MAC entity.
- Common log window for both BootP and TFTP sessions.
- Works with Windows™ 98, Windows™ NT, Windows™ 2000 and Windows™ XP.

B.4 Specifications

- BootP standards: RFC 951 and RFC 1542
- TFTP standards: RFC 1350 and RFC 906
- Operating System: Windows™ 98, Windows™ NT, Windows™ 2000 and Windows™ XP
- Max number of MAC entries: 200

B.5 Installation

➤ To install the BootP/TFTP on your computer, take these 2 steps:

1. Locate the BootP folder on the VoIP gateway supplied CD ROM and open the file Setup.exe.
2. Follow the prompts from the installation wizard to complete the installation.

➤ To open the BootP/TFTP, take these 2 steps:

1. From the **Start** menu on your computer, navigate to **Programs** and then click on **BootP**.
2. The first time that you run the BootP/TFTP, the program prompts you to set the user preferences. Refer to the Section B.10 on page 201 for information on setting the preferences.

B.6 Loading the *cmp* File, Booting the Device

Once the application is running, and the preferences were set (refer to Section B.10), for each unit that is to be supported, enter parameters into the tool to set up the network configuration information and initialization file names. Each unit is identified by a MAC address. For information on how to configure (add, delete and edit) units refer to Section B.11 on page 203.


➤ To load the software and configuration files, take these 4 steps:

1. Create a folder on your computer that contains all software and configuration files that are needed as part of the TFTP process.
2. Set the BootP and TFTP preferences (refer to Section B.10).
3. Add client configuration for the VoIP gateway that you want to initialize by the BootP, refer to Section B.11.1.
4. Reset the VoIP gateway, either physically or remotely, causing the device to use BootP to access the network and configuration information.

B.7 BootP/TFTP Application User Interface

Figure B-1 shows the main application screen for the BootP/TFTP utility.

Figure B-1: Main Screen

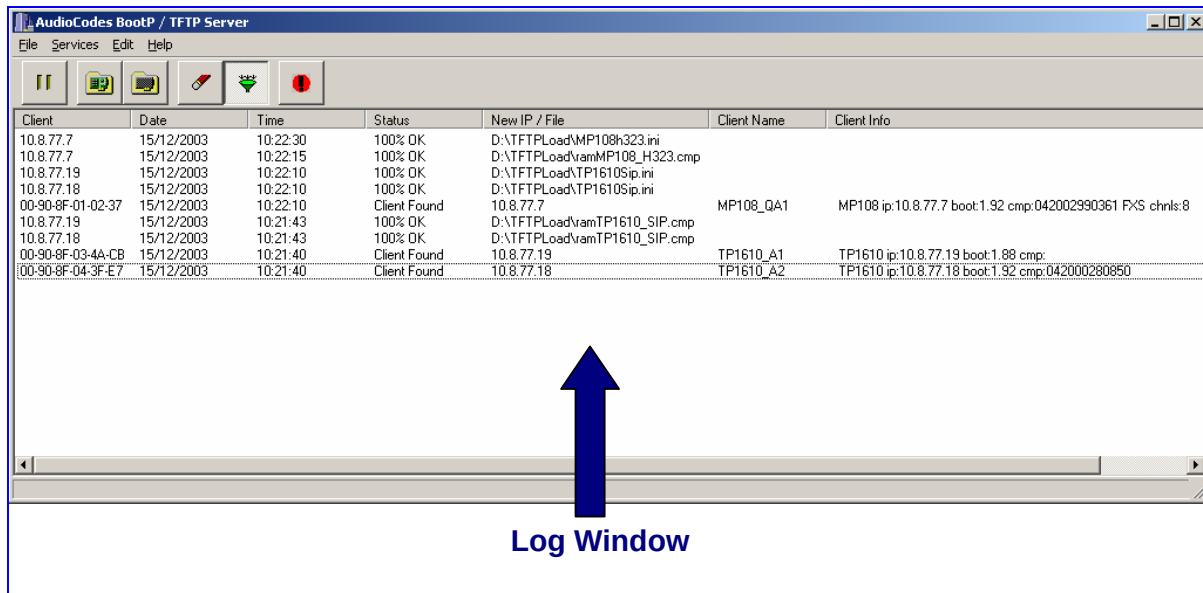

B.8 Function Buttons on the Main Screen



Pause: Click this button to pause the BootP Tool so that no replies are sent to BootP requests. Click the button again to restart the BootP Tool so that it responds to all BootP requests. The **Pause** button provides a depressed graphic when the feature is active.



Edit Clients: Click this button to open a new window that enables you to enter configuration information for each supported VoIP gateway. Details on the Clients window are provided in Section B.11 on page 203.



Edit Templates: Click this button to open a new window that enables you to create or edit standard templates. These templates can be used when configuring new clients that share most of the same settings. Details on the **Templates** window are provided in Section B.12 on page 207.



Clear Log: Click this button to clear all entries from the Log Window portion of the main application screen. Details on the log window are provided in Section B.9 on page 200.




Filter Clients: Click this button to prevent the BootP Tool from logging BootP requests received from disabled clients or from clients which do not have entries in the Clients table.



Reset: Click this button to open a new window where you enter an IP address requests for a gateway that you want to reset. Refer to Figure B-2 below.

Figure B-2: Reset Screen

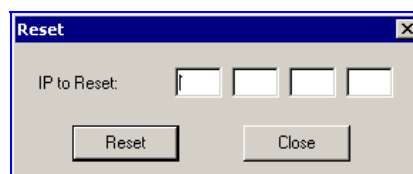

When a gateway resets, it first sends a BootRequest. Therefore, Reset can be used to force a BootP session with a gateway without needing to power cycle the gateway. As with any BootP session, the computer running the BootP Tool must be located on the same subnet as the controlled VoIP gateway.

B.9 Log Window

The log window (refer to [Figure B-1](#) on the previous page) records all BootP request and BootP reply transactions, as well as TFTP transactions. For each transaction, the log window displays the following information:

- **Client:** shows the Client address of the VoIP gateway, which is the MAC address of the client for BootP transactions or the IP address of the client for TFTP transactions.
- **Date:** shows the date of the transaction, based on the internal calendar of the computer.
- **Time:** shows the time of day of the transaction, based on the internal clock of the computer.
- **Status:** indicates the status of the transaction.
 - *Client Not Found:* A BootRequest was received but there is no matching client entry in the BootP Tool.
 - *Client Found:* A BootRequest was received and there is a matching client entry in the BootP Tool. A BootReply is sent.
 - *Client's MAC Changed:* There is a client entered for this IP address but with a different MAC address.
 - *Client Disabled:* A BootRequest was received and there is a matching client entry in the BootP tool but this entry is disabled.
 - *Listed At:* Another BootP utility is listed as supporting a particular client when the Test Selected Client button is clicked (for details on Testing a client refer to [Section B.11.4](#) on page 204).
 - *Download Status:* Progress of a TFTP load to a client, shown in %.
- **New IP / File:** shows the IP address applied to the client as a result of the BootP transaction, as well as the file name and path of a file transfer for a TFTP transaction.
- **Client Name:** shows the client name, as configured for that client in the Client Configuration screen.

Use right-click on a line in the Log Window to open a pop-up window with the following options:

- **Reset:** Selecting this option results in a reset command being sent to the client VoIP gateway. The program searches its database for the MAC address indicated in the line. If the client is found in that database, the program adds the client MAC address to the Address Resolution Protocol (ARP) table for the computer. The program then sends a reset command to the client. This enables a reset to be sent without knowing the current IP address of the client, as long as the computer sending the reset is on the same subnet.
Note: In order to use reset as described above, the user must have administrator privileges on the computer. Attempting to perform this type of reset without administrator privileges on the computer results in an error message. **ARP Manipulation Enable** must also be turned on in the **Preferences** window.
- **View Client:** Selecting this option, or double clicking on the line in the log window, opens the **Client Configuration** window. If the MAC address indicated on the line exists in the client database, it is highlighted. If the address is not in the client database, a new client is added with the MAC address filled out. You can enter data in the remaining fields to create a new client entry for that client.

B.10 Setting the Preferences

The Preferences window, [Figure B-3](#), is used to configure the BootP Tool parameters.

Figure B-3: Preferences Screen

The Preferences window is a standard Windows-style dialog box. It is divided into two main panes. The left pane is titled 'BootP Server' and contains three sub-sections: 'ARP Manipulation Enabled' with a checked checkbox, 'Reply Type' with radio buttons for 'Broadcast' (selected) and 'Unicast', and 'ARP Type' with radio buttons for 'Dynamic' (selected) and 'Static'. Below these is a text field for 'Number of Timed Replies' containing the value '0'. The right pane is titled 'TFTP Server' and contains: 'Enabled' with a checked checkbox, 'On Interface' with a dropdown menu showing '0: 10.13.2.66', 'Directory' with a text field showing 'D:\' and a browse button, 'Boot File Mask' with a text field showing '*.cmp', 'INI File Mask' with a text field showing '*.ini', 'Timeout' with a text field showing '5', and 'Maximum Retransmissions' with a text field showing '10'. At the bottom right are 'OK' and 'Cancel' buttons.

B.10.1 BootP Preferences

ARP is a common acronym for Address Resolution Protocol, and is the method used by all Internet devices to determine the link layer address, such as the Ethernet MAC address, in order to route Datagrams to devices that are on the same subnet.

When ARP Manipulation is enabled on this screen, the BootP Tool creates an ARP cache entry on your computer when it receives a BootP BootRequest from the VoIP gateway. Your computer uses this information to send messages to the VoIP gateway without using ARP again. This is particularly useful when the gateway does not yet have an IP address and, therefore, cannot respond to an ARP.

Because this feature creates an entry in the computer ARP cache, Administrator Privileges are required. If the computer is not set to allow administrator privileges, ARP Manipulation cannot be enabled.

- **ARP Manipulation Enabled:** Enable ARP Manipulation to remotely reset a gateway that does not yet have a valid IP address.

If ARP Manipulation is enabled, the following two commands are available.

- **Reply Type:** Reply to a BootRequest can be either **Broadcast** or **Unicast**. The default for the BootP Tool is **Broadcast**. In order for the reply to be set to **Unicast**, ARP Manipulation must first be enabled. This then enables the BootP Tool to find the MAC address for the client in the ARP cache so that it can send a message directly to the requesting device. Normally, this setting can be left at **Broadcast**.

- **ARP Type:** The type of entry made into the ARP cache on the computer, once **ARP Manipulation** is enabled, can be either **Dynamic** or **Static**. Dynamic entries expire after a period of time, keeping the cache clean so that stale entries do not consume computer resources. The Dynamic setting is the default setting and the setting most often used. Static entries do not expire.
- **Number of Timed Replies:** This feature is useful for communicating to VoIP gateways that are located behind a firewall that would block their BootRequest messages from getting through to the computer that is running the BootP Tool. You can set this value to any whole digit. Once set, the BootP Tool can send that number of BootReply messages to the destination immediately after you send a remote reset to a VoIP gateway at a valid IP address. This enables the replies to get through to the VoIP gateway even if the BootRequest is blocked by the firewall. To turn off this feature, set the **Number of Timed Replies** = 0.

B.10.2 TFTP Preferences

- **Enabled:** To enable the TFTP functionality of the BootP Tool, check the box beside this heading. If you want to use another TFTP application, other than the one included with the BootP Tool, unselect the box.
- **On Interface:** This pull down menu displays all network interfaces currently available on the computer. Select the interface that you want to use for the TFTP. Normally, there is only one choice.
- **Directory:** This option is enabled only when the TFTP is enabled. Use this parameter to specify the folder that contains the files for the TFTP utility to manage (*cmp*, *ini*, Call Progress Tones, etc.).
- **Boot File Mask:** Boot File Mask specifies the file extension used by the TFTP utility for the boot file that is included in the BootReply message. This is the file that contains VoIP gateway software and normally appears as *cmp*.
- **ini File Mask:** *ini* File mask specifies the file extension used by the TFTP utility for the configuration file that is included in the BootReply message. This is the file that contains VoIP gateway configuration parameters and normally appears as *ini*.
- **Timeout:** This specifies the number of seconds that the TFTP utility waits before retransmitting TFTP messages. This can be left at the default value of 5 (the more congested your network, the higher the value you should define in these fields).
- **Maximum Retransmissions:** This specifies the number of times that the TFTP utility tries to resend messages after timing out. This can be left at the default value of 10 (the more congested your network, the higher the value you should define in these fields).

B.11 Configuring the BootP Clients

The Clients window, shown in [Figure B-4](#) below, is used to set up the parameters for each specific VoIP gateway.

Figure B-4: Client Configuration Screen

MAC	Name	IP
00-90-8F-10-22-33		10.8.201.120
00-90-8F-55-42-21		10.8.201.1
00-90-8F-64-64-12		10.8.201.10

Client MAC: 00-90-8F-64-64-12 ☒

Client Name:

Template:

IP: 10.8.201.10 ☐

Subnet: 255.255.0.0 ☐

Gateway: 10.8.0.1 ☐

TFTP Server IP: 10.8.1.21 ☐

Boot File: xxx.cmp ☐

INI File: xxx.ini ☐

Buttons: OK, Apply, Apply & Reset

B.11.1 Adding Clients

Adding a client creates an entry in the BootP Tool for a specific gateway.

➤ **To add a client to the list without using a template, take these 3 steps:**

1. Click on the **Add New Client** icon; a client with blank parameters is displayed. 
2. Enter values in the fields on the right side of the window, using the guidelines for the fields in [Section B.11.5](#) on page 205.
3. Click **Apply** to save this entry to the list of clients, or click **Apply & Reset** to save this entry to the list of clients and send a reset message to that gateway to immediately implement the settings.

Note: To use **Apply & Reset** you must enable **ARP Manipulation** in the **Preferences** window. Also, you must have administrator privileges for the computer you are using.

An easy way to create several clients that use similar settings is to create a template. For information on how to create a template refer to [Section B.12](#) on page 207.

➤ **To add a client to the list using a template, take these 5 steps:**

1. Click on the **Add New Client** icon; a client with blank parameters is displayed. 
2. In the field **Template**, located on the right side of the **Client Configuration Window**, click on the down arrow to the right of the entry field and select the template that you want to use.
3. The values provided by the template are automatically entered into the parameter fields on the right side of the **Client Configuration Window**. To use the template parameters, leave the check box next to that parameter selected. The parameter values appear in gray text.
4. To change a parameter to a different value, unselect the check box to the right of that parameter. This clears the parameter provided by the template and enables you to edit the entry. Clicking the check box again restores the template settings.
5. Click **Apply** to save this entry to the list of clients or click **Apply & Reset** to save this entry to the list of clients and send a reset message to that gateway to immediately implement the settings.
Note: To use **Apply & Reset** you must enable **ARP Manipulation** in the **Preferences** window. Also, you must have administrator privileges for the computer you are using.

B.11.2 Deleting Clients

➤ **To delete a client from the BootP Tool, take these 3 steps:**

1. Select the client that you wish to delete by clicking on the line in the window for that client.
2. Click the **Delete Current Client** button 
3. A warning pops up. To delete the client, click **Yes**.

B.11.3 Editing Client Parameters

➤ **To edit the parameters for an existing client, take these 4 steps:**

1. Select the client that you wish to edit by clicking on the line in the window for that client.
2. Parameters for that client display in the parameter fields on the right side of the window.
3. Make the changes required for each parameter.
4. Click **Apply** to save the changes, or click **Apply & Reset** to save the changes and send a reset message to that gateway to immediately implement the settings.
Note: To use **Apply & Reset** you must enable **ARP Manipulation** in the **Preferences** window. Also, you must have administrator privileges for the computer you are using.

B.11.4 Testing the Client

There should only be one BootP utility supporting any particular client MAC active on the network at any time.

➤ **To check if other BootP utilities support this client, take these 4 steps:**

1. Select the client that you wish to test by clicking on the client name in the main area of the **Client Configuration Window**. 
2. Click the **Test Selected Client** button
3. Examine the Log Window on the Main Application Screen. If there is another BootP utility that supports this client MAC, there is a response indicated from that utility showing the status Listed At along with the IP address of that utility.
4. If there is another utility responding to this client, you must remove that client from either this utility or the other one.

B.11.5 Setting Client Parameters

Client parameters are listed on the right side of the **Client Configuration Window**.

- Client MAC:** The Client MAC is used by BootP to identify the VoIP gateway. The MAC address for the VoIP gateway is printed on a label located on the VoIP gateway hardware. Enter the Ethernet MAC address for the VoIP gateway in this field. Click the box to the right of this field to enable this particular client in the BootP tool (if the client is disabled, no replies are sent to BootP requests).
Note: When the MAC address of an existing client is edited, a new client is added, with the same parameters as the previous client.
- Client Name:** Enter a descriptive name for this client so that it is easier to remember which VoIP gateway the record refers to. For example, this name could refer to the location of the gateway.
- Template:** Click the pull down arrow if you wish to use one of the templates that you configured. This applies the parameters from that template to the remaining fields. Parameter values that are applied by the template are indicated by a check mark in the box to the right of that parameter. Uncheck this box if you want to enter a different value. If templates are not used, the box to the right of the parameters is colored gray and is not selectable.
- IP:** Enter the IP address you want to apply to the VoIP gateway. Use the normal dotted decimal format.
- Subnet:** Enter the subnet mask you want to apply to the VoIP gateway. Use the normal dotted decimal format. Ensure that the subnet mask is correct. If the address is incorrect, the VoIP gateway may not function until the entry is corrected and a BootP reset is applied.
- Gateway:** Enter the IP address for the data network gateway used on this subnet that you want to apply to the VoIP gateway. The data network gateway is a device, such as a router, that is used in the data network to interface this subnet to the rest of the enterprise network.
- TFTP Server IP:** This field contains the IP address of the TFTP utility that is used for file transfer of software and initialization files to the gateway. When creating a new client, this field is populated with the IP address used by the BootP Tool. If a different TFTP utility is to be used, change the IP address in this field to the IP address used by the other utility.
- Boot File:** This field specifies the file name for the software (*cmp*) file that is loaded by the TFTP utility to the VoIP gateway after the VoIP gateway receives the BootReply message. The actual software file is located in the TFTP utility directory that is specified in the BootP Preferences window. The software file can be followed by command line switches. For information on available command line switches refer to Section B.11.6 on page 206.



Note 1: Once the software file loads into the gateway, the gateway begins functioning from that software. In order to save this software to non-volatile memory, (only the *cmp* file, i.e., the compressed firmware file, can be burned to your device's flash memory), the -fb flag must be added to the end of the file name. If the file is not saved, the gateway reverts to the old version of software after the next reset.

Note 2: The **Boot file** field can contain up to two file names: *cmp* file name to be used for load of application image and *ini* file name to be used for gateway provisioning. Either one, two or no file names can appear in the **Boot file** field. To use both file names use the ";" separator (without blank spaces) between the *xxx.cmp* and the *yyy.ini* files (e.g., *ram.cmp;SIPgw.ini*).

- ini File:** This field specifies the configuration *ini* file that the gateway uses to program its various settings. Enter the name of the file that is loaded by the TFTP utility to the VoIP gateway after it receives the BootReply message. The actual *ini* file is located in the TFTP utility directory that is specified in the BootP Preferences window.
- Call Agent:** This field specifies the IP address of the MGCP Call Agent that is controlling the gateway. This field can be ignored for all other control/signaling protocols.

B.11.6 Using Command Line Switches

You can add command line switches in the field **Boot File**.

➤ To use a Command Line Switch, take these 4 steps:

1. In the field **Boot File**, leave the file name defined in the field as it is (e.g., *ramxxx.cmp*).
2. Place your cursor after *cmp*.
3. Press the space bar.
4. Type in the switch you require.

Example: "*ramxxx.cmp -fb*" to burn flash memory.

"*ramxxx.cmp -fb -em 4*" to burn flash memory and for Ethernet Mode 4 (auto-negotiate).

Table B-1 lists and describes the switches that are available:


Table B-1: Command Line Switch Descriptions

Switch	Description
-fb	Burn <i>ram.cmp</i> in flash (only for <i>cmp</i> files)
-em #	Use this switch to set Ethernet mode. 0 = 10 Base-T half-duplex 1 = 10 Base-T full-duplex 2 = 100 Base-TX half-duplex 3 = 100 Base-TX full-duplex 4 = auto-negotiate (default) Auto-negotiate falls back to half-duplex mode when the opposite port is not in auto-negotiate but the speed (10 Base-T or 100 Base-TX) in this mode is always configured correctly.
-br	BootP retries. Sets the number of BootP requests the device sends during start-up. The device stops sending BootP requests when either BootP reply is received or Number of Retries is reached. This switch takes effect only from the next device reset. 1 = 1 BootP retry, 1 second 2 = 2 BootP retries, 3 seconds 3 = 3 BootP retries, 6 seconds 4 = 10 BootP retries, 30 seconds 5 = 20 BootP retries, 60 seconds 6 = 40 BootP retries, 120 seconds 7 = 100 BootP retries, 300 seconds 15 = BootP retries indefinitely
-bd	BootP delays. Sets the interval between the device's start-up and the first BootP/DHCP request that is issued by the device. The switch only takes effect from the next reset of the device. 1 = 1 second delay (default). 2 = 10 second delay. 3 = 30 second delay. 4 = 60 second delay. 5 = 120 second delay.
-bs	Use -bs 1 to enable the Selective BootP mechanism. Use -bs 0 to disable the Selective BootP mechanism. The Selective BootP mechanism enables the gateway's integral BootP client to filter unsolicited BootP/DHCP replies (accepts only BootP replies that contain the text "AUDC" in the vendor specific information field). This option is useful in environments where enterprise BootP/DHCP servers provide undesired responses to the gateway's BootP requests.
-be	Use -be 1 for the device to send device-related initial startup information (such as board type, current IP address, software version, etc.) in the vendor specific information field (in the BootP request). This information can be viewed in the main screen of the BootP/TFTP, under column 'Client Info' (refer to Figure B-1 showing BootP/TFTP main screen with the column 'Client Info' on the extreme right). For a full list of the vendor specific Information fields refer to Section 10.3.2 on page 176. Note: This option is not available on DHCP servers.

B.12 Managing Client Templates

Templates can be used to simplify configuration of clients when most of the parameters are the same.

Figure B-5: Templates Screen

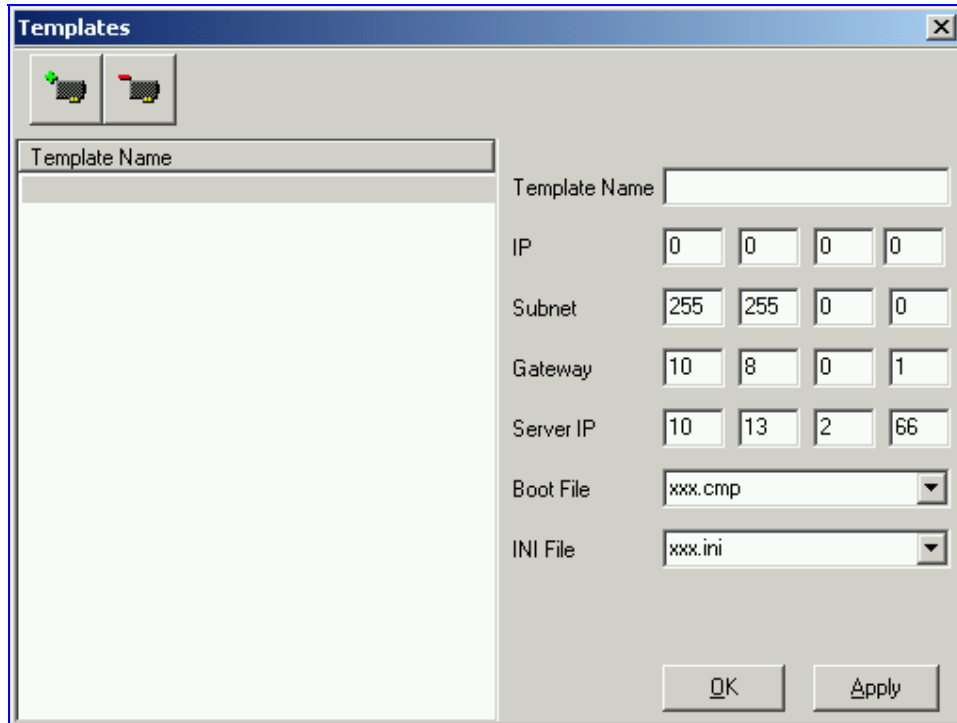

➤ **To create a new template, take these 4 steps:**

1. Click on the **Add New Template** button 
2. Fill in the default parameter values in the parameter fields.
3. Click **Apply** to save this new template.
4. Click **OK** when you are finished adding templates.

➤ **To edit an existing template, take these 4 steps:**

1. Select the template by clicking on its name from the list of templates in the window.
2. Make changes to the parameters, as required.
3. Click **Apply** to save this new template.
4. Click **OK** when you are finished editing templates.

➤ **To delete an existing template, take these 3 steps:**

1. Select the template by clicking its name from the list of templates in the window.
2. Click on the **Delete Current Template** button. 
3. A warning pop up message appears. To delete the template, click **Yes**.
Note that if this template is currently in use, the template cannot be deleted.

Reader's Notes

Appendix C RTP/RTCP Payload Types and Port Allocation

RTP Payload Types are defined in RFC 1889 and RFC 1890. We have added new payload types to enable advanced use of other coder types. These types are reportedly not used by other applications.

C.1 Packet Types Defined in RFC 1890

Table C-1: Packet Types Defined in RFC 1890

Payload Type	Description	Basic Packet Rate [msec]
0	G.711 μ -Law	10,20
2	G.726-32	10,20
4	G.723 (6.3/5.3 kbps)	30
8	G.711 A-Law	10,20
18	G.729A	20
200	RTCP Sender Report	Randomly, approximately every 5 seconds (when packets are sent by channel)
201	RTCP Receiver Report	Randomly, approximately every 5 seconds (when channel is only receiving)
202	RTCP SDES packet	
203	RTCP BYE packet	
204	RTCP APP packet	

C.2 Defined Payload Types

Table C-2: Defined Payload Types

Payload Type	Description	Basic Packet Rate [msec]
35	G.726 32 kbps	20
36	G.726 24 kbps	20
38	G.726 40 kbps	20
39	G.727 16 kbps	20
40	G.727 24-16 kbps	20
41	G.727 24 kbps	20
42	G.727 32-16 kbps	20
43	G.727 32-24 kbps	20
44	G.727-32 kbps	20
45	G.727 40-16 kbps	20
46	G.727 40-24 kbps	20
47	G.727 40-32 kbps	20
51	NetCoder 6.4 kbps	20
52	NetCoder 7.2 kbps	20
53	NetCoder 8.0 kbps	20
54	NetCoder 8.8 kbps	20
56	Transparent PCM	20
96	RFC 2833 DTMF relay	20
102	Fax Bypass	20
103	Modem Bypass	20
104	RFC 2198 (Redundancy)	Same as channel's voice coder.
105	NSE Bypass	

C.3 Default RTP/RTCP/T.38 Port Allocation

The following table shows the Default RTP/RTCP/T.38 Port Allocation.

Table C-3: Default RTP/RTCP/T.38 Port Allocation

Channel Number	RTP Port	RTCP Port	T.38 Port
1	4000	4001	4002
2	4010	4011	4012
3	4020	4021	4022
4	4030	4031	4032
5	4040	4041	4042
6	4050	4051	4052
7	4060	4061	4062
8	4070	4071	4072
9	4080	4081	4082
10	4090	4091	4092
11	4100	4101	4102
12	4110	4111	4112
13	4120	4121	4122
14	4130	4131	4132
15	4140	4141	4142
16	4150	4151	4152
17	4160	4161	4162
18	4170	4171	4172
19	4180	4181	4182
20	4190	4191	4192
21	4200	4201	4202
22	4210	4211	4212
23	4220	4221	4222
24	4230	4231	4232



Note: To configure the gateway to use the same port for both RTP and T.38 packets, set the parameter 'T38UseRTPPort' to 1.

Appendix D Fax & Modem Transport Modes

D.1 Fax/Modem Settings

Users may choose to use one of the following transport methods for fax and for each modem type (V.22/V.23/Bell/V.32/V.34):

- **Fax relay** demodulation / modulation
- **Bypass** using a high bit rate coder to pass the signal
- **Transparent** passing the signal in the current voice coder

When the fax relay mode is enabled, distinction between fax and modem is not immediately possible at the beginning of a session. The channel is therefore in "Answer Tone" mode until a distinction is determined. The packets being sent to the network at this stage are T.38-complaint fax relay packets.

D.2 Configuring Fax Relay Mode

When faxTransportType= 1 (relay mode), then on detection of fax the channel automatically switches from the current voice coder to answer tone mode, and then to T.38-compliant fax relay mode.

When fax transmission has ended, the reverse switching from fax relay to voice is performed. This mode switching automatically occurs at both the local and remote endpoints.

Users can limit the fax rate using the FaxRelayMaxRate parameter and can enable/disable ECM fax mode using the FaxRelayECMEnable parameter.

When using T.38 mode, the User can select between two protection strategies – redundancy packets or forward error correction (FEC). This selection is made using the T38FaxRelayProtectionMode configuration parameter. The User can also control a special (proprietary) redundancy mode that was specially designed to improve protection against packet loss using the EnhancedFaxRelayRedundancyDepth parameter. Although this is a proprietary redundancy scheme, it is compatible with other T.38 decoders. The depth of the redundancy (that is, the number of repetitions) is defined by the FaxRelayRedundancyDepth configuration parameter.



Note: T.38 mode currently supports only the T.38 UDP syntax.

D.3 Configuring Fax/Modem Bypass Mode

When VxxTransportType= 2 (FaxModemBypass, Vxx can be one of the following: V32/V22/Bell/V34/Fax), then on detection of fax/modem, the channel automatically switches from the current voice coder to a high bit-rate coder, as defined by the User, with the FaxModemBypassCoderType configuration parameter.

During the bypass period, the coder uses the packing factor (by which a number of basic coder frames are combined together in the outgoing WAN packet) set by the User in the FaxModemBypassM configuration parameter. The network packets generated and received during the bypass period are regular voice RTP packets (per the selected bypass coder) but with a different RTP Payload type.

When fax/modem transmission ends, the reverse switching, from bypass coder to regular voice coder, is carried out.

D.4 Supporting V.34 Faxes

V.34 faxes don't comply with the T.38 relay standard. We therefore provide the optional modes described under Sections [D.4.1](#) and [D.4.2](#):

Note that the CNG detector is disabled (CNGDetectorMode=0) in all the following examples.

D.4.1 Using Bypass Mechanism for V.34 Fax Transmission

In this proprietary scenario, the media gateway uses a high bit-rate coder to transmit V.34 faxes, enabling the full utilization of its speed.

Refer to the following configurations:

```
FaxTransportMode = 2 (Bypass)
V34ModemTransportType = 2 (Modem bypass)
V32ModemTransportType = 2
V23ModemTransportType = 2
V22ModemTransportType = 2
```

In this configuration, both T.30 and V.34 faxes work in Bypass mode.

Or

```
FaxTransportMode = 1 (Relay)
V34ModemTransportType = 2 (Modem bypass)
V32ModemTransportType = 2
V23ModemTransportType = 2
V22ModemTransportType = 2
```

In this configuration, T.30 fax uses T.38 Relay mode while V.34 fax uses Bypass mode.

D.4.2 Using Relay mode for both T.30 and V.34 faxes

In this scenario, V.34 fax machines are compelled to use their backward compatibility with T.30 faxes; as a T.30 machine, the V.34 fax can use T.38 Relay mode.

Refer to the following configuration:

```
FaxTransportMode = 1 (Relay)
V34ModemTransportType = 0 (Transparent)
V32ModemTransportType = 0
V23ModemTransportType = 0
V22ModemTransportType = 0
```

Both T.30 and V.34 faxes use T.38 Relay mode. This configuration forces the V.34 fax machine to operate in the slower T.30 mode.

Appendix E Customizing the MP-1xx Web Interface

Customers incorporating the MP-1xx into their portfolios can customize the Web Interface to suit their specific corporate logo and product naming conventions.

Customers can customize the Web Interface's title bar (AudioCodes' title bar is shown in [Figure E-1](#); a customized title bar is shown in [Figure E-3](#)).

Figure E-1: User-Customizable Web Interface Title Bar

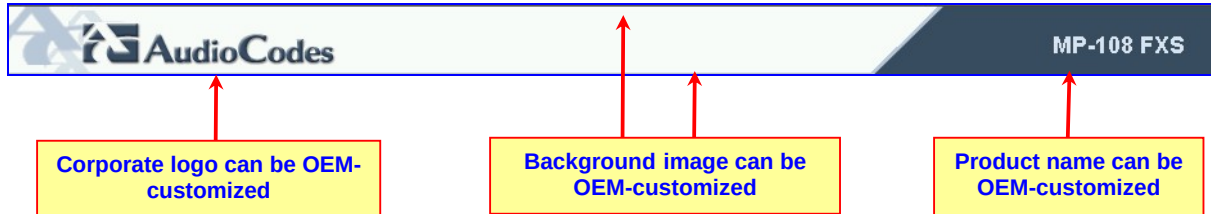


Figure E-2: Customized Web Interface Title Bar



➤ **To customize the title bar via the Web Interface, take these 3 steps:**

1. Replace the main corporate logo (refer to [Section E.1](#) below).
2. Replace the title bar's background image file (refer to [Section E.2](#) on page 215).
3. Customize the product's name (refer to [Section E.3](#) on page 216).

E.1 Replacing the Main Corporate Logo

The main corporate logo can be replaced either with a different logo image file (refer to [Section E.1.1](#) below) or with a text string (refer to [Section E.1.2](#) on page 215). Note that when the main corporation logo is replaced, AudioCodes' logo on the left bar (refer to [Figure 5-2](#)) and in the Software Upgrade Wizard ([Section 5.11.1](#) on page 131) disappear.

Also note that the browser's title bar is automatically updated with the string assigned to the WebLogoText parameter when AudioCodes' default logo is not used.

E.1.1 Replacing the Main Corporate Logo with an Image File



Note:

Use a gif, jpg or jpeg file for the logo image. It is important that the image file has a fixed height of 59 pixels (the width can be configured). The combined size of the image files (logo and background) is limited to 64 kbytes.

➤ **To replace the default logo with your own corporate image via the Web Interface, take these 7 steps:**

1. Access the MP-1xx Embedded Web Server (refer to [Section 5.5](#) on page 40).
2. In the URL field, append the suffix 'AdminPage' (note that it's case-sensitive) to the IP address, e.g., <http://10.1.229.17/AdminPage>.

3. Click **Image Load to Device**; the Image Download screen is displayed (shown in [Figure E-3](#)).

Figure E-3: Image Download Screen

Send "Logo Image" file from your computer to the device

Send "Background Image" file from your computer to the device

Logo width

This button restores the default images

Important!

Use the 'Save Configuration' Link in order to save loaded images to flash memory

4. Click the **Browse** button in the **Send Logo Image File from your computer to the device** box. Navigate to the folder that contains the logo image file you want to load.
5. Click the **Send File** button; the file is sent to the device. When loading is complete, the screen is automatically refreshed and the new logo image is displayed.
6. Note the appearance of the logo. If you want to modify the width of the logo (the default width is 339 pixels), in the **Logo Width** field, enter the new width (in pixels) and press the **Set Logo Width** button.
7. To save the image to flash memory so it is available after a power fail refer to [Section 5.12](#) on page [139](#).

The new logo image appears on all Web Interface screens.



Tip: If you encounter any problem during the loading of the files, or you want to restore the default images, click the **Restore Default Images** button.

➤ **To replace the default logo with your own corporate image via the *ini* file, take these 2 steps:**

1. Place your corporate logo image file in the same folder as where the device's *ini* file is located (i.e., the same location defined in the BootP/TFTP configuration utility). For detailed information on the BootP/TFTP, refer to [Appendix B](#) on page [197](#).
2. Add/modify the two *ini* file parameters in [Table E-1](#) according to the procedure described in [Section 6.2](#) on page [141](#).

Note that loading the device's *ini* file via the 'Configuration File' screen in the Web Interface doesn't load the corporate logo image files as well.

Table E-1: Customizable Logo *ini* File Parameters

Parameter	Description
LogoFileName	The name of the image file containing your corporate logo. Use a gif, jpg or jpeg image file. The default is AudioCodes' logo file. Note: The length of the name of the image file is limited to 47 characters.
LogoWidth	Width (in pixels) of the logo image. Note: The optimal setting depends on the resolution settings. The default value is 339, which is the width of AudioCodes' displayed logo.

E.1.2 Replacing the Main Corporate Logo with a Text String

The main corporate logo can be replaced with a text string.

- To replace AudioCodes' default logo with a text string *via the Web Interface*, modify the two *ini* file parameters in [Table E-2](#) according to the procedure described in [Section E.4](#) on page 217.
- To replace AudioCodes' default logo with a text string *via the ini file*, add/modify the two *ini* file parameters in [Table E-2](#) according to the procedure described in [Section 6.2](#) on page 141.

Table E-2: Web Appearance Customizable *ini* File Parameters

Parameter	Description
UseWebLogo	0 = Logo image is used (default). 1 = Text string is used instead of a logo image.
WebLogoText	Text string that replaces the logo image. The string can be up to 15 characters.

E.2 Replacing the Background Image File

The background image file is duplicated across the width of the screen. The number of times the image is duplicated depends on the width of the background image and screen resolution. When choosing your background image, keep this in mind.



Note: Use a gif, jpg or jpeg file for the background image. It is important that the image file has a fixed height of 59 pixels. The combined size of the image files (logo and background) is limited to 64 kbytes.

➤ To replace the background image via the Web, take these 6 steps:

- Access the MP-1xx Embedded Web Server (refer to [Section 5.5](#) on page 40).
- In the URL field, append the suffix 'AdminPage' (note that it's case-sensitive) to the IP address, e.g., <http://10.1.229.17/AdminPage>.
- Click the **Image Load to Device**, the Image load screen is displayed (shown in [Figure E-3](#)).
- Click the **Browse** button in the **Send Background Image File from your computer to gateway** box. Navigate to the folder that contains the background image file you want to load.
- Click the **Send File** button; the file is sent to the device. When loading is complete, the screen is automatically refreshed and the new background image is displayed.
- To save the image to flash memory so it is available after a power fail refer to [Section 5.12](#) on page 139.

The new background appears on all Web Interface screens.



- Tip 1:** If you encounter any problem during the loading of the files, or you want to restore the default images, click the **Restore Default Images** button.
- Tip 2:** When replacing both the background image and the logo image, first load the logo image followed by the background image.

➤ **To replace the background image via the *ini* file, take these 2 steps:**

1. Place your background image file in the same folder as where the device's *ini* file is located (i.e., the same location defined in the BootP/TFTP configuration utility). For detailed information on the BootP/TFTP, refer to [Appendix B](#) on page 197.
2. Add/modify the *ini* file parameters in [Table E-3](#) according to the procedure described in [Section 6.2](#) on page 141.

Note that loading the device's *ini* file via the 'Configuration File' screen in the Web Interface doesn't load the logo image file as well.

Table E-3: Customizable Logo *ini* File Parameters

Parameter	Description
BkgImageFileName	The name (and path) of the file containing the new background. Use a gif, jpg or jpeg image file. The default is AudioCodes background file. Note: The length of the name of the image file is limited to 47 characters.

E.3 Customizing the Product Name

The Product Name text string can be modified according to OEMs specific requirements.

- To replace AudioCodes' default product name with a text string *via the Web Interface*, modify the two *ini* file parameters in [Table E-4](#) according to the procedure described in [Section E.4](#) on page 217.
- To replace AudioCodes' default product name with a text string *via the ini file*, add/modify the two *ini* file parameters in [Table E-4](#) according to the procedure described in [Section 6.2](#) on page 141.

Table E-4: Web Appearance Customizable *ini* File Parameters

Parameter	Description
UseProductName	0 = Don't change the product name (default). 1 = Enable product name change.
UserProductName	Text string that replaces the product name. The default is "MP-1xx". The string can be up to 29 characters.

E.4 Modifying *ini* File Parameters via the Web AdminPage

➤ To modify *ini* file parameters via the AdminPage, take these 6 steps:

1. Access the MP-1xx Embedded Web Server (refer to Section 5.5 on page 40).
2. In the URL field, append the suffix 'AdminPage' (note that it's case-sensitive) to the IP address, e.g., <http://10.1.229.17/AdminPage>.
3. Click the **INI Parameters** option, the INI Parameters screen is displayed (shown in Figure E-4).

Figure E-4: INI Parameters Screen

4. In the **Parameter Name** dropdown list, select the required *ini* file parameter.
5. In the **Enter Value** field to the right, enter the parameter's new value.
6. Click the **Apply new value** button to the right; the INI Parameters screen is refreshed, the parameter name with the new value appears in the fields at the top of the screen and the **Output Window** displays a log displaying information on the operation.



Note: You cannot load the image files (e.g., logo/background image files) to the device by choosing a file name parameter in this screen.

Reader's Notes

Appendix F Accessory Programs and Tools

The accessory applications and tools shipped with the device provide you with friendly interfaces that enhance device usability and smooth your transition to the new VoIP infrastructure. The following applications are available:


- TrunkPack Downloadable Conversion Utility (refer to Section F.1 below).
- Call Progress Tones Wizard (refer to Section F.1.3 on page 222).

F.1 TrunkPack Downloadable Conversion Utility

Use the TrunkPack Downloadable Conversion Utility to:

- Create a loadable Call Progress Tones file (refer to Section F.1.1 on page 220).
- Encode / decode an *ini* file (refer to Section F.1.2 on page 221).
- Create a loadable Prerecorded Tones file (refer to Section F.1.3 on page 222).

Figure F-1: TrunkPack Downloadable Conversion Utility Opening Screen

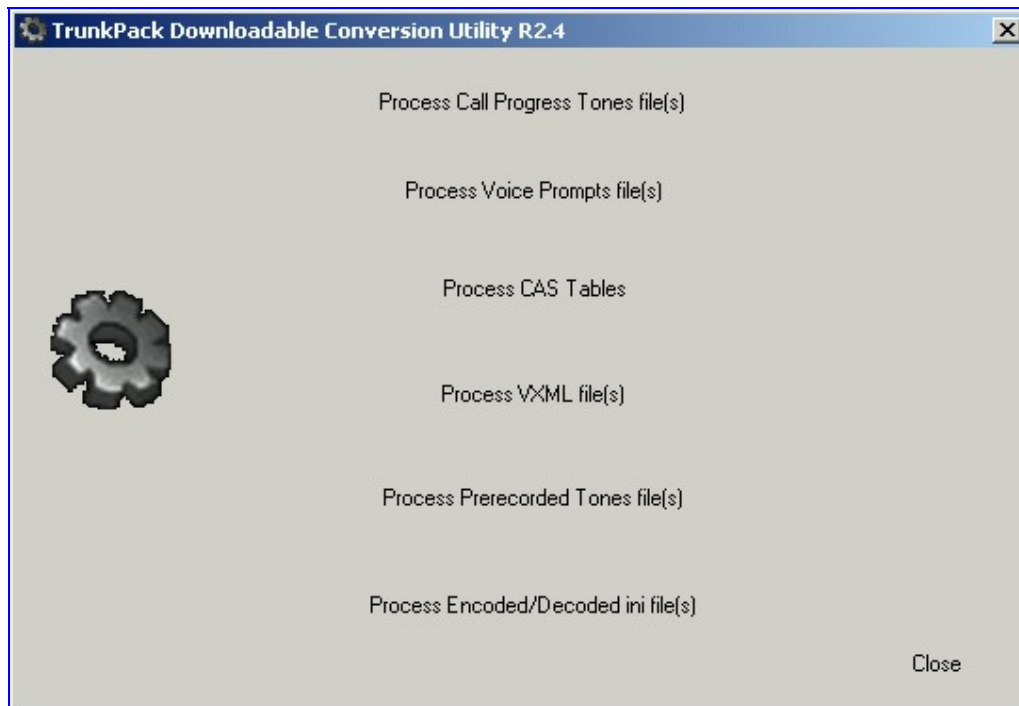


F.1.1 Converting a CPT *ini* File to a Binary *dat* File

For detailed information on creating a CPT *ini* file refer to Section 7.1 on page 143.

➤ To convert a CPT *ini* file to a binary *dat* file, take these 10 steps:

1. Execute the TrunkPack Downloadable Conversion Utility, DConvert240.exe (supplied with the software package); the utility's main screen opens (shown in Figure F-1).
2. Click the **Process Call Progress Tones File(s)** button; the 'Call Progress Tones' screen, shown in Figure F-2, opens.

Figure F-2: Call Progress Tones Conversion Screen

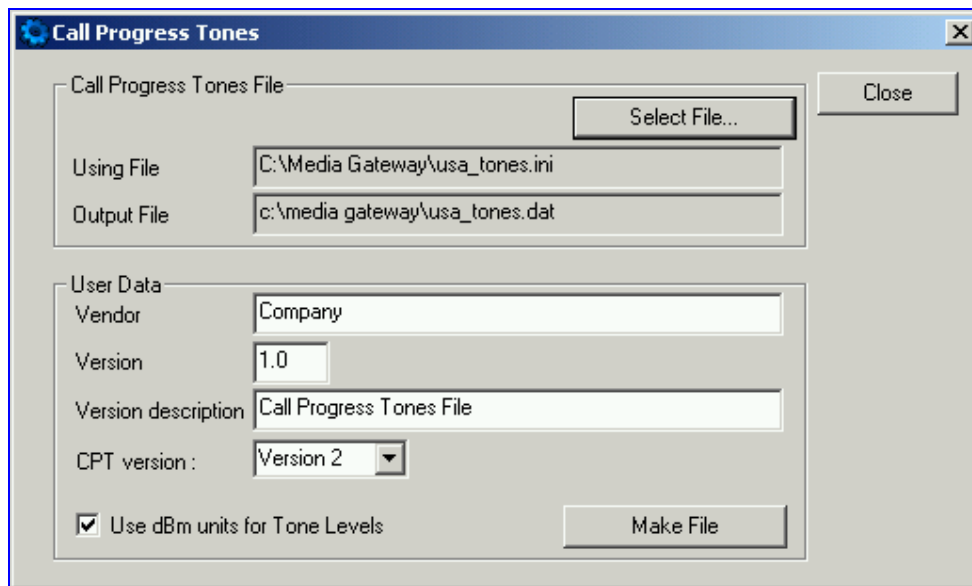

3. Click the **Select File...** button that is in the 'Call Progress Tone File' box.
4. Navigate to the folder that contains the CPT *ini* file you want to convert.
5. Click the *ini* file and click the **Open** button; the name and path of both the *ini* file and the (output) *dat* file appears in the fields below the Select File button.
6. Enter the Vendor Name, Version Number and Version Description in the corresponding required fields under the 'User Data' section.
7. Set 'CPT Version' to 'Version 1' only if you use this utility with a version released before version 4.4 of the device software (this field is used to maintain backward compatibility).
8. Check the 'Use dBm units for Tone Levels' check box. Note that the levels of the Call Progress Tones (in the CPT file) must be in -dBm units.
9. Click the **Make File** button; you're prompted that the operation (conversion) was successful.
10. Close the application.


F.1.2 Encoding / Decoding an *ini* File

For detailed information on secured *ini* file refer to Section 6.1 on page 141.

➤ To encode an *ini* file, take these 6 steps:

1. Execute the TrunkPack Downloadable Conversion Utility, DConvert240.exe (supplied with the software package); the utility's main screen opens (shown in Figure F-1).
2. Click the **Process Encoded/Decoded *ini* file(s)** button; the 'Encode/Decode *ini* File(s)' screen, shown in Figure F-3, opens.

Figure F-3: Encode/Decode *ini* File(s) Screen

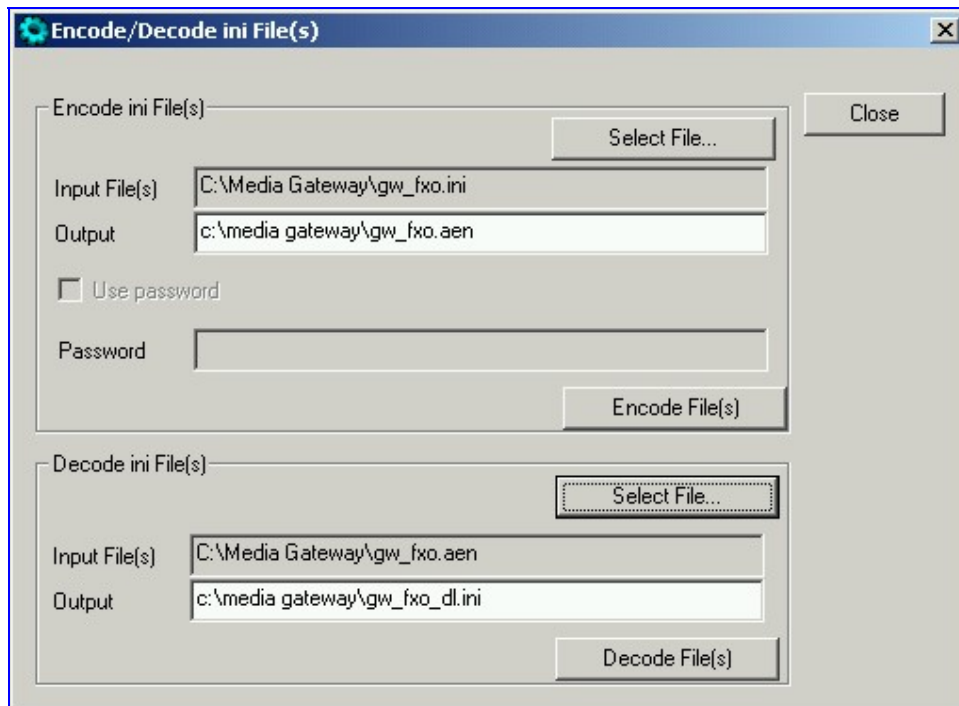

3. Click the **Select File...** button under the 'Encode *ini* File(s)' section.
4. Navigate to the folder that contains the *ini* file you want to encode.
5. Click the *ini* file and click the **Open** button; the name and path of both the *ini* file and the output encoded file appear in the fields under the **Select File** button. Note that the name and extension of the output file can be modified.
6. Click the **Encode File(s)** button; an encoded *ini* file with the name and extension you specified is created.

➤ To decode an encoded *ini* file, take these 4 steps:

1. Click the **Select File...** button under the 'Decode *ini* File(s)' section.
2. Navigate to the folder that contains the file you want to decode.
3. Click the file and click the **Open** button. the name and path of both the encode *ini* file and the output decoded file appear in the fields under the **Select File** button. Note that the name of the output file can be modified.
4. Click the **Decode File(s)** button; a decoded *ini* file with the name you specified is created.

Note that the decoding process verifies the input file for validity. Any change made to the encoded file causes an error and the decoding process is aborted.


F.1.3 Creating a Loadable Prerecorded Tones File

For detailed information on the PRT file refer to Section 7.2 on page 147.

➤ **To create a loadable PRT *dat* file from your raw data files, take these 7 steps:**

1. Prepare the prerecorded tones (raw data PCM or L8) files you want to combine into a single *dat* file using standard recording utilities.
2. Execute the TrunkPack Downloadable Conversion utility, DConvert240.exe (supplied with the software package); the utility's main screen opens (shown in Figure F-1).
3. Click the **Process Prerecorded Tones File(s)** button; the Prerecorded Tones File(s) screen, shown in Figure F-4, opens.


Figure F-4: Prerecorded Tones Screen

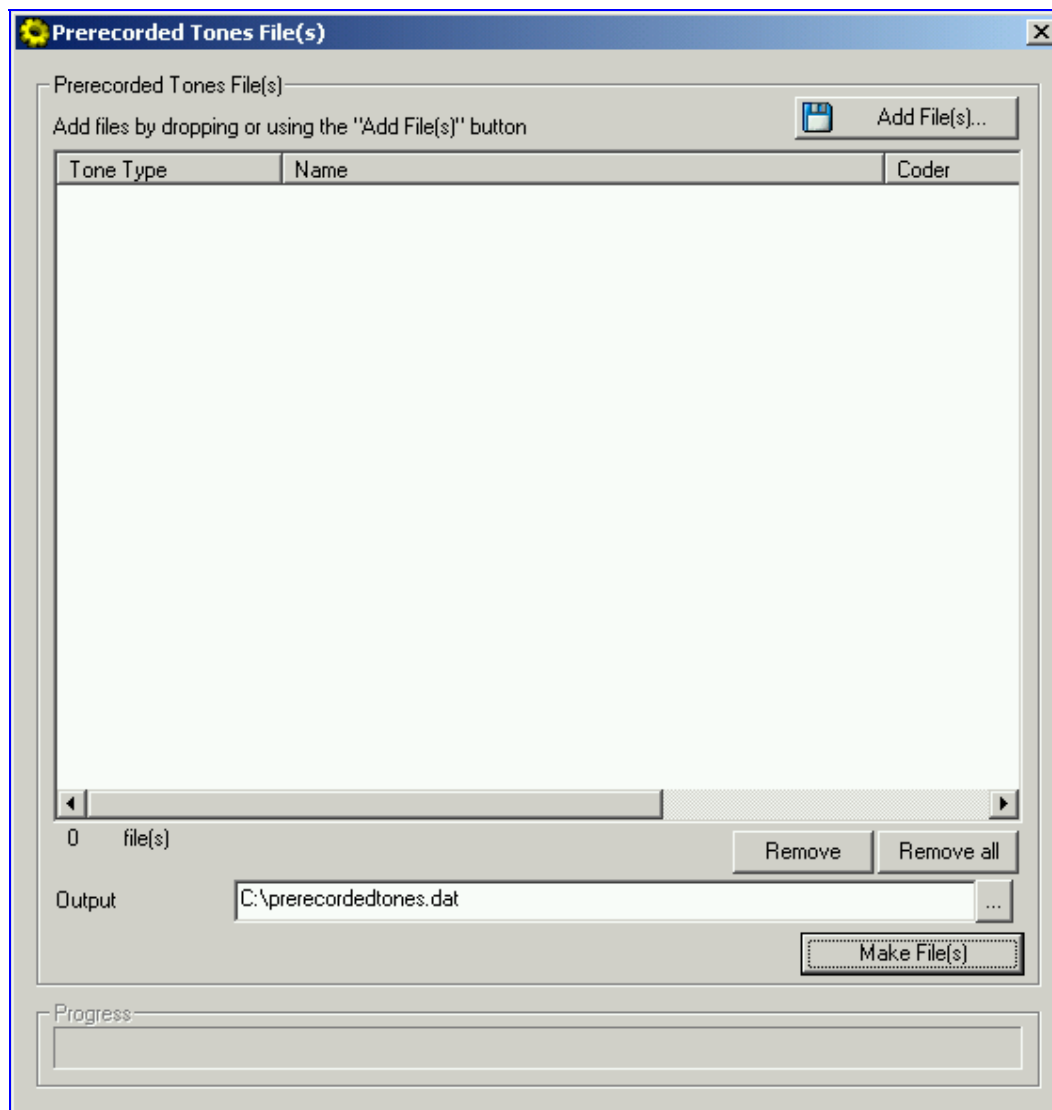

4. To add the prerecorded tone files (you created in Step 1) to the 'Prerecorded Tones' screen follow one of these procedures:
 - Select the files and drag them to the 'Prerecorded Tones' screen.

- Click the **Add File(s)** button; the 'Select Files' screen opens. Select the required Prerecorded Tone files and press the **Add>>** button. Close the 'Select Files' screen.
5. For each raw data file, define a Tone Type, a Coder and a Default Duration by completing the following steps:
- Double-click or right-click the required file; the 'File Data' window (shown in Figure F-5) appears.
 - From the 'Type' drop-down list, select the tone type this raw data file is associated with.
 - From the 'Coder' drop-down list, select the coder that corresponds to the coder this raw data file was *originally* recorded with.
 - In the 'Description' field, enter additional identifying information (optional).
 - In the 'Default' field, enter the default duration this raw data file is repeatedly played.
 - Close the 'File Data' window (press the **Esc** key to cancel your changes); you are returned to the Prerecorded Tones File(s) screen.

Figure F-5: File Data Window

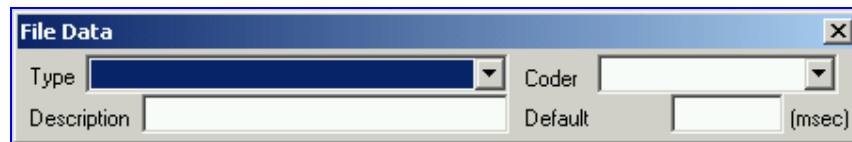

6. In the 'Output' field, specify the output directory in which the PRT file is generated followed by the name of the PRT file (the default name is *prerecordedtones.dat*). Alternatively, use the Browse button to select a different output file. Navigate to the desired file and select it; the selected file name and its path appear in the 'Output' field.
7. Click the **Make File(s)** button; the Progress bar at the bottom of the window is activated. The *dat* file is generated and placed in the directory specified in the 'Output' field. A message box informing you that the operation was successful indicates that the process is completed.

F.2 Call Progress Tones Wizard

This section describes the Call Progress Tones Wizard (CPTWizard), an application designed to facilitate the provisioning of an MP-1xx/FXO gateway by recording and analyzing Call Progress Tones generated by any PBX or telephone network.

F.2.1 About the Call Progress Tones Wizard

The Call Progress Tones wizard helps detect the Call Progress Tones generated by your PBX (or telephone exchange) and creates a basic Call Progress Tones *ini* file (containing definitions for all relevant Call Progress Tones), providing a good starting point when configuring an MP-1xx/FXO gateway. This *ini* file can then be converted to a *dat* file that can be loaded to the gateway using the TrunkPack Downloadable Conversion utility.

To use this wizard, an MP-1xx/FXO gateway connected to your PBX with 2 physical phone lines is required. This gateway must be configured with factory-default settings and shouldn't be used for phone calls during the operation of the wizard.

Note that firmware version 4.2 and above is required on the gateway.

F.2.2 Installation

The CPTWizard can be installed on any Windows 2000 or Windows XP based PC. Windows-compliant networking and audio peripherals are required for full functionality.


To install the CPTWizard, copy the files from the supplied installation kit to any folder on your PC. No further setup is required (approximately 5 MB of hard disk space are required).

F.2.3 Initial Settings

➤ To start the CPTWizard, take these 5 steps:

1. Execute the CPTWizard.exe file; the wizard's initial settings screen is displayed.

Figure F-6: Initial Settings Screen

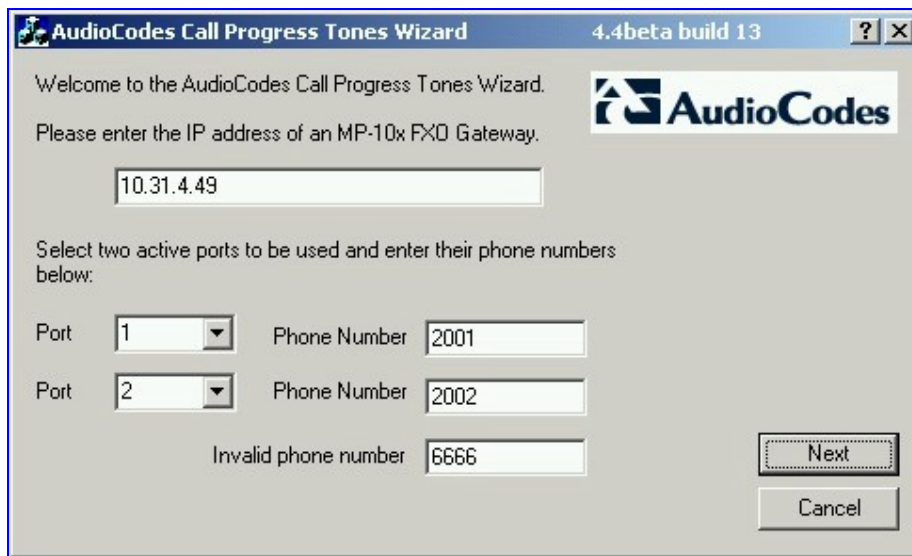

2. Enter the IP address of the MP-1xx/FXO gateway you are using.

3. Select the gateway's ports that are connected to your PBX, and specify the phone number of each extension.
4. In the **Invalid phone number** field, enter a number that generates a "fast busy" tone when dialed. Usually, any incorrect phone number should cause a "fast busy" tone.
5. Press **Next**.




Note: The CPTWizard communicates with the MP-10x/FXO gateway via TPNCP (TrunkPack Network Control Protocol). If this protocol has been disabled in the gateway configuration, the CPTWizard doesn't display the next screen and an error is reported.

F.2.4 Recording Screen – Automatic Mode

After the connection to the MP-1xx/FXO gateway is established, the recording screen is displayed.

Figure F-7: Recording Screen –Automatic Mode

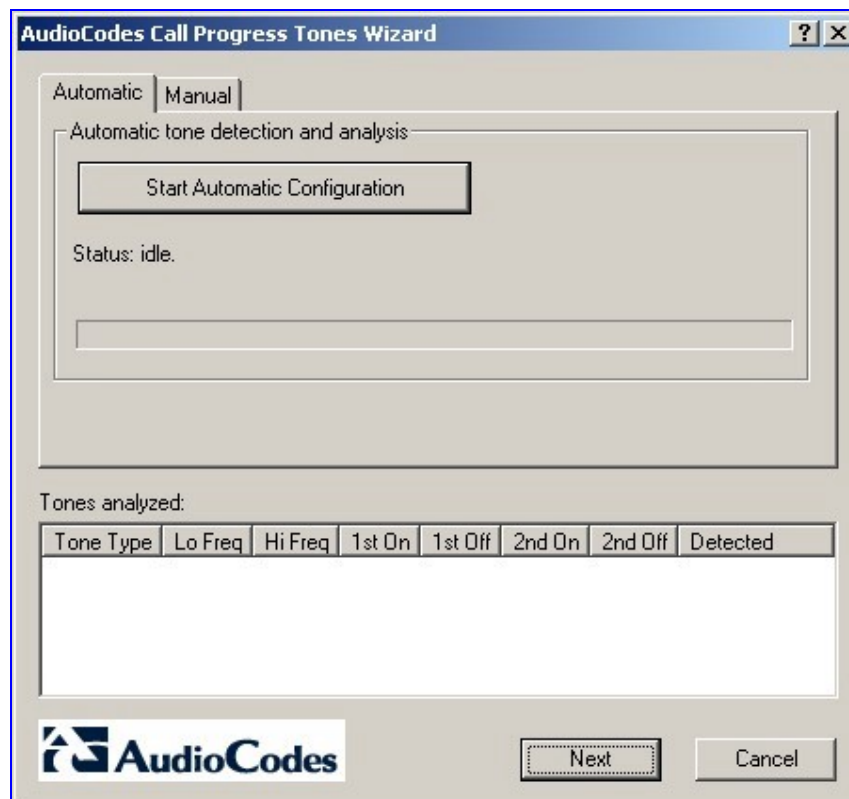


➤ To start recording in automatic mode:

Press the **Start Automatic Configuration** button; the wizard starts the following Call Progress Tones detection sequence (the operation takes approximately 60 seconds to complete):

1. Sets port 1 offhook, listens to the dial tone
2. Sets port 1 and port 2 offhook, dials the number of port 2, listens to the busy tone
3. Sets port 1 offhook, dials the number of port 2, listens to the Ringback tone
4. Sets port 1 offhook, dials an invalid number, listens to the reorder tone

5. The wizard then analyzes the recorded Call Progress Tones and displays a message specifying the tones that were detected (by the gateway) and analyzed (by the wizard) correctly. At the end of a successful detection operation, the detected Call Progress Tones are displayed in the **Tones Analyzed** pane (refer to Figure F-8).

Figure F-8: Recording Screen after Automatic Detection

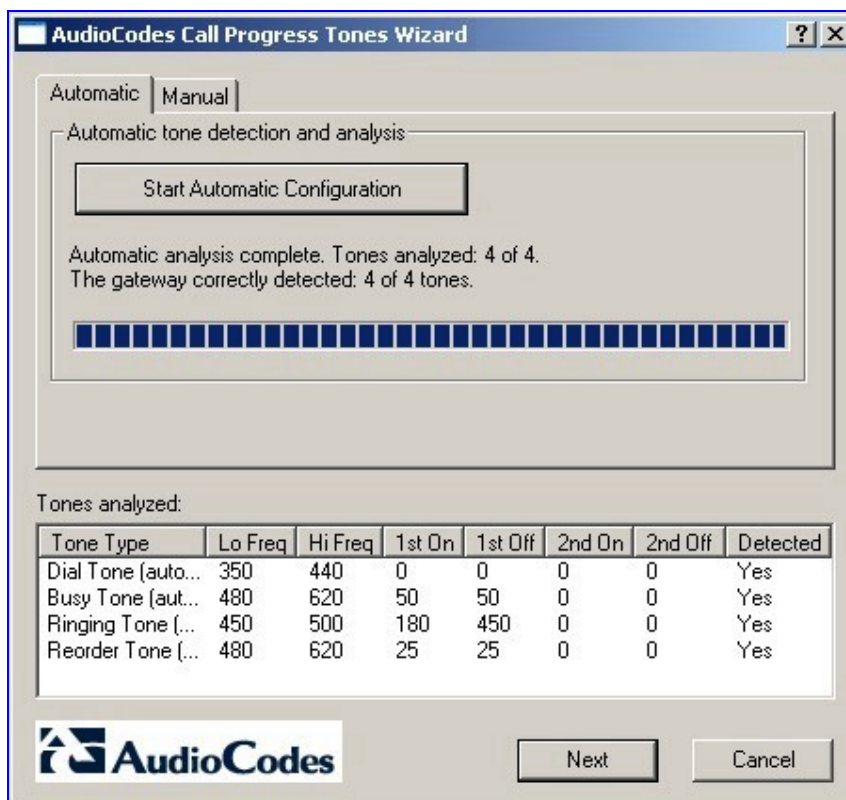

6. All four Call Progress Tones are saved (as standard A-law PCM at 8000 bits per sample) in the same directory as the CPTWizard.exe file is located, with the following names:
 - cpt_recorded_dialtone.pcm
 - cpt_recorded_busytone.pcm
 - cpt_recorded_rington.pcm
 - cpt_recorded_invalidtone.pcm



- Note 1:** If the gateway is configured correctly (with a Call Progress Tones *dat* file loaded to the gateway), all four Call Progress Tones are detected by the gateway. By noting whether the gateway detects the tones or not, you can determine how well the Call Progress Tones *dat* file matches your PBX. During the first run of the CPTWizard, it is likely that the gateway does not detect any tones.
- Note 2:** Some tones cannot be detected by the MP-10x gateway hardware (such as 3-frequency tones and complex cadences). CPTWizard is therefore limited to detecting only those tones that can be detected on the MP-10x gateway.

At this stage, you can either press **Next** to generate a Call Progress Tones *ini* file and terminate the wizard, or continue to manual recording mode.

F.2.5 Recording Screen – Manual Mode


In manual mode you can record and analyze tones, included in the Call Progress Tones *ini* file, in

addition to those tones analyzed when in automatic mode.

➤ **To start recording in manual mode, take these 6 steps:**

1. Press the **Manual** tab at the top of the recording screen, the manual recording screen is displayed.

Figure F-9: Recording Screen - Manual Mode

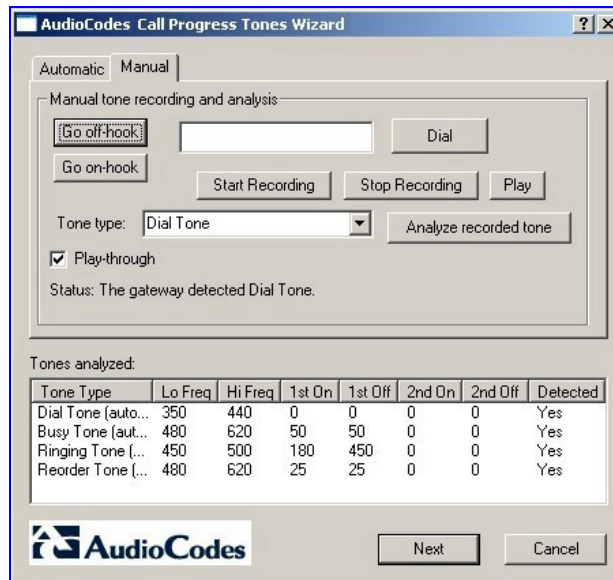

2. Check the **play-through** check box to hear the tones through your PC speakers.
3. Press the **Go offhook** button, enter a number to dial in the **Dial** field, and press the **Dial** button. When you're ready to record, press the **Start Recording** button; when the desired tone is complete, press **Stop Recording**. (The recorded tone is saved as "cpt_manual_tone.pcm".)



Note: Due to some PC audio hardware limitations, you may hear "clicks" in play-through mode. It is safe to ignore these clicks.

4. Select the tone type from the drop-down list and press **Analyze recorded tone**; the analyzed tone is added to the **Tones analyzed** list at the bottom of the screen. It is possible to record and analyze several different tones for the same tone type (e.g., different types of "busy" signal).
5. Repeat the process for more tones, as necessary.
6. When you're finished adding tones to the list, press **Next** to generate a Call Progress Tones *ini* file and terminate the wizard.

F.2.6 The Call Progress Tones *ini* File

After the Call Progress Tones detection is complete, a text file named `call_progress_tones.ini` is created in the same directory as the directory in which the `CPTWizard.exe` is located. This file contains:

- Information about each tone that was recorded and analyzed by the wizard. This information includes frequencies and cadence (on/off) times, and is required for using this file with the TrunkPack Downloadable Conversion utility.

Figure F-10: Call Progress Tone Properties

```
[CALL PROGRESS TONE #1]
Tone Type=1
Low Freq [Hz]=350
High Freq [Hz]=440
Low Freq Level [-dBm]=0
High Freq Level [-dBm]=0
First Signal On Time [10msec]=0
First Signal Off Time [10msec]=0
Second Signal On Time [10msec]=0
Second Signal Off Time [10msec]=0
```

- Information related to possible matches of *each* tone with the CPTWizard's internal database of well-known tones. This information is specified as comments in the file, and is ignored by the TrunkPack Downloadable Conversion utility.

Figure F-11: Call Progress Tone Database Matches

```
# Recorded tone: Busy Tone (automatic configuration)
## Matches: PBX name=ITU Anguilla, Tone name=Busy tone
## Matches: PBX name=ITU Antigua and Barbuda, Tone name=Busy tone
## Matches: PBX name=ITU Barbados, Tone name=Busy tone
## Matches: PBX name=ITU Bermuda, Tone name=Busy tone
## Matches: PBX name=ITU British Virgin Islan, Tone name=Busy tone
## Matches: PBX name=ITU Canada, Tone name=Busy tone
## Matches: PBX name=ITU Dominica (Commonweal, Tone name=Busy tone
## Matches: PBX name=ITU Hongkong, China, Tone name=Busy tone
## Matches: PBX name=ITU Jamaica, Tone name=Busy tone
## Matches: PBX name=ITU Korea (Republic of), Tone name=Busy tone
## Matches: PBX name=ITU Montserrat, Tone name=Busy tone
```

- Information related to matches of *all* tones recorded with the CPTWizard's internal database. The database is scanned to find one or more PBX definitions that match all recorded tones (i.e., dial tone, busy tone, ringing tone, reorder tone and any other manually-recorded tone – all match the definitions of the PBX). If a match is found, the entire PBX definition is reported (as comments) in the *ini* file using the same format.

Figure F-12: Full PBX/Country Database Match

```
## Some tones matched PBX/country Audc US
## Additional database tones guessed below (remove #'s to use).
#
# # Audc US, US Ringback tone
# [CALL PROGRESS TONE #5]
# Tone Type=2
# Low Freq [Hz]=450
# High Freq [Hz]=500
# Low Freq Level [-dBm]=0
# High Freq Level [-dBm]=0
# First Signal On Time [10msec]=180
# First Signal Off Time [10msec]=450
# Second Signal On Time [10msec]=0
# Second Signal Off Time [10msec]=0
```



- Note 1:** If a match is found in the database, consider using the database's definitions instead of the recorded definitions, as they might be more accurate.
- Note 2:** For full operability of the MP-1xx/FXO gateway, it may be necessary to edit this file and add more Call Progress Tone definitions. Sample Call Progress Tones *ini* files are available in the release package.
- Note 3:** When the CPT *ini* file is complete, use the TrunkPack Downloadable Conversion utility to create a loadable CPT *dat* file. After loading this file to the gateway, repeat the automatic detection procedure discussed above, and verify that the gateway detects all four Call Progress Tones correctly.

Appendix G SNMP Traps

This section provides information on proprietary SNMP traps currently supported by the gateway. There is a separation between traps that are alarms and traps that are not (logs). Currently all have the same structure made up of the same 10 varbinds (1.3.6.1.4.1.5003.9.10.1.21.1).

G.1 Alarm Traps

The following tables provide information on alarms that are raised as a result of a generated SNMP trap. The component name (described in each of the following headings) refers to the string that is provided in the 'acBoardTrapGlobalsSource' trap varbind. To clear a generated alarm the same notification type is sent but with the severity set to 'cleared'.

G.1.1 Component: System#0

Table G-1: acBoardFatalError Alarm Trap

Alarm:	acBoardFatalError
OID:	1.3.6.1.4.1.5003.9.10.1.21.2.0.1
Default Severity	Critical
Event Type:	equipmentAlarm
Probable Cause:	underlyingResourceUnavailable (56)
Alarm Text:	Board Fatal Error: <text>
Status Changes:	
Condition:	Any fatal error
Alarm status:	Critical
<text> value:	A run-time specific string describing the fatal error
Condition:	After fatal error
Alarm status:	Status stays critical until reboot. A clear trap is not sent.
Corrective Action:	Capture the alarm information and the Syslog clause, if active. Contact your first-level support group. The support group will likely want to collect additional data from the device and perform a reset.

Table G-2: acBoardEvResettingBoard Alarm Trap

Alarm:	acBoardEvResettingBoard
OID:	1.3.6.1.4.1.5003.9.10.1.21.2.0.5
Default Severity	critical
Event Type:	equipmentAlarm
Probable Cause:	outOfService (71)
Alarm Text:	User resetting board
Status Changes:	
Condition:	When a soft reset is triggered via the Web interface or SNMP.
Alarm status:	Critical
Condition:	After raise
Alarm status:	Status stays critical until reboot. A clear trap is not sent.
Corrective Action:	A network administrator has taken action to reset the device. No corrective action is required.

Table G-3: acBoardCallResourcesAlarm Alarm Trap

Alarm:	acBoardCallResourcesAlarm
OID:	1.3.6.1.4.1.5003.9.10.1.21.2.0.8
Default Severity	Major
Event Type:	processingErrorAlarm
Probable Cause:	softwareError (46)
Alarm Text:	Call resources alarm
Status Changes:	
Condition:	Number of free channels exceeds the predefined RAI <i>high</i> threshold.
Alarm Status:	Major
Note:	To enable this alarm the RAI mechanism must be activated (EnableRAI = 1).
Condition:	Number of free channels falls below the predefined RAI <i>low</i> threshold.
Alarm Status:	Cleared

Table G-4: acBoardControllerFailureAlarm Alarm Trap

Alarm:	acBoardControllerFailureAlarm
OID:	1.3.6.1.4.1.5003.9.10.1.21.2.0.9
Default Severity	Minor
Event Type:	processingErrorAlarm
Probable Cause:	softwareError (46)
Alarm Text:	Controller failure alarm
Status Changes:	
Condition:	Proxy has not been found
Alarm Status:	Major
Additional Info:	Proxy not found. Use internal routing or Proxy lost. looking for another Proxy
Condition:	Proxy is found. The clear message includes the IP address of the located Proxy.
Alarm Status:	Cleared

Table G-5: acBoardOverloadAlarm Alarm Trap

Alarm:	acBoardOverloadAlarm
OID:	1.3.6.1.4.1.5003.9.10.1.21.2.0.11
Default Severity	Major
Event Type:	processingErrorAlarm
Probable Cause:	softwareError (46)
Alarm Text:	Board overload alarm
Status Changes:	
Condition:	An overload condition exists in one or more of the system components.
Alarm Status:	Major
Condition:	The overload condition passed
Alarm Status:	Cleared

G.1.2 Component: AlarmManager#0

Table G-6: acActiveAlarmTableOverflow Alarm Trap

Alarm:	acActiveAlarmTableOverflow
OID:	1.3.6.1.4.15003.9.10.1.21.2.0.12
Default Severity	Major
Event Type:	processingErrorAlarm
Probable Cause:	resourceAtOrNearingCapacity (43)
Alarm Text:	Active alarm table overflow
Status Changes:	
Condition:	Too many alarms to fit in the active alarm table
Alarm status:	major
Condition:	After raise
Alarm status:	Status stays major until reboot. A clear trap is not sent.
Note:	The status stays major until reboot as it denotes a possible loss of information until the next reboot. If an alarm is raised when the table is full, it is possible that the alarm is active, but does not appear in the active alarm table.
Corrective Action:	Some alarm information may have been lost, but the ability of the device to perform its basic operations has not been impacted. A reboot is the only way to completely clear a problem with the active alarm table. Contact your first-level group.

G.1.3 Component: EthernetLink#0

Table G-7: acBoardEthernetLinkAlarm Alarm Trap

Alarm:	acBoardEthernetLinkAlarm
OID:	1.3.6.1.4.1.5003.9.10.1.21.2.0.10
Default Severity	Critical
Event Type:	equipmentAlarm
Probable Cause:	underlyingResourceUnavailable (56)
Alarm Text:	Ethernet link alarm: <text>
Status Changes:	
Condition:	Fault on single interface
Alarm status:	major
<text> value:	Redundant link is down
Condition:	Fault on both interfaces
Alarm status:	critical
<text> value:	No Ethernet link
Condition:	Both interfaces are operational
Alarm status:	cleared
Corrective Action:	Ensure that both Ethernet cables are plugged into the back of the system. Inspect the system's Ethernet link lights to determine which interface is failing. Reconnect the cable or fix the network problem

G.1.4 Other Traps

The following are provided as SNMP traps and are not alarms.

Table G-8: coldStart Trap

Trap Name:	coldStart
OID:	1.3.6.1.6.3.1.1.5.1
MIB	SNMPv2-MIB
Note:	This is a trap from the standard SNMP MIB.

Table G-9: authenticationFailure Trap

Trap Name:	authenticationFailure
OID:	1.3.6.1.6.3.1.1.5.5
MIB	SNMPv2-MIB

Table G-10: acBoardEvBoardStarted Trap

Trap Name:	acBoardEvBoardStarted
OID:	1.3.6.1.4.1.5003.9.10.1.21.2.0.4
MIB	AcBoard
Severity	cleared
Event Type:	equipmentAlarm
Probable Cause:	Other(0)
Alarm Text:	Initialization Ended
Note:	This is the AudioCodes Enterprise application cold start trap.

G.1.5 Trap Varbinds

Each trap described above provides the following fields (known as 'varbinds'). Refer to the AcBoard MIB for additional details on these varbinds.

- acBoardTrapGlobalsName
- acBoardTrapGlobalsTextualDescription
- acBoardTrapGlobalsSource
- acBoardTrapGlobalsSeverity
- acBoardTrapGlobalsUniqID
- acBoardTrapGlobalsType
- acBoardTrapGlobalsProbableCause
- acBoardTrapGlobalsAdditionalInfo1
- acBoardTrapGlobalsAdditionalInfo2
- acBoardTrapGlobalsAdditionalInfo3

Note that 'acBoardTrapGlobalsName' is actually a number. The value of this varbind is 'X' minus 1, where 'X' is the last number in the trap's OID. For example, the 'name' of 'acBoardEthernetLinkAlarm' is '9'. The OID for 'acBoardEthernetLinkAlarm' is 1.3.6.1.4.1.5003.9.10.1.21.2.0.10.

Appendix H Regulatory Information

H.1 MP-11x FXS

Declaration of Conformity	
Application of Council Directives:	73/23/EEC (including amendments), 89/336/EEC (including amendments),
Standards to which Conformity is Declared:	EN55022: 1998, Class B EN55024:1998 EN61000-3-2: 1995 EN60950: 2000 (including amendments A1: 1998, A2: 1998, A14: 2000) EN61000-3-3: 1995
Manufacturer's Name:	AudioCodes Ltd.
Manufacturer's Address:	1 Hayarden Street, Airport City, Lod 70151, Israel.
Type of Equipment:	Analog VoIP System.
Model Numbers:	MP-1xx/FXS (xx- may represent 02,04,08)
I, the undersigned, hereby declare that the equipment specified above conforms to the above Directives and Standards.	
	
11 th February, 2005 Airport City, Lod, Israel	
Signature I. Zusmanovich, Compliance Engineering Manager	Date (Day/Month/Year) Location

Czech	[AudioCodes Ltd] tímto prohlašuje, že tento [MP-1xx/FXS series] je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 89/336/EEC, 73/23/EEC.
Danish	Undertegnede [AudioCodes Ltd] erklærer herved, at følgende udstyr [MP-1xx/FXS Series] overholder de væsentlige krav og øvrige relevante krav i direktiv 89/336/EEC, 73/23/EEC.
Dutch	Hierbij verklaart [AudioCodes Ltd] dat het toestel [MP-1xx/FXS Series] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 89/336/EEC, 73/23/EEC
English	Hereby, [AudioCodes Ltd], declares that this [MP-1xx/FXS Series] is in compliance with the essential requirements and other relevant provisions of Directive 89/336/EEC, 73/23/EEC.
Estonian	Käesolevaga kinnitab [AudioCodes Ltd] seadme [MP-1xx/FXS Series] vastavust direktiivi 89/336/EEC, 73/23/EEC põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Finnish	[AudioCodes Ltd] vakuuttaa täten että [MP-1xx/FXS Series] tyypinen laite on direktiivin 89/336/EEC, 73/23/EEC oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
French	Par la présente [AudioCodes Ltd] déclare que l'appareil [MP-1xx/FXS Series] est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 89/336/EEC, 73/23/EEC
German	Hiermit erkläre [AudioCodes Ltd], dass sich dieser/diese/dieses [MP-1xx/FXS Series] in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 89/336/EEC, 73/23/EEC befindet". (BMW)
Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ [AudioCodes Ltd] ΔΗΛΩΝΕΙ ΟΤΙ [MP-1xx/FXS Series] ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 89/336/EEC, 73/23/EEC
Hungarian	Alulírott, [AudioCodes Ltd] nyilatkozom, hogy a [MP-1xx/FXS Series] megfelel a vonatkozó alapvető követelményeknek és az 89/336/EEC, 73/23/EEC irányelv egyéb előírásainak
Icelandic	æki þetta er í samræmi við tilskipun Evrópusambandsins 89/336/EEC, 73/23/EEC
Italian	Con la presente [AudioCodes Ltd] dichiara che questo (MP-1xx/FXS Series) è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 89/336/EEC, 73/23/EEC.
Latvian	Ar šo [AudioCodes Ltd] deklarē, ka [MP-1xx/FXS Series] atbilst Direktīvas 89/336/EEC, 73/23/EEC būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lithuanian	[AudioCodes Ltd] deklaruoja, kad irenginys [MP-1xx/FXS Series] tenkina 89/336/EEC, 73/23/EEC Direktyvos esminius reikalavimus ir kitas sios direktyvos nuostatas
Maltese	Hawn hekk, [AudioCodes Ltd], jiddikjara li dan [MP-1xx/FXS Series] jikkonforma mal-higiijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 89/336/EEC, 73/23/EEC
Norwegian	Dette produktet er i samhörighet med det Europeiske Direktiv 89/336/EEC, 73/23/EEC
Polish	[AudioCodes Ltd], deklarujemy z pełną odpowiedzialnością, że wyrób [MP-1xx/FXS Series] spełnia podstawowe wymagania i odpowiada warunkom zawartym w dyrektywie 89/336/EEC, 73/23/EEC
Portuguese	[AudioCodes Ltd] declara que este [MP-1xx/FXS Series] está conforme com os requisitos essenciais e outras disposições da Directiva 89/336/EEC, 73/23/EEC.
Slovak	[AudioCodes Ltd] týmto vyhlasuje, že [MP-1xx/FXS Series] spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 89/336/EEC, 73/23/EEC.
Slovene	Šiuo [AudioCodes Ltd] deklarujo, kad šis [MP-1xx/FXS Series] attinka esminius reikalavimus ir kitas 89/336/EEC, 73/23/EEC Direktyvos nuostatas.
Spanish	Por medio de la presente [AudioCodes Ltd] declara que el (MP-1xx/FXS Series) cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 89/336/EEC, 73/23/EEC
Swedish	Härmed intygar [AudioCodes Ltd] att denna [MP-1xx/FXS Series] står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 89/336/EEC, 73/23/EEC.

Safety Notice

Installation and service of this card must only be performed by authorized, qualified service personnel.
The protective earth terminal on the back of the MP-1xx must be permanently connected to protective earth.

Telecommunication Safety

The safety status of each port on the gateway is declared and detailed in the table below:

Ports	Safety Status
Ethernet (100 Base-TX)	SELV
FXS (ODP P/N's)	TNV-3
FXS	TNV-2

- TNV-3: Circuit whose normal operating voltages exceeds the limits for an SELV circuit under normal operating conditions and on which over voltages from Telecommunication Networks are possible
- TNV-2: Circuit whose normal operating voltages exceeds the limits for an SELV circuit under normal operating conditions and is not subjected to over voltages from Telecommunication Networks
- SELV: Safety extra low voltage circuit.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

H.2 MP-11x FXO

Declaration of Conformity

Application of Council Directives:

73/23/EEC (including amendments),
89/336/EEC (including amendments),
1999/5/EC Annex-II of the Directive

Standards to which Conformity is Declared:

EN55022: 1998, Class B
EN55024:1998
EN61000-3-2: 1995
(including amendments A1: 1998, A2: 1998, A14: 2000)
EN61000-3-3: 1995
EN60950: 2000
TBR-21: 1998

Manufacturer's Name:

AudioCodes Ltd.

Manufacturer's Address:

1 Hayarden Street, Airport City, Lod 70151, Israel.

Type of Equipment:

Analog VoIP System.

Model Numbers:

MP-1xx/FXO

(xx- may represent 02, 04, 08)

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directives and Standards.



Signature

11th February 2005

Date (Day/Month/Year)

Airport City, Lod, Israel

Location

I. Zusmanovich, Compliance Engineering Manager

Czech	[AudioCodes Ltd] tímto prohlašuje, že tento [MP-1xx/FXO] je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES."
Danish	Undertegnede [AudioCodes Ltd] erklærer herved, at følgende udstyr [MP-1xx/FXO] overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF
Dutch	Hierbij verklaart [AudioCodes Ltd] dat het toestel [MP-1xx/FXO] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG
English	Hereby, [AudioCodes Ltd], declares that this [MP-1xx/FXO] is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Estonian	Käesolevaga kinnitab [AudioCodes Ltd] seadme [MP-1xx/FXO] vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Finnish	[AudioCodes Ltd] vakuuttaa täten että [MP-1xx/FXO] tyypinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
French	Par la présente [AudioCodes Ltd] déclare que l'appareil [MP-1xx/FXO] est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE
German	Hiermit erklärt [AudioCodes Ltd], dass sich dieser/diese/dieses [MP-1xx/FXO] in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet". (BMW)
Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ [AudioCodes Ltd] ΔΗΛΩΝΕΙ ΟΤΙ [MP-1xx/FXO] ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ
Hungarian	Alulírott, [AudioCodes Ltd] nyilatkozom, hogy a [MP-1xx/FXO] megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak
Icelandic	æki þetta er í samræmi við tilskipun Evrópusambandsins 1999/5
Italian	Con la presente [AudioCodes Ltd] dichiara che questo (MP-1xx/FXO) è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latvian	Ar šo [AudioCodes Ltd] deklarē, ka [MP-1xx/FXO] atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lithuanian	[AudioCodes Ltd] deklaruoja, kad irenginys [MP-1xx/FXO] tenkina 1999/5/EB Direktivos esminius reikalavimus ir kitas sios direktyvos nuostatas
Maltese	Hawnhekk, [AudioCodes Ltd], jiddikjara li dan [MP-1xx/FXO] jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 1999/5/EC
Norwegian	Dette produktet er i samhörighet med det Europeiske Direktiv 1999/5
Polish	[AudioCodes Ltd], deklarujemy z pełną odpowiedzialnością, że wyrób [MP-1xx/FXO] spełnia podstawowe wymagania i odpowiada warunkom zawartym w dyrektywie 1999/5/EC
Portuguese	[AudioCodes Ltd] declara que este [MP-1xx/FXO] está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Slovak	[AudioCodes Ltd] týmto vyhlasuje, že [MP-1xx/FXO] spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Slovene	Šiuo [AudioCodes Ltd] deklaruoja, kad šis [MP-1xx/FXO] atitinka esminius reikalavimus ir kitas 1999/5/EB Direktivos nuostatas.
Spanish	Por medio de la presente [AudioCodes Ltd] declara que el (MP-1xx/FXO) cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE
Swedish	Härmed intygar [AudioCodes Ltd] att denna [MP-1xx/FXO] står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Safety Notice

Installation and service of this unit must only be performed by authorized, qualified service personnel.

The protective earth terminal on the back of the MP-1xx must be permanently connected to protective earth.

Industry Canada Notice

This equipment meets the applicable Industry Canada Terminal Equipment technical specifications. This is confirmed by the registration numbers. The abbreviation, IC, before the registration number signifies that registration was performed based on a declaration of conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

Network Compatibility

The products support the Telecom networks in EU that comply with TBR21.

Telecommunication Safety

The safety status of each port is declared and detailed in the table below:

Ports	Safety Status
Ethernet (100 Base-TX)	SELV
FXO	TNV-3

TNV-3: Circuit whose normal operating voltages exceeds the limits for an SELV circuit under normal operating conditions and on which over voltages from Telecommunication Networks are possible.

SELV: Safety extra low voltage circuit.

MP-1xx/FXO Notice

The MP-1xx FXO Output Tones and DTMF level should not exceed -9 dBm (AudioCodes setting #23) in order to comply with FCC 68, TIA/EIA/IS-968 and TBR-21.

The maximum allowed gain between any 2 ports connected to the PSTN should be set to 0 dB in order to comply with FCC 68, TIA/EIA/IS-968 Signal power limitation

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

H.3 MP-124

Declaration of Conformity

Application of Council Directives:

73/23/EEC (including amendments),
89/336/EEC (including amendments),

Standards to which Conformity is Declared:

EN55022: 1998, Class A
EN55024:1998
EN61000-3-2: 1995
(including amendments A1: 1998, A2: 1998, A14: 2000)
EN61000-3-3: 1995
EN60950: 1992 Including amendments 1,2,3,4 and 11

Manufacturer's Name :

AudioCodes Ltd.

Manufacturer's Address:

1 Hayarden Street, Airport City, Lod 70151, Israel.

Type of Equipment:

Analog VoIP System.

Model Numbers:

MP-124/FXS

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directives and Standards.



11th February, 2005 Airport City, Lod, Israel

Signature

I. Zusmanovich, Compliance Engineering Manager

Date (Day/Month/Year) Location

Czech	[AudioCodes Ltd] tímto prohlašuje, že tento [MP-124] je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 89/336/EEC, 73/23/EEC.
Danish	Undertegnede [AudioCodes Ltd] erklærer herved, at følgende udstyr [MP-124] overholder de væsentlige krav og øvrige relevante krav i direktiv 89/336/EEC, 73/23/EEC.
Dutch	Hierbij verklaart [AudioCodes Ltd] dat het toestel [MP-124] in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 89/336/EEC, 73/23/EEC
English	Hereby, [AudioCodes Ltd], declares that this [MP-124] is in compliance with the essential requirements and other relevant provisions of Directive 89/336/EEC, 73/23/EEC.
Estonian	Käesolevaga kinnitab [AudioCodes Ltd] seadme [MP-124] vastavust direktiivi 89/336/EEC, 73/23/EEC põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Finnish	[AudioCodes Ltd] vakuuttaa täten että [MP-124] tyypinen laite on direktiivin 89/336/EEC, 73/23/EEC oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
French	Par la présente [AudioCodes Ltd] déclare que l'appareil [MP-124] est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 89/336/EEC, 73/23/EEC
German	Hiermit erkläre [AudioCodes Ltd], dass sich dieser/diese/dieses [MP-124] in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 89/336/EEC, 73/23/EEC befindet". (BMW)
Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ [AudioCodes Ltd] ΔΗΛΩΝΕΙ ΟΤΙ [MP-124] ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 89/336/EEC, 73/23/EEC

Hungarian	Alulírott, [AudioCodes Ltd] nyilatkozom, hogy a [MP-124] megfelel a vonatkozó alapvető követelményeknek és az 89/336/EEC, 73/23/EEC irányelv egyéb előírásainak
Icelandic	æki þetta er í samræmi við tilskipun Evrópusambandsins 89/336/EEC, 73/23/EEC
Italian	Con la presente [AudioCodes Ltd] dichiara che questo (MP-124) è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 89/336/EEC, 73/23/EEC.
Latvian	Ar šo [AudioCodes Ltd] deklarē, ka [MP-124] atbilst Direktīvas 89/336/EEC, 73/23/EEC būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lithuanian	[AudioCodes Ltd] deklaruoja, kad irenginys [MP-124] tenkina 89/336/EEC, 73/23/EEC Direktyvos esminius reikalavimus ir kitas šios direktyvos nuostatas
Maltese	Hawnhekk, [AudioCodes Ltd], jiddikjara li dan [MP-124] jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva 89/336/EEC, 73/23/EEC
Norwegian	Dette produktet er i samhörighet med det Europeiske Direktiv 89/336/EEC, 73/23/EEC
Polish	[AudioCodes Ltd], deklarujemy z pełną odpowiedzialnością, że wyrób [MP-124] spełnia podstawowe wymagania i odpowiada warunkom zawartym w dyrektywie 89/336/EEC, 73/23/EEC
Portuguese	[AudioCodes Ltd] declara que este [MP-124] está conforme com os requisitos essenciais e outras disposições da Directiva 89/336/EEC, 73/23/EEC.
Slovak	[AudioCodes Ltd] týmto vyhlasuje, že [MP-124 Series] spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 89/336/EEC, 73/23/EEC.
Slovene	Šiuo [AudioCodes Ltd] deklaruoja, kad šis [MP-124 Series] atitinka esminius reikalavimus ir kitas 89/336/EEC, 73/23/EEC Direktyvos nuostatas.
Spanish	Por medio de la presente [AudioCodes Ltd] declara que el (MP-124 Series) cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 89/336/EEC, 73/23/EEC
Swedish	Härmed intygar [AudioCodes Ltd] att denna [MP-124 Series] står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 89/336/EEC, 73/23/EEC.

Safety Notice

Installation and service of this unit must only be performed by authorized, qualified service personnel.

The protective earth terminal on the back of the MP-124 must be permanently connected to protective earth.

Telecommunication Safety

The safety status of each port on the gateway is declared and detailed in the table below:

Ports	Safety Status
Ethernet (100 Base-TX)	SELV
FXS (ODP P/N's)	TNV-3
FXS	TNV-2

TNV-3: Circuit whose normal operating voltages exceeds the limits for an SELV circuit under normal operating conditions and on which over voltages from Telecommunication Networks are possible

TNV-2: Circuit whose normal operating voltages exceeds the limits for an SELV circuit under normal operating conditions and is not subjected to over voltages from Telecommunication Networks

SELV: Safety extra low voltage circuit.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



AudioCodes Offices

International Headquarters

AudioCodes Ltd, 1 Hayarden Street, Airport City

Lod 70151, Israel.

Tel: +972-3-976 4000

Fax: +972-3-976 4040

USA Headquarters

AudioCodes Inc, 2890 Zanker Road, Suite # 200

San Jose, CA 95134

Tel: +1-408-577-0488

Fax: +1-408-577-0492

AudioCodes Offices Worldwide

Beijing, Boston (MA), Chicago (IL), London

Mexico City, Paris, Raleigh (NC), Somerset (NJ), Tokyo

info@audiocodes.com

www.audiocodes.com

